

## Simple Deluxe Electric Pressure Cooker, Non-Stick

# Simple Deluxe 6-Quart Electric Pressure Cooker User Manual

Model: Electric Pressure Cooker, Non-Stick

### IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Do not open until unit has cooled and internal pressure has been released.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve for clogging before use.

### PRODUCT OVERVIEW

---

The Simple Deluxe Electric Pressure Cooker is a versatile 12-in-1 multi-cooker designed to simplify your cooking process. It features a durable stainless steel build and a non-stick inner pot.

## Components

The package includes the Electric Pressure Cooker unit, an inner pot, a cooking stand, a measuring cup, a rice scoop, and a user manual.



Image: The Simple Deluxe Electric Pressure Cooker shown with its main unit, inner pot, and included accessories like a cooking stand, measuring cup, and rice scoop.

## Control Panel

The control panel features a digital display and various pre-set function buttons for different cooking modes.

# 12-IN-1 MENUS TO CHOOSE



Image: Close-up of the pressure cooker's control panel, highlighting the 12-in-1 menu options including Poultry, Steam, Rice, Porridge, Soup, Bean Chili, Slow Cook, Cake, Meat Stew, Multigrain, Saute, and Yogurt.

## BEFORE FIRST USE

Before using your new pressure cooker, please follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels.
2. **Clean:** Wash the inner pot, lid, and all accessories (measuring cup, rice scoop, cooking stand) with warm soapy water. Rinse thoroughly and dry completely. The inner pot and lid are dishwasher safe.
3. **Wipe Down:** Wipe the exterior of the main unit with a clean, damp cloth. Never immerse the main unit in water.
4. **Familiarize:** Read through this manual to understand all functions and safety features.

## SETUP

Proper setup ensures safe and efficient operation.

1. **Placement:** Place the pressure cooker on a stable, level, heat-resistant surface away from heat sources and flammable materials. Ensure adequate space around the unit for ventilation.
2. **Insert Inner Pot:** Place the non-stick inner pot into the main unit. Ensure it is seated correctly and

makes full contact with the heating element.

3. **Attach Lid:** Place the lid onto the cooker, aligning the arrow on the lid with the arrow on the base. Rotate the lid clockwise until it locks into place. The lid handle should be aligned with the main unit's handles.
4. **Seal:** Ensure the sealing ring is properly installed inside the lid and the float valve is clean and free of debris.

## OPERATING INSTRUCTIONS

---

This section details how to use your Simple Deluxe Electric Pressure Cooker for various cooking tasks.

### Basic Pressure Cooking

1. Add ingredients and liquid to the inner pot. Do not exceed the MAX fill line.
2. Secure the lid as described in the Setup section. Ensure the steam release handle is in the 'Sealing' position.
3. Plug the power cord into a grounded electrical outlet. The display will show '----'.
4. Select a desired cooking function (e.g., 'Meat Stew', 'Poultry'). The default cooking time will appear.
5. Adjust the cooking time using the '+' and '-' buttons if needed.
6. Press the 'Start' button. The cooker will begin preheating. Once pressure is reached, the cooking timer will begin to count down.
7. When cooking is complete, the cooker will beep and automatically switch to 'Keep Warm' mode.
8. **Pressure Release:** Allow natural pressure release or use the quick release method by carefully turning the steam release handle to the 'Venting' position. **Caution:** Steam is hot. Keep hands and face clear.

# SAFE STEAM RELEASE

Ergonomic design helps to release pressure safely and easily



Image: Top view of the pressure cooker lid, showing the steam release valve and safety warnings for safe pressure release.

## Pre-set Functions

The cooker offers 12 pre-set functions for various dishes:

- **Poultry:** For cooking chicken, turkey, and other poultry.
- **Steam:** Ideal for steaming vegetables, fish, and dumplings.
- **Rice:** Perfectly cooks various types of rice.
- **Porridge:** For creamy porridges and oatmeal.
- **Soup:** Prepares delicious soups and broths.
- **Bean Chili:** Specifically designed for beans and chili recipes.
- **Slow Cook:** Functions as a slow cooker for tender results over time.
- **Cake:** Bake cakes and other desserts.
- **Meat Stew:** For tender meat stews and pot roasts.
- **Multigrain:** Optimized for cooking various multigrains.
- **Saute:** Allows browning and sautéing ingredients before pressure cooking.
- **Yogurt:** For making homemade yogurt.



Image: The pressure cooker with a visual representation of various dishes it can prepare, including soup, cake, meat, porridge, poultry, multigrain, yogurt, bean, slow cook, rice, and sautéed dishes.

### Delay Start Function

The 'Delay Start' function allows you to program the cooker to start cooking at a later time.

1. Add ingredients and secure the lid.
2. Select your desired cooking function and adjust time.
3. Press the 'Delay Start' button. Use '+' and '-' to set the delay time (in hours).
4. Press 'Start' to confirm. The cooker will count down the delay time before starting the cooking process.

# MULTI-FUNCTIONAL DISHES FOR ALL TYPES OF FOOD



Image: The pressure cooker on a kitchen counter with various cooked meals, illustrating the flexible 24-hour pre-setting feature for convenient cooking.

## Keep Warm Function

After cooking is complete, the cooker automatically switches to 'Keep Warm' mode to maintain food temperature. You can also manually select 'Keep Warm' to warm food.

## CARE AND MAINTENANCE

Regular cleaning and maintenance will extend the life of your pressure cooker.

### Cleaning

1. Always unplug the cooker and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot is dishwasher safe. For hand washing, use warm soapy water and a non-abrasive sponge.
3. **Lid:** The lid is dishwasher safe. Remove the sealing ring and float valve for thorough cleaning. Wash with warm soapy water, rinse, and dry. Ensure the steam release valve is clear.
4. **Main Unit:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Accessories:** All accessories (cooking stand, measuring cup, rice scoop) are dishwasher safe or can

be hand washed.

## DISHWASHER-SAFE



Image: The non-stick inner pot and the lid of the pressure cooker placed in a dishwasher rack, demonstrating their dishwasher-safe design.

### Storage

Store the cleaned and dried pressure cooker in a cool, dry place. You may store the lid inverted on the inner pot to prevent odors and allow air circulation.

### TROUBLESHOOTING

If you encounter issues with your pressure cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker not building pressure	Lid not properly sealed; Sealing ring not installed correctly; Steam release handle in 'Venting' position; Insufficient liquid.	Ensure lid is locked; Check sealing ring placement; Turn steam release handle to 'Sealing'; Add more liquid.

Problem	Possible Cause	Solution
Steam leaking from lid	Sealing ring damaged or dirty; Food debris on rim; Lid not properly closed.	Inspect and clean/replace sealing ring; Clean lid and inner pot rim; Re-secure lid.
Food not cooked thoroughly	Insufficient cooking time; Not enough liquid; Cooker did not reach full pressure.	Increase cooking time; Ensure adequate liquid; Verify pressure build-up.
Error code on display	Specific internal issue.	Refer to the specific error code in the full manual or contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Simple Deluxe
Model Number	Electric Pressure Cooker, Non-Stick
Capacity	6 Quarts
Material	Stainless Steel
Color	Silver
Product Dimensions	12.48"D x 13.22"W x 12.8"H
Wattage	1000 watts
Voltage	120 Volts
Item Weight	10.8 Pounds
Control Method	Touch
Operation Mode	Automatic
Dishwasher Safe Parts	Inner Pot, Lid, Accessories
UPC	198401091069

## PACKAGE CONTENTS

The following items are included in your Simple Deluxe Electric Pressure Cooker package:

- Electric Pressure Cooker Unit x 1
- Inner Pot x 1
- Cooking Stand x 1
- Measuring Cup x 1
- Rice Scoop x 1
- User Manual x 1

# LARGE 6 QUART CAPACITY



Image: A flat lay of all items included in the package: the main pressure cooker unit, inner pot, cooking stand, measuring cup, rice scoop, and user manual, arranged on a table with other food items.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Simple Deluxe website. Keep your purchase receipt for warranty claims.