

[Manuals.plus](#) /

› [Ruitoo](#) /

› Ruitoo RT6 Electric Scooter User Manual

Ruitoo RT6

Ruitoo RT6 Electric Scooter User Manual

Model: RT6 | Brand: Ruitoo

1. INTRODUCTION

Welcome to the Ruitoo RT6 Electric Scooter user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new electric scooter. The RT6 is designed for adults, featuring a powerful 1000W brushless motor, a top speed of 30Mph, and a maximum range of 34 miles, making it ideal for commuting and adventures. It includes advanced safety features like dual brakes, turn signals, and a smart display.



Figure 1.1: The Ruitoo RT6 Electric Scooter, showcasing its design and front light.

2. IMPORTANT SAFETY INFORMATION

Your safety is paramount. Please read and understand all safety warnings and instructions before operating the scooter. Failure to do so may result in serious injury or damage to the scooter.

- Always wear a helmet and appropriate protective gear (knee pads, elbow pads) when riding.
- Check the brakes, tires, and battery level before each ride.
- Obey all local traffic laws and regulations.
- Do not ride in heavy rain, snow, or icy conditions.

- Avoid riding on slippery surfaces, loose gravel, or uneven terrain at high speeds.
- Do not perform stunts or sudden maneuvers.
- The scooter is designed for one rider only. Do not carry passengers.
- Keep hands and feet away from moving parts.
- Ensure the scooter is fully charged before long rides.

The RT6 is equipped with a dual braking system and integrated lighting (front white/yellow, rear red lights, turn signals) for enhanced visibility and safety.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Ruitoo RT6 Electric Scooter
- Power Adapter/Charger
- User Manual (this document)
- Toolkit

4. SETUP GUIDE

4.1 Unfolding the Scooter

To unfold your RT6 scooter:

1. Place the scooter on a flat surface.
2. Locate the folding mechanism latch near the base of the handlebar stem.
3. Release the latch and carefully lift the handlebar stem until it locks into the upright position. Ensure it clicks securely.
4. If applicable, unfold the seat post and secure the seat.

CONCEPTION PLIABLE



Figure 4.1: The RT6 scooter in its folded state, demonstrating its portability for storage or transport.

4.2 Handlebar and Seat Adjustment

The RT6 features an adjustable handlebar height and a removable/adjustable seat for a personalized riding experience.

- **Handlebar:** Use the quick-release clamp on the handlebar stem to adjust the height. Ensure it is securely fastened before riding.
- **Seat:** The seat height can be adjusted using the clamp on the seat post. Tighten firmly after adjustment. The seat can also be removed if preferred.



Figure 4.2: The adjustable height design of the RT6, accommodating riders of various statures.

4.3 Charging the Battery

Before your first ride, fully charge the scooter's battery.

1. Locate the charging port on the scooter (usually near the battery compartment).
2. Ensure the scooter is powered off.
3. Connect the charger to the charging port, then plug the charger into a standard wall outlet.
4. The indicator light on the charger will change (e.g., red to green) when charging is complete.
5. Charging time is approximately 6 hours for a full charge.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press and hold the power button on the handlebar display to turn the scooter on or off.

5.2 Smart Display Overview

The intuitive LCD screen provides real-time riding data:

- **Battery Level:** Indicates remaining battery charge.
- **Speed Display:** Shows current speed.
- **Gear Position:** Displays the selected speed mode (Low/Medium/High).
- **Headlight Symbols:** Indicates headlight status.

Smart LED Display



Battery Level



Speed Display



Gear Position



Headlight Symbols



Figure 5.1: The Smart LED Display and handlebar controls, including lighting control, disc brake, speed control, and horn.

5.3 Speed Modes

The RT6 offers 3 adjustable speed modes (Low, Medium, High) to suit different riding conditions and preferences. Use the speed mode button on the handlebar to cycle through them.

5.4 Braking

The scooter is equipped with disc brakes on both wheels. Apply both brake levers simultaneously for effective and controlled stopping. Practice braking in a safe, open area before riding in traffic.

5.5 Riding Tips

The RT6 features large 10-inch all-terrain tires and a front and rear hydraulic damping system, providing a smooth and stable ride across various surfaces, including soil and flat roads. It can also handle slopes up to 30 degrees.



Figure 5.2: The RT6 performing well on both paved and unpaved surfaces, highlighting its all-terrain capability.



Figure 5.3: The RT6's ability to ascend inclines, showcasing its powerful motor.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Tires:** Check tire pressure regularly. Maintain recommended PSI for optimal performance and safety.
- **Brakes:** Inspect brake pads and cables periodically. Adjust or replace as needed.
- **Cleaning:** Wipe down the scooter with a damp cloth. Do not use high-pressure water or immerse the scooter in water.
- **Battery Care:** Store the scooter in a cool, dry place. If storing for extended periods, charge the battery to about 50-70% every 2-3 months to prevent deep discharge.
- **Fasteners:** Periodically check all screws and bolts to ensure they are tight.



Figure 6.1: Detail of the front hydraulic shock absorber, which contributes to a smooth ride.

7. TROUBLESHOOTING

If you encounter issues with your RT6 scooter, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Loose connection; Power button malfunction	Charge the battery; Check all cable connections; Contact customer support
Reduced range/speed	Low tire pressure; Overloaded; Riding uphill frequently; Battery degradation	Inflate tires to recommended PSI; Reduce load; Ride on flatter terrain; Consider battery replacement if old
Brakes feel weak	Brake pads worn; Cable loose; Disc dirty	Inspect and replace brake pads; Adjust brake cable tension; Clean brake disc with alcohol
Unusual noises during ride	Loose components; Debris in wheels; Motor issue	Check all fasteners; Inspect wheels for foreign objects; Contact customer support if motor noise persists

If the problem persists after attempting these solutions, please contact Ruitoo customer support.

8. TECHNICAL SPECIFICATIONS

Below are the key specifications for the Ruitoo RT6 Electric Scooter:

Feature	Specification
Model Name	RT6
Motor Power	1000W Brushless Motor
Top Speed	Up to 30 Mph (48 km/h)
Max Range	34 Miles (50-55 km) per charge
Battery	48V/18.2Ah Lithium-ion
Charging Time	Approx. 6 hours
Tire Size	10 Inches (All-terrain pneumatic)
Weight Limit	264 Pounds (120 KG)
Item Weight	24.3 Kilograms
Product Dimensions (LxWxH)	47" x 23.6" x 47" (119.4 x 59.9 x 119.4 cm)
Brake Style	Dual Disc Braking (Front & Rear)
Suspension	Front Hydraulic & Rear Spring Shock Absorbers
Special Features	Adjustable Handlebar Height, Foldable, Seat, Wide Platform, Smart Display, Turn Signals



Figure 8.1: Key performance specifications of the RT6, including motor, battery, and range.

9. WARRANTY AND CUSTOMER SUPPORT

The Ruitoo RT6 Electric Scooter comes with a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your scooter, please contact Ruitoo customer support through the retailer where you purchased the product or visit the official Ruitoo website for contact information.

Please have your purchase receipt and scooter model number (RT6) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the recommended tire pressure for the Ruitoo RT6 Electric Scooter?

The Ruitoo RT6 Electric Scooter manual emphasizes the importance of maintaining the correct tire pressure for safety and optimal performance, but it does not specify a exact PSI (pounds per square inch) value in...

[Read full answer](#)

How and where do I order replacement parts for the Ruitoo RT6, and what causes the bike to lose display and power sporadically during riding?

For the Ruitoo RT6 electric scooter, sporadic loss of display and power during riding is often caused by the following issues: Loose Cable Connections: Vibrations during riding can loosen the wiring between the battery, controller,...

[Read full answer](#)