



Manuals.plus /

› KOKEBREN /

› KOKEBREN 70-inch Fireplace TV Stand Instruction Manual

KOKEBREN YH_PHK_34H9DHBA_6M

KOKEBREN 70-inch Fireplace TV Stand Instruction Manual

Model: YH_PHK_34H9DHBA_6M

1. INTRODUCTION

Thank you for choosing the KOKEBREN 70-inch Fireplace TV Stand. This elegant and stylish entertainment center is designed to accommodate TVs up to 80 inches, featuring a high-gloss black finish and an integrated 36-inch electric fireplace. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



Image: The KOKEBREN 70-inch Fireplace TV Stand, showcasing its sleek black design and integrated electric fireplace, positioned in a modern living room setting.

2. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Electrical Safety:** Ensure the fireplace is connected to a properly grounded outlet. Do not overload electrical circuits. Keep power cords away from heated surfaces.
- **Placement:** Position the TV stand on a flat, stable surface. Avoid placing it near flammable materials or in areas with high humidity.
- **Ventilation:** Do not block the air vents of the electric fireplace. Ensure adequate clearance around the unit for proper heat dissipation.
- **Assembly:** Follow assembly instructions precisely. Do not use power tools for assembly, as this can damage the material. Two people are recommended for assembly.
- **Anti-Tip Device:** Always install the included anti-tip device to prevent accidental tipping, especially in households with children or pets.
- **Children and Pets:** Keep children and pets away from the fireplace heater when it is operating. The

glass surface can become hot.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- TV Stand Panels (various sizes)
- 36-inch Electric Fireplace Insert
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Remote Control for Fireplace
- Anti-Tip Device
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly is straightforward, but attention to detail is crucial. It is highly recommended to have two people for assembly, which typically takes about 1.5 hours. Avoid using power tools as they can easily damage the wood material.

4.1 Unpacking and Preparation

- Clear a spacious area for assembly.
- Carefully remove all components from the packaging.
- Identify and separate all hardware.

4.2 Assembly Steps

Refer to the detailed installation instructions included in your package for step-by-step diagrams. Key assembly points include:

- Assembling the base and side panels.
- Installing the central support and shelves.
- Mounting the top panel.
- Installing the two spacious storage cabinets with hinged doors.
- Integrating the 36-inch electric fireplace insert into the designated opening.
- Attaching the anti-tip device to the TV stand and the wall.



Image: A diagram illustrating the overall dimensions of the TV stand (70" wide, 22.8" high, 13.8" deep) and the 36" fireplace insert, along with maximum TV size (80").

AMPLE STORAGE SPACE

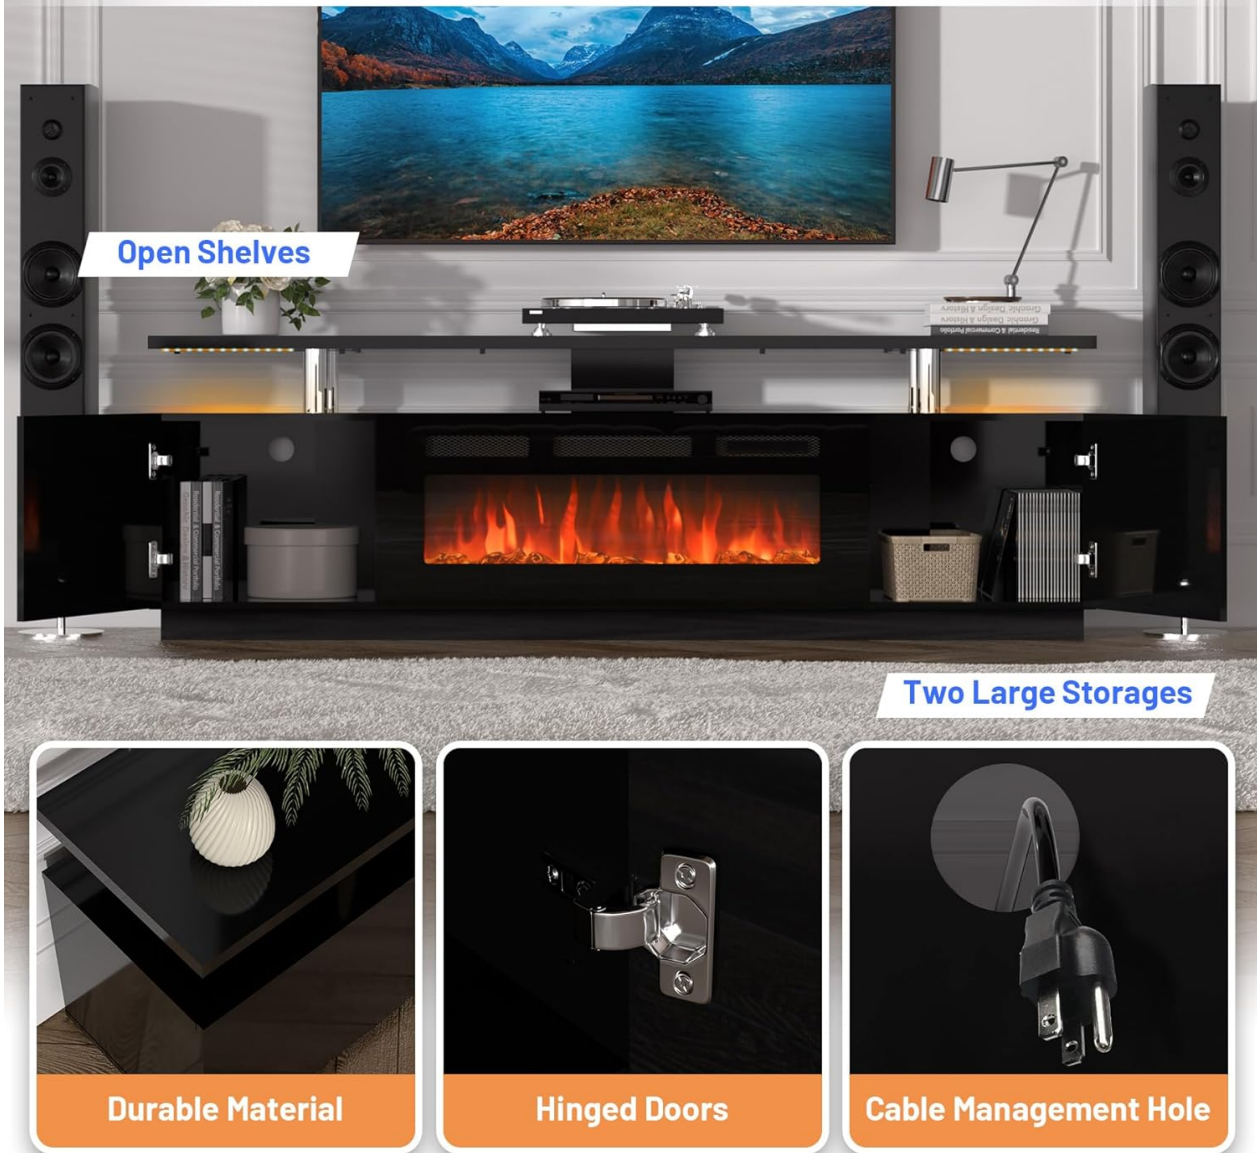


Image: This image highlights the versatile storage options of the TV stand, featuring three open shelves and two large cabinets with hinged doors, along with details on durable material, hinged doors, and cable management holes.

5. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The electric fireplace offers various flame and LED light colors, adjustable brightness, and heating functions. It can be controlled via the integrated buttons or the included remote control.

5.1 Fireplace Features

- **12 Flame Colors:** Choose from a spectrum of realistic flame colors to match your mood or decor.
- **12 LED Light Colors:** The ember bed and surrounding LED lights offer dynamic color options.
- **Adjustable Brightness:** Customize the intensity of the flames and LED lights.
- **Heating Function:** The 1400-watt heater provides 5000 BTU per hour, capable of heating an area up to 400 square feet.
- **Timer Function:** Set the fireplace to operate for a specific duration (0-8 hours).
- **Temperature Control:** Adjust the desired room temperature (62°F-82°F).

MODERN FIREPLACE TV STAND FOR LIVING ROOM



Image: A detailed diagram illustrating the functions of the fireplace's control panel and remote control, including buttons for Timer, Temperature, Heater, Switch (ON/OFF), Flame Color, and Dimmer (Brightness L1-L5).



Image: The KOKEBREN Fireplace TV Stand displaying a vibrant blue flame effect, demonstrating one of the 12 available flame colors.



Image: A visual representation of the 12 ember bed and dynamic cycle mode colors available for the electric fireplace, showcasing various hues from warm oranges to cool blues and greens.

DUAL CONTROL



Image: This graphic displays 12 realistic flame colors, along with icons indicating key features such as temperature control, timer setting, overheat protection, and ETL certification.

5.2 Using the Remote Control

The remote control allows convenient adjustment of all fireplace functions from a distance. Ensure the remote has working batteries and is pointed towards the fireplace sensor.

- **Power Button:** Turns the fireplace ON/OFF.
- **Flame Color Button:** Cycles through the 12 flame color options.
- **LED Light Button:** Cycles through the 12 LED light color options for the ember bed.
- **Brightness Button:** Adjusts the brightness level of the flames and LED lights (L1-L5).
- **Heater Button:** Activates or deactivates the heating function.
- **Temperature Up/Down:** Adjusts the desired room temperature.
- **Timer Button:** Sets the automatic shut-off timer.

6. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your TV stand and electric fireplace.

- **Cleaning the Stand:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the high-gloss finish.
- **Cleaning the Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, dry cloth to clean the glass and exterior surfaces. Do not spray liquids directly onto the unit.
- **Ventilation:** Periodically check that the air vents on the fireplace are free from dust and obstructions.
- **Cable Management:** Utilize the integrated cable management holes to keep wires organized and prevent clutter.



Image: This image provides close-up views of key features: the additional button control on the fireplace (keeping the front glass cool), mirror craftsmanship for a streamlined appearance, cable management holes for organization, and the luxurious high-gloss finish with superior wood texture.

7. TROUBLESHOOTING

If you encounter issues with your KOKEBREN Fireplace TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power switch off, remote batteries dead.	Check power outlet, ensure main power switch is ON, replace remote batteries.
Flames or LED lights are dim.	Brightness setting is low.	Increase brightness using the remote or control panel. Note that perceived brightness can vary based on room lighting.
Heater is not producing heat.	Heater function off, temperature setting too low, air vents blocked.	Activate heater function, increase desired temperature, ensure vents are clear.
Remote control not working.	Dead batteries, obstruction, out of range.	Replace batteries, remove obstructions, ensure you are within range and pointing at the sensor.
Unit wobbles after assembly.	Loose connections, uneven floor.	Check and tighten all screws. Ensure the stand is on a level surface. Install anti-tip device.

8. SPECIFICATIONS

- **Brand:** KOKEBREN
- **Model Name:** YH_PHK_34H9DHBA_6M
- **Material:** Wood
- **Color:** Black
- **Product Dimensions:** 70 x 13.8 x 22.8 inches (L x W x H)
- **Fireplace Size:** 36 inches
- **Item Weight:** 125 Pounds
- **Included Components:** Fireplace
- **Heating Power:** 1400 Watts
- **Heating Capacity:** Up to 5000 BTU/hour, heats up to 400 sq ft
- **Flame & LED Colors:** 12 options each
- **Control:** Remote control and integrated buttons
- **UPC:** 199641506368

9. WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your KOKEBREN Fireplace TV Stand, please refer to your purchase documentation for specific warranty details or contact the retailer where the product was purchased. Most products come with a 30-day return policy. For direct support, please reach out to KOKEBREN customer service.

You may find additional support resources or contact information on the official KOKEBREN website or through your Amazon order details.

