

[Manuals.plus](#) /

› [ZOVIMAX](#) /

› ZOVIMAX X7 MAX Bone Conduction Headphones User Manual

ZOVIMAX X7 MAX

ZOVIMAX X7 MAX Bone Conduction Headphones User Manual

Model: X7 MAX

INTRODUCTION

Thank you for choosing the ZOVIMAX X7 MAX Bone Conduction Headphones. These open-ear headphones are designed for comfort and performance, featuring IPX8 waterproofing, Bluetooth 6.0 connectivity, and an integrated MP3 player. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and longevity.

PACKAGE CONTENTS

Please check the package for the following items:

- ZOVIMAX X7 MAX Bone Conduction Headphones
- User Manual (this document)
- Adjustable Cord
- Professional Rapid Charging Cable

Packaging and Size



 
Packaging box



Instruction manual



Adjustable cord



Charging cable



Weight and Dimensions



Image: Contents of the ZOVIMAX X7 MAX package, including the headphones, user manual, adjustable cord, and charging cable.

PRODUCT OVERVIEW

The ZOVIMAX X7 MAX headphones feature an ergonomic design with optimized physical buttons for easy control. The device includes wind-resistant microphones for clear communication and a waterproof charging port.

Wind-Resistant Mics



Quick Charge

Get 2.5 hours of playtime
in 5 minutes

Professional Rapid Charging Cable

Waterproof port



Optimised Physical Button

Conqu to Prevent Accidental
Contact



Longer Playtime

Up to 12 hours of playtime

Image: Close-up of the headphone's control buttons, showing volume, power, and mode controls. Also visible are the internal structure of the wind-resistant microphone and the magnetic charging interface.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the professional rapid charging cable to the magnetic charging

port on the headphones and a USB power source. A full charge takes approximately 10 minutes for 2.5 hours of playtime, or longer for a full 12-hour charge.

2. Power On/Off

- **Power On:** Press and hold the Power button for 2 seconds until the indicator light turns on.
- **Power Off:** Press and hold the Power button for 3 seconds until the indicator light turns off.

3. Bluetooth Pairing

To connect your headphones to a Bluetooth-enabled device:

1. Ensure the headphones are powered off.
2. Press and hold the Power button for 5 seconds until the indicator light flashes red and blue, indicating pairing mode.
3. On your device (smartphone, MP3 player), enable Bluetooth and search for "X7 MAX" in the list of available devices.
4. Select "X7 MAX" to connect. The indicator light will turn solid blue once paired successfully.

4. MP3 Mode Usage

The headphones feature a built-in 32GB MP3 player, capable of storing up to 8000 songs. To use MP3 mode:


- Connect the headphones to a computer using the charging cable. The headphones will appear as a removable drive.
- Drag and drop your audio files (e.g., MP3) into the headphone's storage.
- Disconnect safely from the computer.
- Switch to MP3 mode using the Mode button (refer to Operating Instructions).

MP3-Player & Bluetooth 6.0 Dual Modes



MP3 Mode

- 32GB Larger Storage Memory Card
- Supports Download up to 8000 Songs
- Adapt to any Extreme Environment

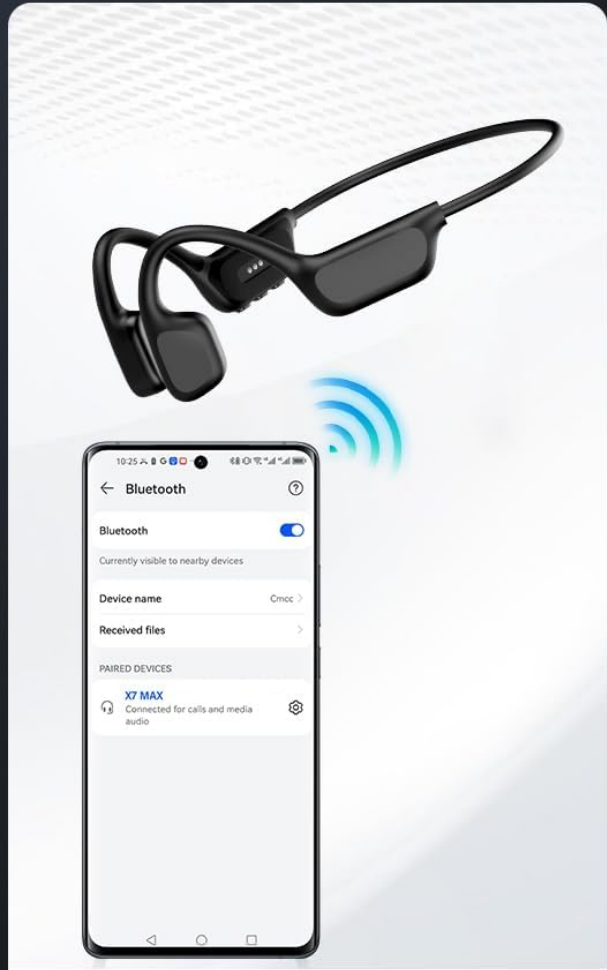

Bluetooth Mode

- Bluetooth V6.0 for Seamless, Lag-Free Gaming
- Game-ready Performance with Ultra-Low Latency, 15M(50FT) Stable Range and Strong Anti-Interference

Image: Illustration of the headphone's internal technology and a visual guide to Bluetooth pairing on a mobile device, highlighting the 'X7 MAX' connection.

OPERATING INSTRUCTIONS

Basic Controls

Function	Action
Power On/Off	Press and hold Power button (2s for On, 3s for Off)
Play/Pause	Single press Power button
Volume Up	Single press Volume + button
Volume Down	Single press Volume - button
Next Track	Press and hold Volume + button (2s)
Previous Track	Press and hold Volume - button (2s)
Answer/End Call	Single press Power button
Reject Call	Press and hold Power button (2s)

Switching Between Bluetooth and MP3 Modes

The headphones support dual modes: Bluetooth and MP3. To switch between modes, locate the dedicated Mode button (often combined with another function or a separate button) and press it. The headphones will indicate the current mode via voice prompt or indicator light.

When swimming, it is recommended to use MP3 mode as water can block Bluetooth signals.



IPX8 Waterproof for Swim

Supports 5m deep submersion for up to 2.5 hours

Note: Use MP3 mode for swimming as water blocks Bluetooth

Image: A swimmer wearing the ZOVIMAX X7 MAX headphones, demonstrating their IPX8 waterproof capability for use during aquatic activities.

MAINTENANCE

Cleaning

Regularly clean your headphones with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid using

harsh chemicals or abrasive materials.

Storage

Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure they are fully charged before storage and recharge them every few months to maintain battery health.

Water Resistance Guidelines (IPX8)

The ZOVIMAX X7 MAX headphones are IPX8 waterproof, supporting submersion up to 5 meters deep for up to 2.5 hours. While designed for water activities like swimming, it is important to:

- Ensure the charging port is dry before charging.
- Rinse the headphones with fresh water after use in chlorinated or saltwater to prevent corrosion.
- Avoid using the headphones in hot water or steam environments (e.g., saunas, hot tubs) as this can compromise the seals.

TROUBLESHOOTING

- **No Power:** Ensure the headphones are fully charged. Connect to the charging cable and check the indicator light.
- **Cannot Pair via Bluetooth:**
 - a. Ensure the headphones are in pairing mode (flashing red and blue light).
 - b. Turn off and on your device's Bluetooth.
 - c. Move the headphones closer to your device.
 - d. Clear previous Bluetooth connections on your device if necessary.
- **No Sound/Low Volume:**
 - a. Adjust the volume on both the headphones and your connected device.
 - b. Ensure the headphones are properly positioned on your cheekbones for optimal bone conduction.
 - c. Check if the headphones are in the correct mode (Bluetooth or MP3).
- **MP3 Mode Issues:**
 - a. Ensure audio files are in a compatible format (e.g., MP3).
 - b. Verify that files were transferred correctly to the internal storage.
- **Poor Call Quality:** Ensure the wind-resistant microphones are not obstructed. Move to a quieter environment if possible.

SPECIFICATIONS

Feature	Detail
Model Name	X7 MAX
Brand	ZOVIMAX
Connectivity Technology	Wireless (Bluetooth 6.0)
Audio Driver Type	Bone Conduction

Feature	Detail
Ear Placement	Open Ear
Water Resistance Level	IPX8 (Waterproof, up to 5m for 2.5 hours)
Special Features	Sweat Resistant, Built-in MP3 Player (32GB)
Battery Life	Up to 12 hours
Charging Time	Approx. 10 minutes for 2.5 hours playtime
Impedance	20 Ohms
Sensitivity	8 ohms
Control Type	Button Control
Compatible Devices	Smartphone, MP3 player, Bluetooth devices
Weight	30g

Dual Drivers Tech. Game-Changing Sound.

Bone Conduction — Clear highs and natural mids
Air Conduction — Deep, powerful bass



Image: An exploded view of the headphone's audio components, detailing how bone conduction delivers clear sound and air conduction enhances bass.

WARRANTY AND SUPPORT

ZOVIMAX offers a **2-year warranty** on the X7 MAX Bone Conduction Headphones. This warranty covers manufacturing defects and ensures the quality of our product. If you encounter any issues during this period, please contact our customer support for assistance. Our commitment to excellence remains unwavering, and we are happy to answer any

questions regarding your warranty.



Image: A warranty badge displaying '2 Year Warranty' and the phrase 'Our Commitment to Excellence'. For further support, please refer to the contact information provided with your purchase or visit the official ZOVIMAX website.

© 2026 ZOVIMAX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question