

[Manuals.plus](#) /

> [Ayybboo](#) /

> Ayybboo Dinosaur Digital Alarm Clock Model 9006 User Manual

## Ayybboo 9006

# Ayybboo Dinosaur Digital Alarm Clock

MODEL: 9006

## Introduction

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Ayybboo Dinosaur Digital Alarm Clock, Model 9006. Please read this manual thoroughly before using the device to ensure proper function and longevity.

## Safety Information

---

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Keep the device away from water and other liquids.
- Use only the specified battery type (3 x 1.5V AAA batteries).
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.
- Do not attempt to disassemble or repair the device yourself. Contact support if issues arise.

## Package Contents

---


- Ayybboo Dinosaur Digital Alarm Clock (Model 9006)
- User Manual

*Note: 3 x 1.5V AAA batteries are not included and must be purchased separately.*

## Product Overview

---

Familiarize yourself with the various components and display elements of your alarm clock.

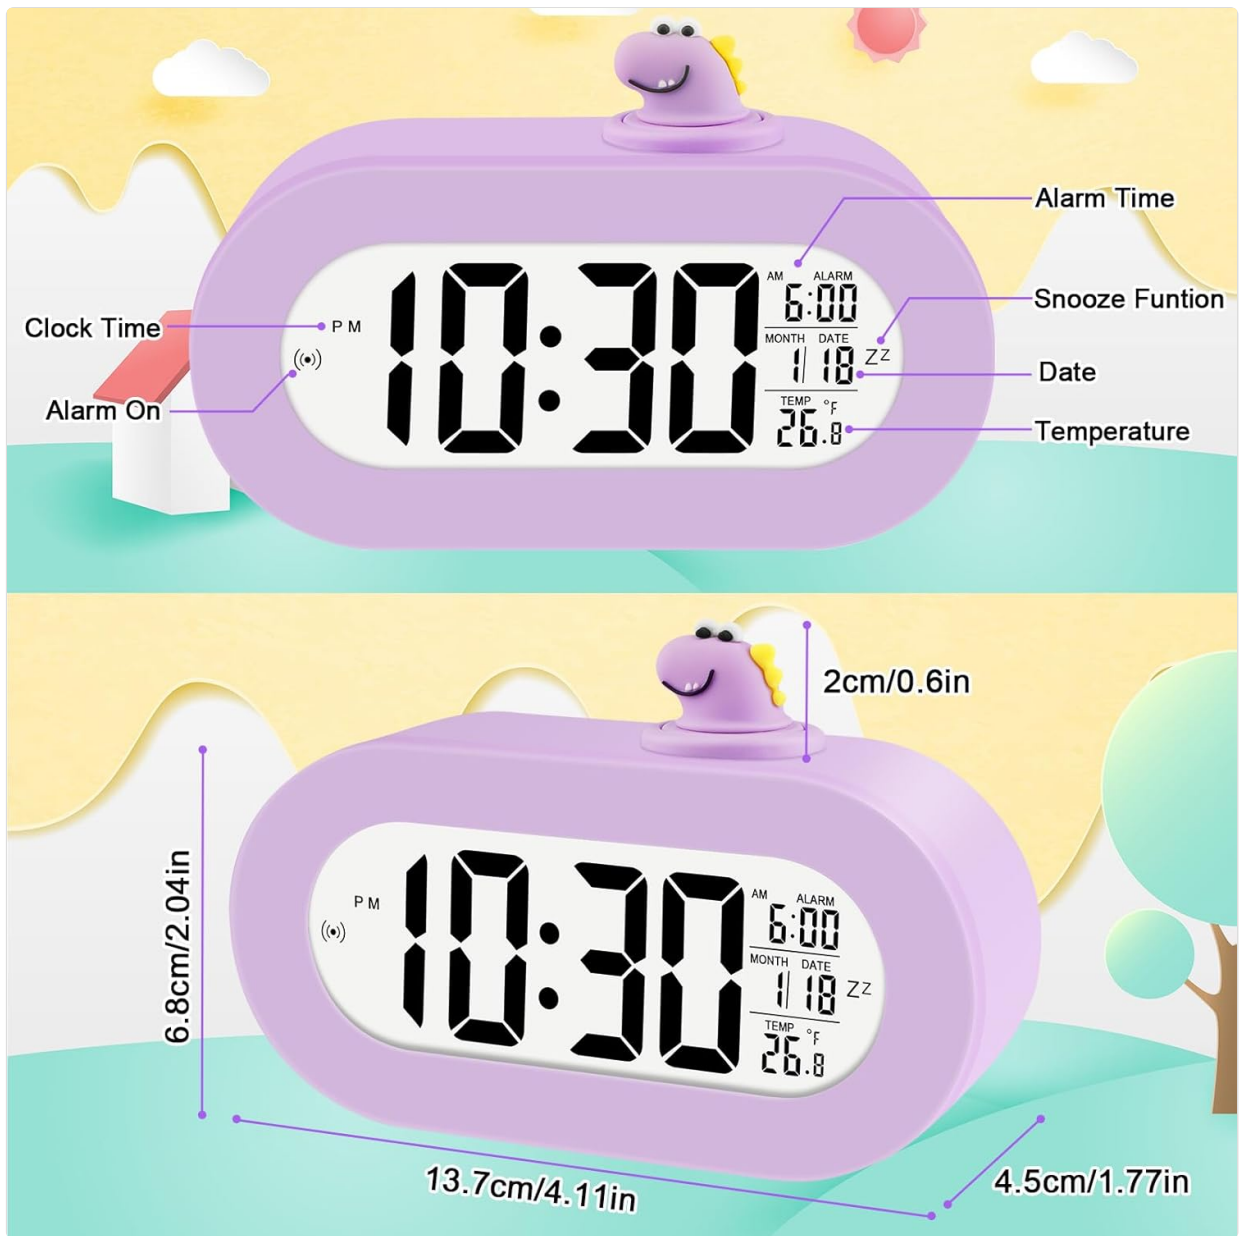

**Image 1:** Front view of the alarm clock display with key features labeled. This image illustrates the layout of information on the LCD screen, including the main time, alarm time, date, temperature, and indicators for alarm activation and snooze.

# Multi-functional Dinosaur Children's Alarm Clock



**Image 2:** Overview of the alarm clock's multi-functional display. This image highlights the various data points and settings available on the screen, such as date, 12/24 hour format, alarm status, snooze, temperature, and backlight sensor functionality.

## Display Elements:

- **Clock Time:** Displays the current time in 12-hour or 24-hour format.
- **Alarm Time:** Shows the set alarm time.
- **Alarm On Indicator:** Icon indicating if the alarm is active.
- **Snooze Function Indicator:** Icon indicating snooze is active.
- **Date:** Displays the current month and day.
- **Temperature:** Shows the ambient temperature in Celsius (°C) or Fahrenheit (°F).
- **Backlight Sensor:** Controls automatic screen illumination in dark environments.

## Setup

### 1. Battery Installation

1. Locate the battery compartment on the back or bottom of the alarm clock.
2. Open the battery compartment cover.

3. Insert three (3) new 1.5V AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

## 2. Initial Power-On

Upon battery installation, the clock will power on and display default settings. You can now proceed to set the time and other functions.

## Operating Instructions

---

The alarm clock features intuitive button operation. Refer to the product overview for button locations.

### Setting Time (12/24 Hour Format)

1. Press and hold the "TIME SET" button (or equivalent, typically labeled "SET" or "MODE") until the hour display flashes.
2. Use the "UP" and "DOWN" buttons (or "+" and "-") to adjust the hour.
3. Press "TIME SET" again to move to minute adjustment. Adjust minutes using "UP" and "DOWN".
4. Press "TIME SET" again to select 12-hour or 24-hour format. Adjust using "UP" and "DOWN".
5. Press "TIME SET" to confirm and exit time setting mode.

### Setting Date

1. In time display mode, press the "DATE SET" button (or "MODE" repeatedly until date flashes).
2. Use "UP" and "DOWN" buttons to adjust the year, then month, then day.
3. Press "DATE SET" to confirm and exit date setting mode.

### Setting Alarm

1. Press and hold the "ALARM SET" button (or equivalent) until the alarm hour display flashes.
2. Use "UP" and "DOWN" buttons to adjust the alarm hour.
3. Press "ALARM SET" again to move to alarm minute adjustment. Adjust minutes using "UP" and "DOWN".
4. Press "ALARM SET" to confirm the alarm time.
5. To activate/deactivate the alarm, locate the "ALARM ON/OFF" switch or button. An alarm icon will appear on the display when active.

### Snooze Function

When the alarm sounds, tap the dinosaur head on top of the clock to activate the 5-minute snooze function. The alarm will sound again after 5 minutes. To turn off the alarm completely, press any other button or flip the alarm switch off.

### Temperature Display (°C/°F)

The clock displays the ambient temperature. To switch between Celsius (°C) and Fahrenheit (°F), locate the "°C/°F" button or switch, usually on the back or side of the unit, and press/toggle it.

### Automatic Night Lighting and Backlight



**Image 3:** Illustration of the automatic night light feature and sensor control. This image shows the clock's display in bright conditions, with a soft night light, and a switch to enable or disable the light sensor, as well as toggle temperature units.



**Image 4:** The alarm clock in different lighting environments, demonstrating its use during the day and with the automatic night light feature active at night. The sensor switch is also visible.

- **Automatic Night Lighting:** The built-in ambient light sensor automatically activates a soft background light in dark environments, making the display readable without glare. To enable or disable this feature, locate the "SENSOR" switch on the back or side of the clock and toggle it to "ON" or "OFF".
- **Manual Backlight:** To temporarily illuminate the screen in any lighting condition, press the "LIGHT" button (or tap the dinosaur head if it also functions as a light button). The screen will brighten for a few seconds.

## Maintenance

### Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the surface or internal components.

### Battery Replacement

When the display dims or functions become erratic, it is time to replace the batteries. Follow the "Battery Installation" steps in the Setup section. Always replace all three AAA batteries at the same time with new

ones.

## Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries; incorrect battery installation.	Replace batteries with new 1.5V AAA batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated; alarm time is incorrect.	Ensure the alarm is set and activated (check for alarm icon on display). Verify the alarm time is correctly set.
Automatic night light not working.	Sensor is turned off; insufficient darkness.	Ensure the "SENSOR" switch is set to "ON". Test in a completely dark environment.
Incorrect time or date.	Time/date not set correctly after battery change or initial setup.	Follow the "Setting Time" and "Setting Date" instructions to reset.

## Specifications

**Brand:** Ayybboo

**Model Number:** 9006

**Display Type:** Digital LCD

**Power Source:** 3 x 1.5V AAA Batteries (not included)

**Material:** Acrylonitrile Butadiene Styrene (ABS)

**Product Dimensions:** 5.39"W x 2.68"H

**Item Weight:** 4.1 ounces

**Special Features:** Alarm, Automatic Night Lighting, Large Display, Snooze, Temperature Display (°C/°F)

**Room Type:** Kid's Room

**Indoor/Outdoor Usage:** Indoor

## Warranty Information

This Ayybboo product is covered by a **Lifetime Warranty**. For warranty claims or further details, please contact Ayybboo customer support.

## Support

If you encounter any issues or have questions not covered in this manual, please contact Ayybboo customer support for assistance. Please have your model number (9006) ready when contacting support.

For the latest support information and contact details, please visit the official Ayybboo website or refer to the product packaging.

