

## SOKANY SK-04034

# SOKANY SK-04034 Digital Electric Coffee Maker User Manual

Model: SK-04034

## INTRODUCTION

---

Thank you for purchasing the SOKANY SK-04034 Digital Electric Coffee Maker. This 2-in-1 appliance is designed to prepare coffee and heat milk efficiently. With a 600ml capacity and 600W power, it offers quick and stable performance for your daily beverage needs. This manual provides important information on safe use, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage rating on the appliance matches your local power supply. Do not immerse the appliance, power cord, or plug in water or any other liquid. Do not operate the appliance with a damaged cord or plug.
- **Placement:** Place the appliance on a stable, flat, heat-resistant surface, away from the edge of the countertop. Keep away from hot surfaces, open flames, or other heat sources.
- **Operation:** Do not operate the appliance without water. Always ensure the lid is properly closed during operation. The appliance features an automatic shut-off function after boiling for safety.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Cleaning:** Always unplug the appliance from the power outlet before cleaning. Do not wash the main body in a dishwasher. Refer to the "Maintenance and Cleaning" section for detailed instructions.
- **Repairs:** Do not attempt to repair the appliance yourself. Contact qualified service personnel for any repairs.

## PRODUCT OVERVIEW

---

The SOKANY SK-04034 is a versatile 2-in-1 appliance designed for both coffee preparation and milk heating. It features a digital touch screen for easy control and an elegant, modern design.



*Image 1: SOKANY SK-04034 Electric Coffee Maker. This image displays the coffee maker itself, highlighting its 600W power and 600ml capacity, along with its packaging.*

## Key Components:

- **Main Body:** Houses the heating element and control panel.
- **Coffee Pot/Milk Heating Container:** The removable container for preparing beverages.
- **Digital Touch Screen:** For selecting modes, adjusting settings, and displaying status.
- **Power Cord:** For connecting to an electrical outlet.

## SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Ensure all components are present.
2. **Initial Cleaning:** Before first use, wash the removable coffee pot/milk heating container with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main body with a damp cloth.
3. **Placement:** Place the coffee maker on a stable, level, and heat-resistant surface. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet. The digital screen should illuminate.

## OPERATING INSTRUCTIONS

---

The SOKANY SK-04034 offers two primary functions: coffee preparation and milk heating, controlled via its digital touch screen.

## 1. Preparing Coffee

1. **Add Water:** Fill the coffee pot with the desired amount of fresh water, up to the 600ml maximum capacity. This is suitable for 4 to 6 cups.
2. **Add Ground Coffee:** Place your preferred amount of ground coffee into the designated filter area within the pot.
3. **Close Lid:** Securely close the lid of the coffee pot.
4. **Select Coffee Mode:** On the digital touch screen, select the coffee preparation mode. The screen allows for easy adjustment of settings like time and temperature if available.
5. **Start Brewing:** Press the start button. The appliance will begin heating and brewing.
6. **Automatic Shut-off:** The coffee maker will automatically shut off once the brewing cycle is complete or after boiling, ensuring safety and preventing overheating.
7. **Serve:** Carefully remove the coffee pot and pour your freshly brewed coffee.

## 2. Heating Milk

1. **Add Milk:** Pour the desired amount of milk into the clean coffee pot. Do not exceed the 600ml maximum capacity.
2. **Close Lid:** Securely close the lid.
3. **Select Milk Heating Mode:** On the digital touch screen, select the milk heating mode.
4. **Start Heating:** Press the start button. The appliance will begin heating the milk.
5. **Automatic Shut-off:** The appliance will automatically shut off once the milk reaches the desired temperature or after boiling, preventing overflow and overheating.
6. **Serve:** Carefully remove the pot and pour the heated milk.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your SOKANY SK-04034 coffee maker.

- **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet and allow it to cool completely.
- **Removable Parts:** The coffee pot/milk heating container and any removable filters should be washed with warm, soapy water after each use. Rinse thoroughly and dry completely before reassembling or storing.
- **Main Body:** Wipe the exterior of the main body with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main body in water or any other liquid.
- **Descaling:** Over time, mineral deposits (limescale) may build up, affecting performance. Descale the appliance periodically (e.g., monthly or every few months, depending on water hardness). Use a commercial descaling solution suitable for coffee makers or a mixture of white vinegar and water (1:1 ratio). Follow the descaling solution's instructions or run the vinegar solution through a brewing cycle without coffee, then rinse by running several cycles with fresh water.
- **Dishwasher Safety:** The main body of the appliance is **not** dishwasher safe.

## TROUBLESHOOTING

---

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Coffee is not hot enough.	Limescale buildup; insufficient water.	Descale the appliance. Ensure sufficient water is added.
Brewing takes too long.	Limescale buildup.	Descale the appliance.
Milk does not heat properly.	Insufficient milk; limescale buildup.	Ensure adequate milk is added. Descale the appliance.
Digital screen unresponsive.	Temporary electronic glitch.	Unplug the appliance for a few minutes, then plug it back in. If the issue persists, contact support.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

---

**Brand:** SOKANY

**Model Number:** SK-04034

**Capacity:** 600 ml (suitable for 4-6 cups)

**Power:** 600 Watts

**Color:** Black

**Product Dimensions (D x W x H):** 30 cm x 25 cm x 20 cm

**Item Weight:** 1 kg

**Coffee Input Type:** Ground Coffee

**Operation Mode:** Fully Automatic

**Special Features:** Digital Touch Screen, 2-in-1 Function (Coffee & Milk Heating), Automatic Shut-off, Modern Design

**Included Components:** Device Body

**Dishwasher Safe:** No (Main body)

**Power Source:** AC Adapter

## WARRANTY INFORMATION

---

This SOKANY SK-04034 Digital Electric Coffee Maker comes with a **1-year warranty from the agent**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

## CUSTOMER SUPPORT

---

For any questions, technical assistance, or warranty claims, please contact your local SOKANY authorized service center or the retailer where you purchased the product. Please have your model number (SK-04034) and proof of purchase ready when contacting support.

*Contact information for specific regions may be found on the SOKANY official website or product packaging.*

