



[Manuals.plus](#) /

› [L.a.Z.-Boy](#) /

› L.a.Z.-Boy Jax Rocker Recliner User Manual

L.a.Z.-Boy Jax Rocker Recliner

L.a.Z.-Boy Jax Rocker Recliner User Manual

Model: Jax Rocker Recliner (Model Number: 1837992)

INTRODUCTION

Thank you for choosing the L.a.Z.-Boy Jax Rocker Recliner. This manual provides essential information for the safe and proper setup, operation, and maintenance of your new recliner. Please read these instructions carefully before use and retain them for future reference.



Image: The L.a.Z.-Boy Jax Rocker Recliner in a modern living room, showcasing its design and fabric.

PRODUCT FEATURES

- **Design:** Clean and simple design with a tall, supportive back, chaise seat, and legrest.
- **Upholstery:** 100% Polyester i-Clean Performance Fabric for durability and easy maintenance.
- **Reclining Mechanism:** Manual reclining function with a brushed nickel arc handle.
- **Rocker Base:** Coffee finish rocker base for gentle rocking motion.
- **Dimensions:** Approximately 36.5 inches (W) x 38 inches (D) x 41.5 inches (H).
- **Weight Capacity:** Maximum recommended weight of 275 pounds.

SETUP INSTRUCTIONS

Your L.a.Z.-Boy Jax Rocker Recliner may require minimal assembly. Please follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: backrest, seat base, and handle.
2. **Attach Backrest:** Align the backrest with the metal posts on the seat base. Slide the backrest down firmly until it locks into place. You should hear a click.

3. **Install Reclining Handle:** Locate the brushed nickel arc handle. Insert the handle into the mechanism on the side of the recliner and secure it according to the specific instructions provided with your unit (if any).
4. **Position Recliner:** Place the recliner in your desired location, ensuring sufficient space behind and in front for reclining and rocking motions.



Image: A diagram illustrating the key dimensions of the recliner, including height, width, and depth.

OPERATING INSTRUCTIONS

The Jax Rocker Recliner offers both rocking and reclining functions for your comfort.

Rocking Function

To engage the rocking function, simply sit in the recliner and gently push off with your feet. The recliner will rock smoothly on its base.

Reclining Function

1. **Extend Legrest:** Pull the brushed nickel arc handle located on the side of the recliner outwards. This will release the legrest, allowing it to extend.
2. **Recline Backrest:** While the legrest is extended, lean back gently against the backrest. The backrest will recline to your desired position.
3. **Return to Upright Position:** To return to the upright position, push down on the legrest with your legs while simultaneously leaning forward. The legrest will retract, and the backrest will return to its original position. Push the handle back in to secure the legrest.



Image: The recliner shown with its legrest fully extended, demonstrating the reclining position.



Image: A side profile of the recliner, highlighting the brushed nickel arc handle and the rocker base.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner.

- **Cleaning:** The 100% Polyester i-Clean Performance Fabric is designed for easy maintenance. For spills and stains, **spot clean** immediately using a mild, water-free solvent or upholstery shampoo. Always test a small, inconspicuous area first.
- **Vacuuming:** Regularly vacuum the recliner using a soft brush attachment to remove dust and loose debris.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric fading. Position your recliner away from direct sunlight when possible.
- **Mechanism Care:** The reclining mechanism is designed for smooth operation. Avoid forcing the mechanism. If it becomes stiff, contact customer support; do not attempt to lubricate it yourself.

TROUBLESHOOTING

If you encounter any issues with your recliner, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Recliner does not recline smoothly.	Mechanism obstruction or misalignment.	Ensure no objects are obstructing the mechanism. Check if the backrest is fully engaged. If issues persist, contact customer support.
Legrest does not stay extended.	Handle not fully engaged or mechanism issue.	Ensure the reclining handle is pulled out completely. Apply gentle pressure to the legrest to lock it into position.
Rocker motion is stiff or noisy.	Debris in rocker base or uneven surface.	Check the rocker base for any debris. Ensure the recliner is on a flat, even surface.

SPECIFICATIONS

Feature	Detail
Brand	L.a.Z.-Boy (Generic listed as seller brand)
Model Name	Jax Rocker Recliner
Model Number	1837992
ASIN	B0FMPXT1VJ
Color	Grey
Product Dimensions (D x W x H)	36.5" x 41.5" x 38"
Item Weight	73 pounds
Maximum Weight Recommendation	275 Pounds
Upholstery Material	100% Polyester i-Clean Performance Fabric
Arm Style	Track Arms
Reclining Position Count	2
Product Care Instructions	Spot Clean

WARRANTY INFORMATION

Specific warranty details for the L.a.Z.-Boy Jax Rocker Recliner are typically provided at the point of purchase or included with the product packaging. Please refer to your purchase documentation for comprehensive warranty coverage. Generally, L.a.Z.-Boy products come with a limited warranty covering manufacturing defects. For warranty claims or detailed information, please retain your proof of purchase and contact the retailer or L.a.Z.-Boy customer service directly.

CUSTOMER SUPPORT

If you have any questions, require assistance with setup, or need troubleshooting beyond what is covered in this

manual, please contact your retailer or the manufacturer's customer support.

For L.a.Z.-Boy customer service, please visit their official website or refer to the contact information provided with your purchase.

Online Resources: www.lazboy.com