

XenonLab H015

XenonLab H015 Cordless Vacuum Cleaner User Manual

Model: H015

1. INTRODUCTION

Thank you for choosing the XenonLab H015 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

The XenonLab H015 is designed for versatile cleaning across various surfaces, featuring powerful suction, a long-lasting battery, and user-friendly design elements.

**INDUSTRIAL GRADE POWER
PICKS UP MORE DIRT IN EVERY PASS**

**Enhanced Brushless
Motor Performance**

Reliable suction for every cleaning job



Image: XenonLab H015 Cordless Vacuum Cleaner demonstrating powerful 48KPa suction.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

- Read all instructions before using the appliance.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger specified by the manufacturer.
- Do not incinerate the appliance even if it is severely damaged. Batteries can explode in a fire.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon opening the package:

- H015 Cordless Vacuum Main Unit
- Replaceable HEPA Filter (one pre-installed, one spare)
- 2-in-1 Brush Tool
- Long Crevice Nozzle
- Hair Cleaning Tool
- Instructions Manual (this document)
- Wall Mount
- Battery Charger

LED Touch Display

Clearly Displays Suction Levels and Battery Status



Image: Overview of the XenonLab H015 Cordless Vacuum Cleaner and its included accessories.

4. SETUP

4.1 Assembly

1. **Attach the Extension Wand:** Insert the metal extension wand into the main unit until it clicks securely.
2. **Attach the Floor Brush:** Connect the floor brush head to the other end of the extension wand until it clicks.

3. **Install Accessories:** For handheld use or specific cleaning tasks, attach the 2-in-1 brush tool or long crevice nozzle directly to the main unit or the extension wand.



Image: Different assembly configurations for the XenonLab H015, including stick and handheld modes with various attachments.

4.2 Charging the Battery

Before first use, fully charge the vacuum cleaner for approximately 5.5 hours. The battery can be charged in two ways:

- **Direct Charging:** Connect the charger directly to the charging port on the main unit.
- **Wall-Mount Charging:** Install the wall mount in a convenient location. Place the vacuum cleaner onto the wall mount, then connect the charger to the wall mount's charging port.

The LED display will show the charging status. A full charge provides up to 75 minutes of runtime.

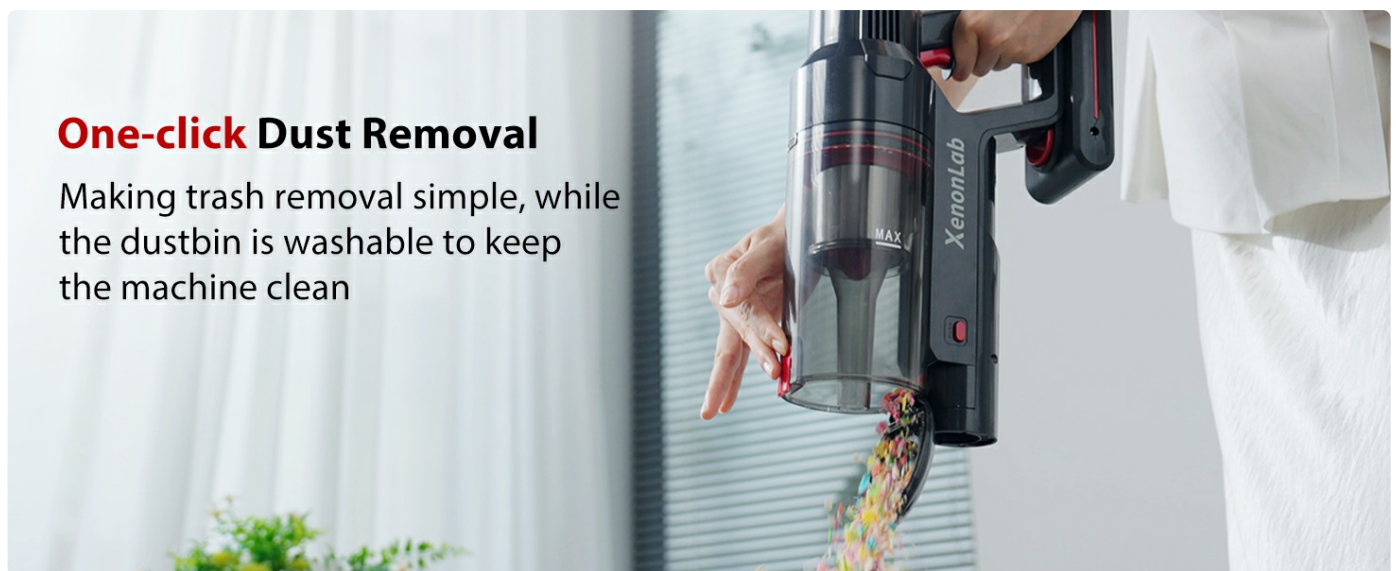


Image: XenonLab H015 demonstrating multi-mode charging options, including wall-mount and direct battery pack charging.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Modes

Press the power button to turn the vacuum on. The LED display will show the current battery level and suction mode. Press the mode button to cycle through different suction levels: MIN, MID, and MAX, to suit your cleaning needs.

Bi-directional Flexible Floor Brush

Labor-saving removal of debris from underneath furniture

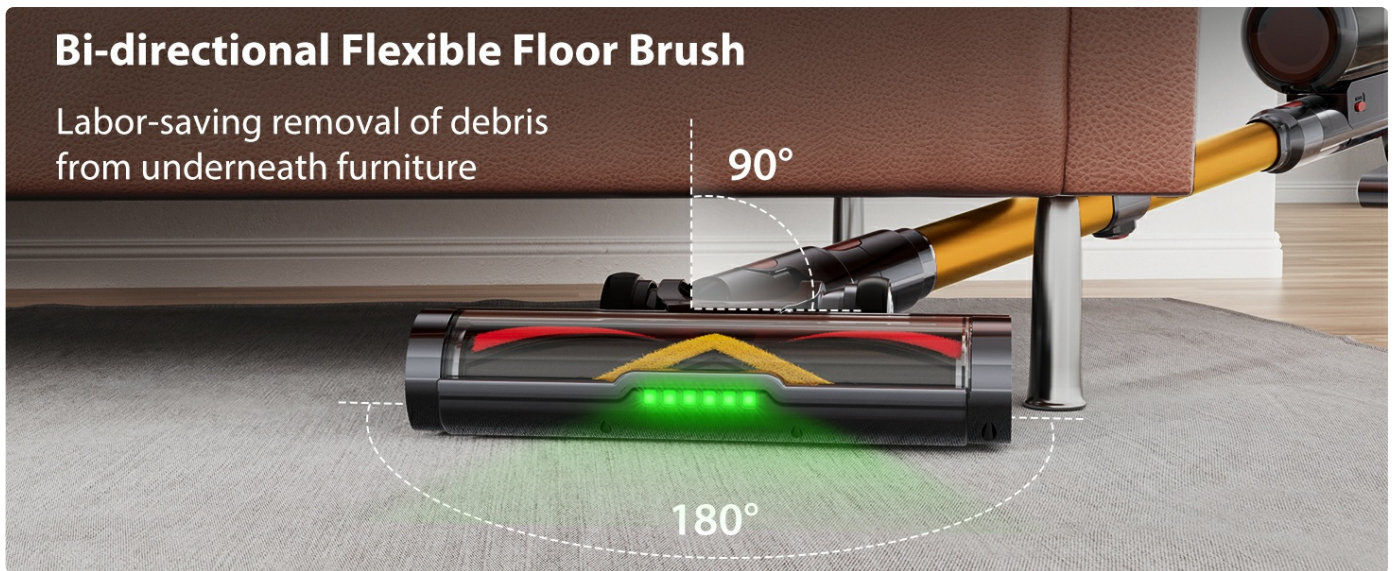


Image: Close-up of the XenonLab H015 LED touch display, indicating battery percentage and suction mode (MIN, MID, MAX).

5.2 Cleaning Features

- **Anti-Tangle V-Roller Brush:** The specialized brushroll is designed to prevent hair tangles, ensuring continuous cleaning performance.
- **Anti-Static Design:** Embedded anti-static fibers help eliminate static charge, preventing hair and dust from clinging to surfaces and improving pickup efficiency.
- **Night-Seeing Green Light:** The integrated green LED lights on the floor brush enhance contrast, making hidden dust and debris visible on various floor types.
- **Bi-directional Flexible Floor Brush:** The brush head offers 90° vertical and 180° horizontal rotation, allowing easy maneuverability under furniture and around obstacles.
- **Self-Standing Design:** The vacuum can stand upright on its own, allowing you to pause cleaning at any moment without needing to lean it against a wall or lay it down.

Edge Cleaning & Green LED Lighting

Accurately completes trash removal from corners and crevices



Image: The anti-tangle V-roller brush of the XenonLab H015, illustrating its effectiveness against hair tangles.



Image: The Night-Seeing Green Light feature of the XenonLab H015, revealing hidden dust particles on the floor.

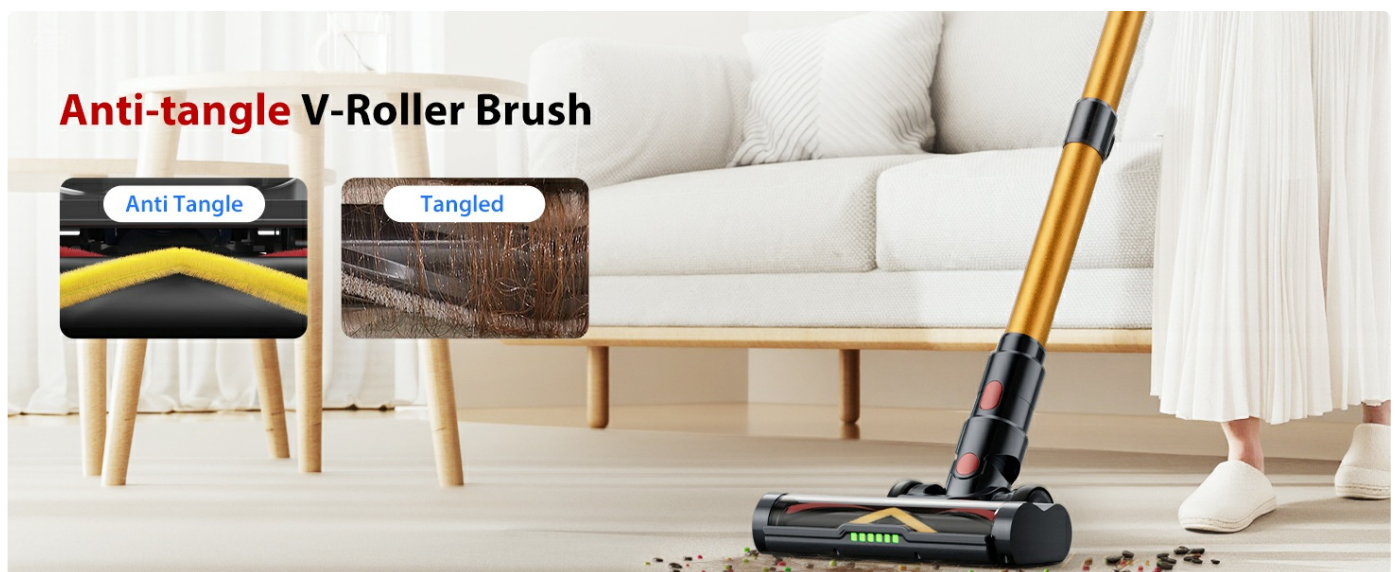 


Image: The XenonLab H015 demonstrating its self-standing design, allowing for convenient pauses during cleaning.

6. MAINTENANCE

6.1 Emptying the Dustbin

To maintain optimal suction, empty the dustbin regularly, ideally after each use or when the 'Dust-filled Tips' indicator appears on the LED display.

1. Ensure the vacuum is turned off.
2. Press the dustbin release button (usually located near the handle) to detach the dustbin from the main unit.
3. Position the dustbin over a trash can and press the bottom release latch to open the dustbin flap and empty its contents.
4. Close the dustbin flap and reattach the dustbin to the main unit until it clicks securely.



Image: One-click dust removal feature of the XenonLab H015, showing easy emptying of the dustbin.

6.2 Cleaning Filters

The HEPA filter and mesh filter should be cleaned regularly to prevent clogging and maintain suction power. It is recommended to clean them monthly or as needed.

1. Remove the dustbin as described above.
2. Twist and pull out the HEPA filter and mesh filter assembly from the dustbin.
3. Tap off loose dirt. Rinse both filters under cold running water until the water runs clear.
4. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating devices.
5. Reinsert the dry filters into the dustbin and reattach the dustbin to the main unit.



Image: Removable and washable filter components of the XenonLab H015, highlighting ease of maintenance.

6.3 Cleaning the Brush Roll

Although the V-roller brush is designed to be anti-tangle, occasional cleaning may be necessary, especially if the 'Tangle Reminder' appears on the LED display.

1. Ensure the vacuum is turned off and disconnected from power.
2. Locate the brush roll release tab on the side of the floor brush head.

3. Remove the brush roll. Use the provided hair cleaning tool or scissors to cut and remove any tangled hair or debris.
4. Reinsert the brush roll, ensuring it clicks back into place.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
Low suction power.	Dustbin is full. Filters are clogged. Obstruction in nozzle/hose.	Empty dustbin. Clean or replace filters. Remove any obstructions.
Brush roll not rotating.	Hair or debris tangled in brush roll. Obstruction in brush head.	Clean brush roll. Remove any obstructions from the brush head.
Short battery runtime.	Battery not fully charged. Using MAX suction mode continuously. Battery degradation.	Ensure battery is fully charged. Use lower suction modes for longer runtime. Contact support if battery life significantly decreases over time.

8. SPECIFICATIONS

Feature	Specification
Brand	XenonLab
Model Name	H015
Special Feature	Cordless, Self-Standing, Anti-Static & Anti-Tangle Brush, LED Display
Filter Type	HEPA Filter (Washable)
Suction Power	Up to 48KPa
Motor Power	580W
Battery Life	Up to 75 minutes (on MIN mode)
Charging Time	Approx. 5.5 hours
Capacity	1000 Milligrams (Dustbin)
Recommended Uses	Carpet, Hard Floor, Hardwood, Pet Hair
Form Factor	Stick
Product Dimensions	17"L x 12"W x 7"H
Item Weight	5 pounds

Feature	Specification
Power Source	Battery Powered (1 Lithium Ion battery included)

9. WARRANTY AND SUPPORT

XenonLab products are manufactured to high-quality standards and are warranted against manufacturing defects. For specific warranty details, please refer to the warranty card included with your purchase or visit the official XenonLab website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact XenonLab customer service. You can find contact information on the XenonLab official website or through your purchase platform. Visit the official XenonLab Store for more information and products:[XenonLab Store](#)

© 2026 XenonLab. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What does the E3 error code mean on the XenonLab H015G cordless vacuum, and how can I fix it if the unit turns off immediately despite the filters and brush roll being clean?

On the XenonLab H015 series, an E3 error code typically indicates a motor protection fault, often caused by an

electrical overload or a perceived blockage that triggers a safety shutdown. Since you have already cleaned...

[Read full answer](#)

How do you adjust the head of the XenonLab H015 Cordless Vacuum Cleaner to tilt and swivel?

The XenonLab H015 Cordless Vacuum Cleaner features a bi-directional flexible floor brush designed for easy maneuverability. To adjust the head for tilting and swiveling, follow these guidelines: Maneuverability: The brush head is designed to offer...

[Read full answer](#)