

[manuals.plus](#) /› [Blackview](#) /› **Blackview Active 5 Rugged Tablet PC User Manual**

Blackview Active 5

Blackview Active 5 Rugged Tablet PC User Manual

Model: Active 5



1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Blackview Active 5 Rugged Tablet PC. Please read these instructions carefully before using the device and retain them for future reference. The Blackview Active 5 is designed for durability, featuring IP68/IP69K water and dust resistance, MIL-STD-810H compliance, and a robust design suitable for challenging environments.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Blackview Active 5 Rugged Tablet PC
- USB Cable
- Power Adapter
- SIM Ejector Tool
- Quick Start Guide / Safety Information

If any items are missing or damaged, please contact your retailer.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your Blackview Active 5 tablet.



Image 3.1: Front and rear view of the Blackview Active 5 Rugged Tablet PC, showcasing its robust design and camera module.

IP68 & IP69K & MIL-STD-810H

Panda MN228 Reinforced Glass



Image 3.2: Visual representation of the tablet's IP68/IP69K water and dust resistance, and MIL-STD-810H military standard compliance, including Panda MN228 Reinforced Glass.

 
8.68" Compact IPS Screen

AI 90Hz Smart Refresh rate



800*1340

Resolution




90Hz

Smart Refresh
Rate



360 nits

 Brightness



85%

Screen-to
body Ratio



Image 3.3: Details of the 8.68-inch Compact IPS Screen, highlighting its 800x1340 resolution, 90Hz Smart Refresh Rate, 360 nits brightness, and 85% screen-to-body ratio.

Dual Smart-K BOX Speakers

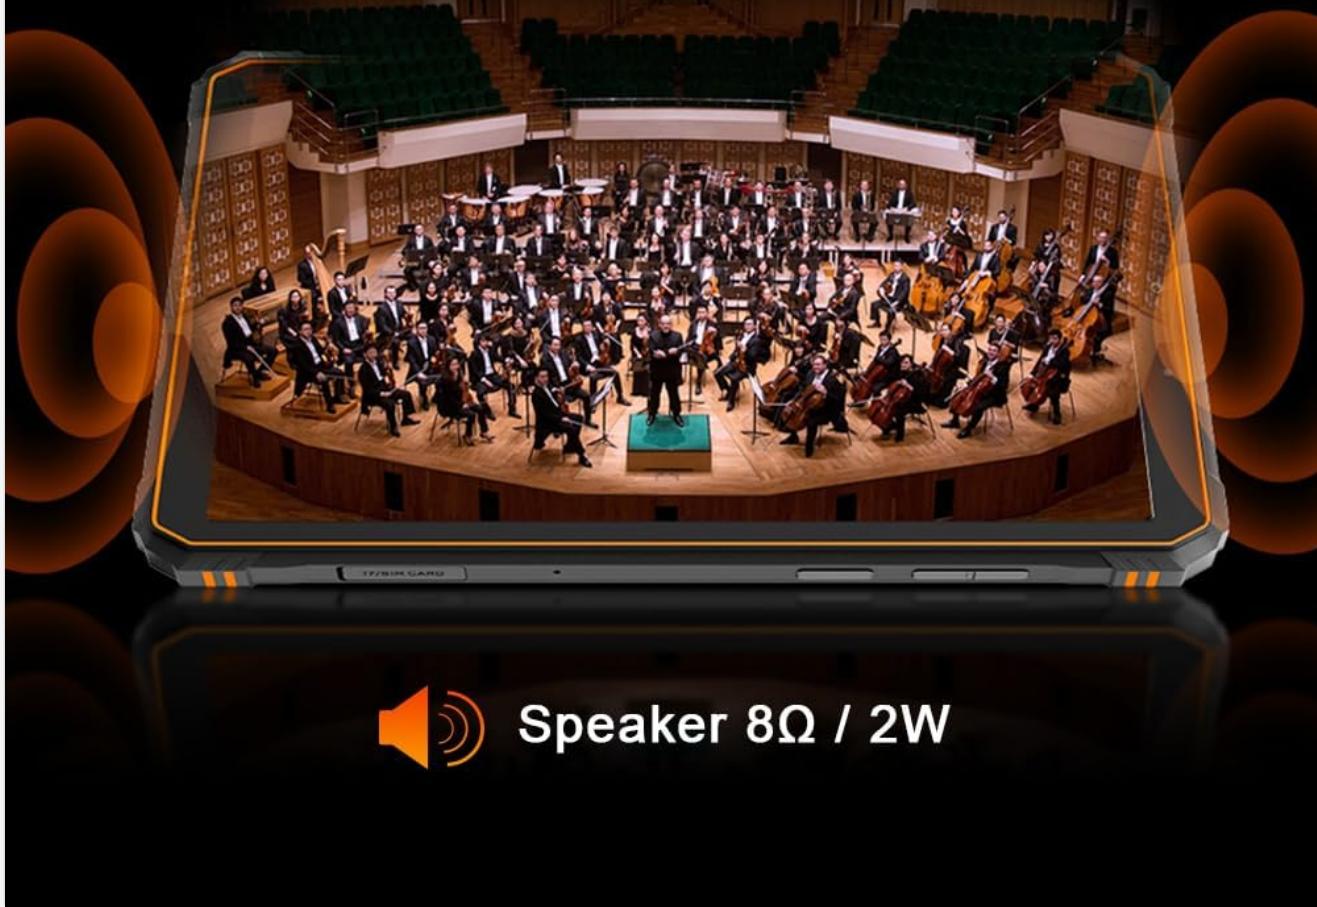


Image 3.4: Illustration of the tablet's Dual Smart-K BOX Speakers, indicating 8Ω / 2W output for enhanced audio.

4. SETUP

4.1. Inserting SIM and SD Card

1. Locate the SIM/SD card tray on the side of the tablet.
2. Insert the SIM ejector tool into the small hole next to the tray to open it.
3. Place your Nano-SIM card(s) and/or microSD card (up to 2TB) into the designated slots, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

4.2. Initial Power On

1. Press and hold the Power button (usually on the side) until the Blackview logo appears.
2. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

5. OPERATING INSTRUCTIONS

5.1. Basic Navigation

The Blackview Active 5 runs on Android 15 with DokeOS P 4.2. Use touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.



Image 5.1: The Blackview Active 5 tablet displaying the All-New DokeOS P 4.2 interface, built upon Android 15.

5.2. Performance and Storage

The tablet is powered by an Octa-core Unisoc T615 processor, ensuring smooth performance for multitasking and applications. It features 8GB of base RAM, expandable with an additional 16GB of virtual RAM for a total of 24GB. Internal storage is 128GB, which can be expanded up to 2TB using a microSD card.

Octa-core Unisoc T615

1.8Hz

Ultimate Frequency

12nm

Process

Octa-Core

High-performance CPU

Mali-G57

GPU

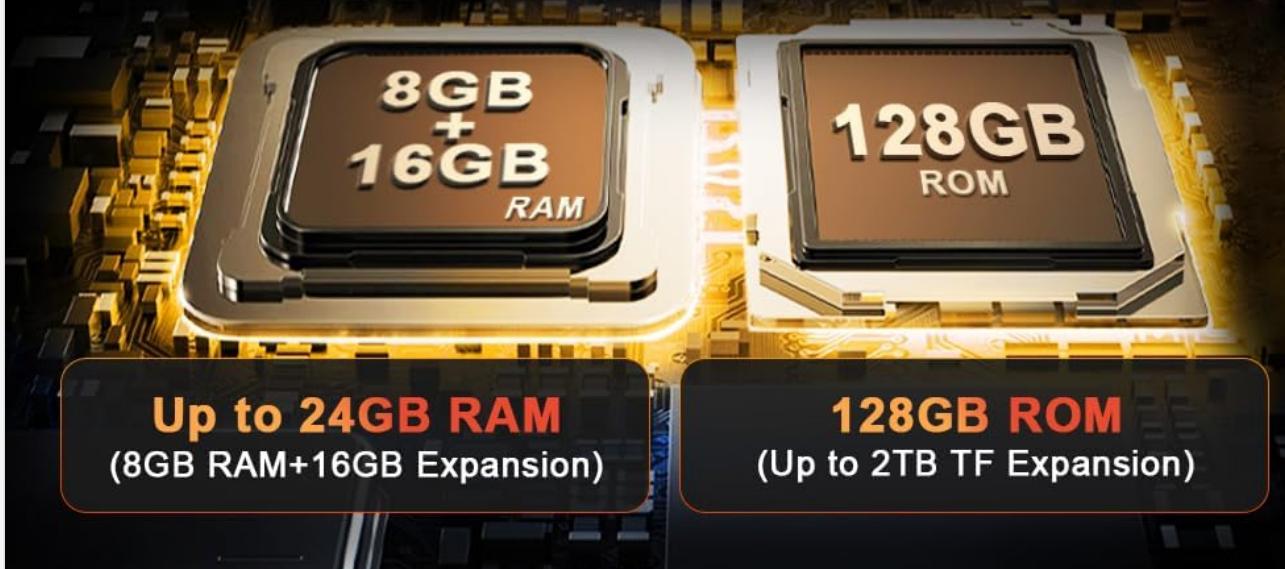


Image 5.2: Detailed view of the Octa-core Unisoc T615 processor (1.8Hz, 12nm process, Mali-G57 GPU) and memory configuration, showing 8GB+16GB RAM expansion and 128GB ROM with up to 2TB TF expansion.

5.3. Camera Functions

The Blackview Active 5 is equipped with a 16MP AI rear camera and a 13MP AI front camera. These cameras are designed to capture clear images and videos in various lighting conditions.

16MP+13MP AI Cameras



Image 5.3: Overview of the tablet's camera system, featuring a 13MP AI Front Camera and a 16MP AI Rear Camera, along with AI-powered features like Magic Eraser, Color Focus, Sky Replacement, Portrait Blur, Portrait Light, and Portrait Unblur.

5.4. Doke AI Features

The tablet integrates Blackview's Doke AI, offering various intelligent functionalities to enhance user experience.

The Smartest Blackview Doke AI



Deepseek
DeepThinking(R1)



ChatGPT-40 mini



Gemini AI
with FlashThinking Experimental

Image 5.4: Representation of the Blackview Doke AI, showcasing integration with various applications and AI capabilities such as Deepseek DeepThinking(R1), ChatGPT-40 mini, and Gemini AI with FlashThinking Experimental.

6. CONNECTIVITY

The Blackview Active 5 supports a range of connectivity options:

- **Dual 4G LTE:** For cellular data and calls.
- **5G WiFi:** Supports 802.11ax and 802.11g for fast wireless internet.
- **Bluetooth:** For connecting wireless accessories.
- **NFC:** For contactless payments and quick pairing.
- **GPS:** For navigation and location services.
- **OTG (On-The-Go):** Allows the tablet to act as a host for USB devices, such as flash drives or keyboards.

7. BATTERY MANAGEMENT

The tablet is equipped with a 6600mAh mega battery, providing extended usage times.

6600mAh Mega Battery

↑ 20% Longer Usage Time ↑ 25% Longer Battery Lifespan

6600mAh



Image 7.1: Overview of the 6600mAh Mega Battery, indicating usage times such as 6 hours for gaming, 7 hours for video, 22 hours for calls, 9 hours for website browsing, 15 hours for music, and 360 hours standby.

7.1. Charging

Use the provided power adapter and USB cable to charge the tablet. Ensure the charging port is clean and dry before connecting the cable.

7.2. OTG Power Sharing

The Blackview Active 5 supports OTG functionality, allowing you to use it to charge other compatible devices. Connect the devices using an OTG cable (sold separately).

8. RUGGED FEATURES

The Blackview Active 5 is built to withstand harsh conditions:

- **IP68 & IP69K:** Certified for water and dust resistance, allowing submersion in water up to 1.5 meters for 30 minutes and protection against high-pressure, high-temperature water jets.

- **MIL-STD-810H:** Complies with military standards for drop protection, shock, and extreme temperatures.
- **Panda Glass:** The display is protected by Panda Glass, offering enhanced scratch and breakage resistance.

9. SPECIFICATIONS

Feature	Specification
Model Name	Blackview Active 5
Operating System	Android 15 (DokeOS P 4.2)
Display Size	8.68 Inches
Display Resolution	1340 x 800 Pixels
Processor	Unisoc T615 Octa-core
RAM	24 GB (8GB + 16GB Virtual)
Internal Storage	128 GB
Expandable Storage	Up to 2 TB (microSD)
Rear Camera	16 MP AI
Front Camera	13 MP AI
Battery Capacity	6600 mAh
Connectivity	Dual 4G LTE, 5G Wi-Fi (802.11ax, 802.11g), Bluetooth, NFC, GPS, OTG
Ruggedness	IP68/IP69K, MIL-STD-810H
Special Features	Cellular Connectivity, Phone Call Functionality, Stereo Speakers, USB OTG Support, Expandable Storage
Dimensions	31.5 x 26.7 x 6.7 cm (Package); 840 grams

10. MAINTENANCE

To ensure the longevity and optimal performance of your Blackview Active 5 tablet:

- **Cleaning:** Use a soft, damp cloth to clean the tablet. Avoid harsh chemicals or abrasive materials. Ensure all ports are closed before cleaning with water.
- **Temperature:** Avoid exposing the tablet to extreme temperatures (very hot or very cold) for prolonged periods.
- **Storage:** When not in use for an extended period, store the tablet in a cool, dry place with approximately 50% battery charge.
- **Software Updates:** Regularly check for and install software updates to benefit from performance improvements and security enhancements.

11. TROUBLESHOOTING

If you encounter issues with your tablet, try the following common solutions:

- **Device Unresponsive:** Press and hold the Power button for about 10-15 seconds to force a restart.
- **Network Issues:** Check if your SIM card is properly inserted. Toggle Airplane Mode on and off. Restart the tablet. For Wi-Fi, ensure you are within range and have the correct password.
- **Battery Draining Quickly:** Reduce screen brightness, close unused apps, disable unnecessary connectivity features (Bluetooth, GPS, Wi-Fi) when not in use.
- **Apps Crashing:** Clear the cache and data for the problematic app in Settings > Apps. If the issue persists, uninstall and reinstall the app.
- **Slow Performance:** Close background apps, clear cache, and ensure sufficient storage space. A factory reset can resolve persistent performance issues (back up your data first).

For more complex issues, refer to the Blackview support website or contact customer service.

12. WARRANTY AND SUPPORT

The Blackview Active 5 Rugged Tablet PC comes with a 24-month warranty. Blackview provides a warranty and repair center in Europe. For any questions or support needs, please contact Blackview customer service. They aim to respond within 24 hours.

For further assistance, please visit the official Blackview website or contact their authorized service centers.

© 2025 Blackview. All rights reserved.

Related Documents - Active 5

<p>Blackview BV5200 Series</p> <p>User Guide</p> 	<p>Blackview BV5200 Series User Guide: Features, Setup, and Specifications</p> <p>Comprehensive user guide for the Blackview BV5200 Series smartphone, covering setup, features like ruggedness and Doke OS, connectivity, safety information, and regulatory compliance.</p>
	<p>Blackview Rugged Tablet User Manual and Safety Information</p> <p>Comprehensive guide for the Blackview Rugged Tablet, covering device overview, setup instructions for SIM cards and hand straps, basic functions, safety precautions, and maintenance tips.</p>

 Active 8 Series http://www.blackviewhk.com	<p><u>Blackview Active 8 Series User Manual</u></p> <p>Explore the features and usage of the Blackview Active 8 Series tablet with this comprehensive user manual. Learn about setup, maintenance, safety guidelines, and regulatory information.</p>
	<p><u>Blackview Active 6 Series User Manual and Safety Guide</u></p> <p>A comprehensive user manual and safety guide for the Blackview Active 6 Series rugged tablet, detailing installation, SIM card setup, messaging, safety precautions, and maintenance procedures.</p>
	<p><u>Blackview Tab 7 WiFi Tablet User Guide</u></p> <p>This guide provides instructions on using the Blackview Tab 7 WiFi Tablet, including setup, language settings, safety precautions, and maintenance.</p>
 N1000 <small>User Manual • Uživatelský manuál • Utiltoreño manual • Benutzerhandbuch</small>	<p><u>Blackview N1000 User Manual: Setup, Features, and Safety Guide</u></p> <p>Comprehensive user manual for the Blackview N1000 smartphone, covering setup, features, safety instructions, maintenance, and warranty information.</p>