

[manuals.plus](#) /› [Denver](#) /› **Denver Turntable Model VPB262 User Manual****Denver VPB262**

## Denver Turntable Model VPB262 User Manual

Model: VPB262

### 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Denver Turntable Model VPB262. This retro-style record player features built-in speakers, Bluetooth connectivity, and supports multiple playback speeds. Please read this manual thoroughly before using the device and retain it for future reference.

### 2. PACKAGE CONTENTS

Ensure all items are present and in good condition upon unpacking:

- Denver Turntable Model VPB262
- AC Adapter
- Instruction Manual (this document)

### 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your turntable.



**Figure 1:** Denver Turntable Model VPB262. This image shows the turntable with its clear dust cover open, revealing a vinyl record placed on the platter, ready for playback. The tonearm is visible, positioned over the record.

1. **Platter:** The rotating platform where records are placed.
2. **Spindle:** The central pin on the platter for securing records.
3. **Tonearm:** Holds the cartridge and stylus.
4. **Stylus (Needle):** The part that reads the grooves of the record.
5. **Dust Cover:** Protects the platter and tonearm from dust.
6. **Speed Selector:** Switch to select playback speed (33 1/3, 45, 78 RPM).
7. **Auto-Stop Switch:** Engages or disengages the automatic stop function.
8. **Power/Volume Knob:** Controls power and audio output level.
9. **Function Selector:** Switches between Phono (record player) and Bluetooth modes.
10. **Built-in Speakers:** Integrated audio output.
11. **RCA Line-Out Ports:** For connecting to external amplifiers or speakers.

## 4. SETUP

---

1. **Unpacking:** Carefully remove the turntable from its packaging. Retain all packaging materials for potential future transport or service.
2. **Placement:** Place the turntable on a flat, stable, and level surface away from direct sunlight, heat sources, and excessive vibration. Ensure adequate ventilation around the unit.

3. **Dust Cover:** If the dust cover is separate, carefully attach it to the hinges at the back of the unit.
4. **Power Connection:** Connect the AC adapter to the DC input jack on the back of the turntable, then plug the adapter into a standard wall outlet.

## 5. OPERATING INSTRUCTIONS

### 5.1 Playing a Record

1. **Power On:** Turn the Power/Volume knob clockwise to power on the unit.
2. **Select Phono Mode:** Set the Function Selector to "Phono".
3. **Open Dust Cover:** Gently lift the dust cover.
4. **Place Record:** Place a vinyl record on the turntable platter. For 45 RPM singles, use the included adapter if necessary.
5. **Select Speed:** Set the Speed Selector to the correct speed for your record (33 1/3, 45, or 78 RPM).
6. **Auto-Stop Function:** The turntable features an auto-stop function. When activated, the platter will stop spinning automatically at the end of a record. To enable or disable this, use the Auto-Stop switch. It is recommended to enable it to prevent stylus wear.



**Figure 2:** Illustration of the auto-stop function. The image shows the turntable with a graphic indicating that the auto-stop feature is activated, which automatically stops the platter when a record finishes playing.

7. **Start Playback:** Gently lift the tonearm using the cueing lever and position the stylus over the desired track on the record. Slowly lower the tonearm onto the record.
8. **Adjust Volume:** Adjust the volume using the Power/Volume knob.
9. **End of Playback:** At the end of the record, if auto-stop is enabled, the platter will stop. Manually lift the tonearm and return it to its rest.



**Figure 3:** This image illustrates the turntable's capability to play various record sizes (30cm, 25cm, 17.5cm) and speeds (33 1/3, 45, 78 RPM), with a person browsing records in the background.

## 5.2 Bluetooth Operation

The turntable can receive audio wirelessly from a Bluetooth-enabled device.

1. **Power On:** Turn the Power/Volume knob clockwise to power on the unit.
2. **Select Bluetooth Mode:** Set the Function Selector to "Bluetooth". The Bluetooth indicator light will flash, indicating it is in pairing mode.
3. **Pairing:** On your Bluetooth device (e.g., smartphone, tablet), enable Bluetooth and search for available devices. Select "Denver VPB262" from the list.
4. **Connection Confirmation:** Once paired, the Bluetooth indicator light on the turntable will stop flashing and remain solid.
5. **Play Audio:** Start playing music on your Bluetooth device. The audio will be streamed through the

turntable's built-in speakers.

6. **Adjust Volume:** Adjust the volume using the Power/Volume knob on the turntable and/or your Bluetooth device.



**Figure 4:** The Denver Turntable shown with a smartphone displaying a music player interface, indicating active Bluetooth streaming. This highlights the modern connectivity feature of the retro-designed turntable.



**Figure 5:** This image depicts the Denver Turntable with visual sound waves originating from its built-in stereo speakers, emphasizing its integrated audio output capability.

### 5.3 Connecting External Audio Devices (RCA Line-Out)

The turntable features RCA Line-Out ports for connecting to an external amplifier or powered speakers, allowing for enhanced audio output.

1. **Power Off:** Ensure the turntable and the external audio device are both powered off before making connections.
2. **Connect RCA Cables:** Connect an RCA audio cable (not included) to the "LINE OUT" ports on the back of the turntable (Red for Right channel, White for Left channel).
3. **Connect to External Device:** Connect the other end of the RCA cable to the corresponding audio input ports on your amplifier or powered speakers.
4. **Power On:** Power on the external audio device first, then the turntable.
5. **Select Input:** Select the appropriate input on your external amplifier or speakers.
6. **Adjust Volume:** Adjust the volume using the controls on your external audio device. The turntable's volume knob will not control the output through the RCA line-out.

# LINE-OUT aansluiting VOOR versterker

Sluit aan op je versterker of geluidsinstallatie.



**Figure 6:** A detailed view of the RCA Line-Out ports (Red for Right, White for Left) located on the back of the Denver Turntable, indicating connectivity options for external audio systems.

## 6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your turntable.

- **Cleaning the Unit:**

- Wipe the turntable cabinet and dust cover with a soft, slightly damp cloth. Do not use abrasive cleaners, waxes, or polishing sprays.
- Ensure the dust cover is closed when the turntable is not in use to prevent dust accumulation.

# STOFKAP MET bescherming

Stevige kap met rubberen stoppers tegen stof.



**Figure 7:** The Denver Turntable with its dust cover closed, illustrating its protective function against dust and debris, crucial for maintaining the unit and records.

- **Stylus Care:**

- The stylus (needle) is delicate. Handle it with extreme care.
- Clean the stylus periodically using a soft brush, brushing gently from back to front.
- A worn or damaged stylus can damage your records and degrade sound quality. Replace the stylus if it appears bent, chipped, or if sound quality deteriorates significantly.

- **Record Care:**

- Always handle records by their edges or label. Avoid touching the grooves.
- Store records vertically in their sleeves in a cool, dry place.
- Clean records regularly with a dedicated record cleaning brush or solution to remove dust and static.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	AC adapter not connected or power outlet not active.	Ensure AC adapter is securely connected and the power outlet is functional. Check the Power/Volume knob is turned on.

Problem	Possible Cause	Solution
No sound from speakers	Volume too low, wrong function mode, or external speakers connected.	Increase volume. Ensure Function Selector is set to "Phono" for records or "Bluetooth" for streaming. If using RCA line-out, sound will come from external speakers, not built-in ones.
Distorted or poor sound quality	Dirty stylus, dirty record, incorrect speed, or damaged stylus.	Clean stylus and record. Verify correct playback speed. Consider replacing the stylus if damage is suspected.
Record skipping	Dirty or scratched record, turntable not level, or damaged stylus.	Clean record. Ensure turntable is on a level surface. Inspect stylus for damage.
Bluetooth pairing failure	Turntable not in pairing mode, device too far, or device already paired with another unit.	Ensure Function Selector is set to "Bluetooth" and indicator is flashing. Move device closer. Disconnect from other Bluetooth devices.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Denver
Model	VPB262
Playback Speeds	33 1/3, 45, 78 RPM
Built-in Speakers	2 x 20W (2 x 2W RMS)
Connectivity	Bluetooth 5.0, RCA Line-Out
Stylus Type	Ceramic stereo pickup with ruby stylus
Special Features	Auto Stop, Dust Cover
Power Source	Electric Wired (AC Adapter)
Material	Wood
Dimensions (Package)	35.79 x 32.4 x 17.9 cm
Weight (Package)	3.48 kg

## 9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact your retailer. For technical support or service inquiries, please contact the retailer where the product was purchased or visit the official Denver website for contact information.

## Related Documents - VPB262

	<p><a href="#"><u>DENVER VPL-210 Vintage Vinyl Turntable User Manual</u></a></p> <p>Comprehensive user manual for the DENVER VPL-210 Vintage Vinyl Full Size Turntable, covering setup, operation, Bluetooth, USB/SD recording and playback, and technical specifications.</p>
	<p><a href="#"><u>Denver VPR-190MK3 Turntable User Manual and Safety Guide</u></a></p> <p>Detailed user manual for the Denver VPR-190MK3 turntable, providing essential safety information, setup instructions, operation guides for radio and phono, connection options (AUX-IN, Line Out), and comprehensive contact details.</p>
	<p><a href="#"><u>DENVER VPL-120 Instruction Manual: Suitcase Turntable Player</u></a></p> <p>Comprehensive instruction manual for the DENVER VPL-120 Suitcase Turntable Player, covering setup, operation, software installation (Audacity), recording, maintenance, and important usage notes.</p>
	<p><a href="#"><u>Denver VPL-120 Suitcase Turntable Player Instruction Manual   Setup, Operation, Recording</u></a></p> <p>Detailed user manual for the Denver VPL-120 Suitcase Turntable Player. Learn how to set up, play records, connect to a Hi-Fi system, record audio to PC using Audacity, maintain the player, and find contact information. Includes safety guidelines and technical specifications.</p>
	<p><a href="#"><u>Denver VPB-262 Turntable: User Manual, Safety, and Specifications</u></a></p> <p>Comprehensive user guide for the Denver VPB-262 record player. Includes safety instructions, operating procedures, control descriptions, maintenance tips, Bluetooth pairing, and technical specifications.</p>
	<p><a href="#"><u>Denver VPR-190MK3 Turntable User Manual and Safety Information</u></a></p> <p>This document provides comprehensive safety instructions, control descriptions, operating procedures for radio and record playback, connection guides (AUX-IN, LINE OUT), and contact details for the Denver VPR-190MK3 turntable. It also includes compliance information and technical specifications.</p>

