

ROBUD RB-3-WCF57

ROBUD WCF57 Pink Large Toy Kitchen Playset User Manual

Model: RB-3-WCF57

Brand: ROBUD

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ROBUD WCF57 Pink Large Toy Kitchen Playset. Designed for toddlers aged 3 and up, this wooden play kitchen offers a variety of interactive features to encourage imaginative play and skill development. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.



Image 1.1: The ROBUD WCF57 Pink Large Toy Kitchen Playset, featuring a sink, stove, oven, microwave, coffee maker, and toaster.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS. TOYS INTENDED TO BE ASSEMBLED BY AN ADULT.

- Always supervise children during play.
- Ensure all parts are securely fastened during assembly and periodically check for loose components.
- Keep small parts away from children under 3 years of age to prevent choking.
- This product is for indoor use only.
- Do not allow children to climb on the playset.

3. PACKAGE CONTENTS

The ROBUD WCF57 Pink Large Toy Kitchen Playset includes the main kitchen unit and various accessories to enhance playtime. Please verify all components are present before assembly.

- ROBUD Pink Play Kitchen main unit (unassembled)

- Assembly hardware (screws, dowels, etc.)
- Wooden cooking utensils (spatula, spoon, knife)
- Pots and pans
- Plates, cups, and saucers
- Pretend food items (toast, cookies, cuttable fruits/vegetables, fish)
- Ice cubes and coffee art discs
- Salt and pepper shakers



Image 3.1: A selection of included kitchen accessories, such as wooden utensils, pots, plates, and various pretend food items.

4. ASSEMBLY INSTRUCTIONS

Adult assembly is required for this playset. Please follow the step-by-step instructions provided in the separate assembly guide included with your product. Ensure all parts are correctly oriented and screws are tightened securely to maintain stability.

1. Unpack all components and verify against the parts list.
2. Organize hardware for easy access.
3. Follow the numbered steps in the assembly manual carefully.

4. Use appropriate tools as indicated in the assembly guide.
5. Periodically check all connections after assembly to ensure they remain tight.

5. PRODUCT FEATURES AND OPERATION

The ROBUD WCF57 Play Kitchen is equipped with multiple interactive features designed for realistic role-playing.

5.1. Oven and Stove

The playset includes a stove with clickable knobs and an oven with a clear door. Children can place pretend food inside the oven for baking scenarios or use the stove for cooking with the included pots and pans.



Image 5.1.1: Detailed view of the microwave, toaster, stove burners, and dishwasher/dish rack areas.

Baking Cookies:

1. Place pretend cookie dough pieces on the baking tray.
2. Open the oven door and slide the tray inside.
3. Close the oven door and turn the oven knobs to simulate baking.



Image 5.1.2: Visual guide demonstrating how to prepare and 'bake' pretend cookies using the play kitchen's oven.

Cooking on the Stove:

1. Place a pot or pan on the stove burner.
2. Turn the stove knobs to simulate cooking.
3. Use the included wooden utensils to stir or flip pretend food.

5.2. Sink and Faucet

The playset features a removable sink and a golden faucet with movable handles, allowing children to engage in pretend washing of dishes or vegetables.

Washing Vegetables:

1. Place pretend vegetables in the sink.
2. Turn the faucet handles to simulate running water.
3. Use hands to 'wash' the vegetables.



Image 5.2.1: Demonstrating pretend washing of vegetables in the sink and cooking on the stove.

5.3. Refrigerator and Ice Maker

The refrigerator compartment includes a functional ice maker. Children can insert the included ice cubes and press a lever to dispense them into a cup.

Using the Ice Maker:

1. Open the ice maker flap.
2. Place the pretend ice cubes into the designated slot.
3. Position a cup under the dispenser.
4. Press the lever to release the ice cubes into the cup.



Image 5.3.1: Step-by-step instructions for operating the ice maker feature.

5.4. Coffee Maker

The playset features a coffee maker with a rotating dial and a dispenser. Children can select different coffee art discs and place them into cups to simulate making various coffee drinks.

Making Coffee:

1. Turn the coffee maker dial to select a coffee type.
2. Place a cup under the dispenser.
3. Insert a coffee art disc into the cup.



Image 5.4.1: Visual instructions for preparing pretend coffee using the integrated coffee maker.

5.5. Toaster

A pop-up toaster is included, allowing children to place pretend bread slices inside and press a lever to make them 'pop up' when ready.

Using the Toaster:

1. Insert pretend bread slices into the toaster slots.
2. Press the lever down.
3. Release the lever to make the toast pop up.

5.6. Storage and Organization

The playset includes various storage options such as shelves, a dish rack, and cabinets to help children learn about organizing their kitchen items after play.

Dishwashing and Storage:

1. Use the pretend soap dispenser to 'wash' dishes.
2. Place clean dishes in the integrated dish rack or cabinets.
3. Store pots, pans, and other accessories in the designated compartments.

Your browser does not support the video tag.

Video 5.6.1: An official product video demonstrating various interactive features of the ROBUD Wooden Pink Play Kitchen, including baking, washing, cooking, coffee making, toast making, and dishwashing. This video is provided by the seller, Child's Growth Companion.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or fading.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Tighten any loose hardware as needed.
- **Damage:** If any part becomes damaged, discontinue use and contact customer support for replacement parts or guidance.

7. TROUBLESHOOTING

- **Loose Parts:** If any screws or connections become loose, re-tighten them using a screwdriver. Do not over-tighten.
- **Sticking Doors/Drawers:** Ensure no foreign objects are obstructing the movement. Check for proper alignment during assembly.
- **Missing Accessories:** Refer to the 'Package Contents' section. If items are missing upon arrival, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	ROBUD
Model Number	RB-3-WCF57
Item Weight	39.1 pounds
Recommended Age	3 years and up
Dimensions (Approx.)	31.2"W x 11.6"D x 35.4"H (79.5cm W x 29.5cm D x 90cm H)
Material	Wood (non-toxic, BPA-free)



Image 8.1: Visual representation of the play kitchen's dimensions.

9. WARRANTY AND SUPPORT

For warranty information, replacement parts, or customer support, please refer to the contact details provided with your purchase or visit the official ROBUD website. Keep your purchase receipt as proof of purchase.