

Eureka Forbes GFCDFCNSVVE230

Eureka Forbes Cyclo Vac GFCDFCNSVVE230 Vacuum Cleaner User Manual

Model: GFCDFCNSVVE230

1. INTRODUCTION

Thank you for choosing the Eureka Forbes Cyclo Vac GFCDFCNSVVE230 Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

2.1 General Safety

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust tank and filters in place.
- Store the appliance indoors in a cool, dry area.

2.2 Electrical Safety

- Do not handle plug or appliance with wet hands.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

3. PRODUCT OVERVIEW

The Eureka Forbes Cyclo Vac is a powerful and efficient bagless vacuum cleaner designed for various cleaning tasks.

3.1 Main Unit and Components



The Eureka Forbes Cyclo Vac main unit with its various cleaning accessories.



All components of the Cyclo Vac, including the main unit, hose, extension tubes, and various nozzles.

Your Cyclo Vac comes with the main vacuum unit, a flexible hose, two extension tubes, and six versatile accessories:

- **Floor Brush:** For general cleaning of various floor types.
- **Crevice Nozzle:** Ideal for narrow gaps and tight corners.
- **Upholstery Brush:** Designed for cleaning fabric surfaces like sofas and curtains.
- **Combination Tool cum Round Brush:** A versatile tool for delicate surfaces and electronics.
- **Extension Tube:** For reaching high or distant areas.
- **Flexible Hose:** Connects accessories to the main unit for maneuverability.

MULTIPLE ACCESSORIES FOR DEEP CLEANING



Multi Floor Brush
for all floor types




Crevice Nozzle
for narrow gaps & tight corners



Combination Tool
for delicate surfaces & electronics



Extension Tube
for hard to reach areas

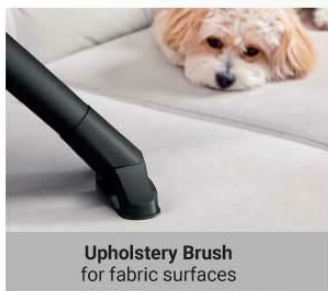

Upholstery Brush
for fabric surfaces



Flexible Hose
for easy movement



A visual representation of the six versatile accessories included with your vacuum cleaner.

3.2 Key Features

- **Cyclonic Technology:** Enhances airflow, maintains strong suction, and efficiently separates dust from the air.

CYCLONIC TECHNOLOGY

Enhanced air flow for maximum suction



Images shown is for representation only; actual product may differ.

Illustration of the cyclonic technology at work inside the dust tank, separating dust particles.

- **24 kPa High Suction Power:** Delivers deep cleaning performance, effectively lifting stubborn dust and debris.

24 kPa* POWERFUL SUCTION

Effortlessly cleans 99.9%# dust & dirt



*Maximum suction at mean sea level.
#In controlled test conditions and with specific dust particles. Actual performance may vary based on environmental factors, usage patterns, and selected models.
Product & accessories images shown is for representation only, actual product may differ.

The vacuum cleaner in action, showcasing its powerful 24 kPa suction on a floor surface.

- **2.5L Bagless Dust Tank:** Large capacity for extended cleaning sessions with hygienic one-touch emptying.

2.5L BAGLESS DUST TANK

Easy dust collection and disposal



A hand demonstrating the easy, one-touch emptying of the 2.5L bagless dust tank.

- **HEPA Filtration:** Four-stage filtration system captures dust and dirt, protecting the motor and ensuring dust-free air.
- **Vario Power Adjustable Suction:** Customize suction levels from low to high for different cleaning needs.
- **Auto Cord Winder:** Retracts the power cord neatly into the unit with a press of a button.
- **Overheat Protection:** Automatic shut-off feature to safeguard the motor from damage.
- **Compact and Mobile:** Designed for easy portability with large wheels and a generous ~16-foot cord.

4. SETUP

Follow these steps to set up your Eureka Forbes Cyclo Vac:

1. **Unpack:** Carefully remove all components from the packaging. Ensure all accessories listed in Section 3.1 are present.
2. **Assemble Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Attach Extension Tubes:** Connect the two extension tubes together, then attach them to the handle end of the flexible hose.

4. **Select and Attach Accessory:** Choose the appropriate cleaning accessory (e.g., Floor Brush) for your task and firmly attach it to the end of the extension tubes.
5. **Connect to Power:** Extend the power cord and plug it into a suitable 220V electrical outlet.

5. OPERATING INSTRUCTIONS

Operating your Cyclo Vac is straightforward:

1. **Power On:** Press the ON/OFF button located on the main unit to start the vacuum cleaner.
2. **Adjust Suction (Vario Power):** Use the Vario Power control knob to adjust the suction strength. Turn it to a lower setting for delicate surfaces like upholstery or curtains, and to a higher setting for deep cleaning carpets or hard floors.
3. **Begin Cleaning:** Move the chosen accessory over the surface to be cleaned. For optimal results, use slow, overlapping strokes.
4. **Change Accessories:** To change an accessory, turn off the vacuum cleaner, unplug it, and then detach the current accessory by pressing any release buttons and pulling it off. Attach the new accessory firmly.
5. **Power Off:** Once cleaning is complete, press the ON/OFF button to turn off the appliance.
6. **Retract Cord:** Press the auto cord winder button to automatically retract the power cord into the unit.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Emptying the Dust Tank

The 2.5L bagless dust tank should be emptied regularly, especially when the dust level reaches the 'MAX' indicator.

1. Ensure the vacuum cleaner is switched off and unplugged.
2. Press the dust tank release button and lift the dust tank from the main unit.
3. Position the dust tank over a waste bin.
4. Press the one-touch emptying button to open the bottom flap and release the collected dirt.
5. Close the flap securely and re-insert the dust tank into the main unit until it clicks.

6.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned periodically to maintain suction power and air quality. **Do not wet clean the HEPA filter.**

1. Turn off and unplug the vacuum cleaner.
2. Remove the dust tank as described above.
3. Locate and remove the HEPA filter from the dust tank assembly.
4. Gently tap the filter over a waste bin to dislodge accumulated dust. You may also use a soft brush to remove stubborn debris.
5. Re-insert the clean HEPA filter and re-attach the dust tank.

6.3 Cleaning Accessories

Wipe accessories with a damp cloth as needed. Ensure they are completely dry before re-attaching them to the vacuum cleaner.

7. TROUBLESHOOTING

If you encounter issues with your Cyclo Vac, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on	Not plugged in; Power outlet faulty; ON/OFF button not pressed; Overheat protection activated.	Check plug connection; Try another outlet; Press ON/OFF button firmly; Allow unit to cool down for 30 minutes.
Low suction power	Dust tank full; HEPA filter clogged; Hose/accessories blocked; Suction power setting too low.	Empty dust tank; Clean HEPA filter; Check and clear blockages; Adjust Vario Power to a higher setting.
Unusual noise	Blockage in hose/accessories; Motor issue.	Check and clear blockages. If noise persists, contact customer support.
Vacuum cleaner overheats and shuts off	Prolonged use; Clogged filter/dust tank; Blockage.	This is the overheat protection feature. Turn off and unplug the unit. Allow it to cool for at least 30 minutes. Check and clean dust tank and filters, and clear any blockages.

If the problem persists after trying these solutions, please contact Eureka Forbes customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Eureka Forbes
Model Name	GFCDFCNSVVE230
Power Source	Corded Electric
Voltage	220 Volts
Wattage	1200 Watts
Suction Power	24 kPa
Dust Tank Capacity	2.5 Liters
Filter Type	HEPA Filter (4-stage filtration)
Cord Length	Approx. 16 feet

Feature	Detail
Item Weight	6 Kilograms
Dimensions (L x W x H)	40L x 40W x 53H Centimeters
Noise Level	78 Decibels
Special Features	Cyclonic Technology, High Suction Power, Energy-Efficient, Bagless, Versatile Accessories, Overheat Protection, Adjustable Suction (Vario Power), Auto Cord Winder



Visual representation of the vacuum cleaner's dimensions.

9. WARRANTY & SUPPORT

Eureka Forbes is committed to providing excellent customer service.

9.1 Warranty Information

Your Eureka Forbes Cyclo Vac comes with a standard manufacturer's warranty. For details regarding the warranty period and terms, please refer to the warranty card included with your product or visit the official Eureka Forbes website.

Extended warranty plans are also available:

- 1 Year Extended Warranty Plan by Onsitego
- 2 Year Extended Warranty Plan by Onsitego

9.2 Customer Support

For any queries, assistance, or to book a demo, please contact Eureka Forbes customer support:

- **Toll-Free Call:** 02262277488 (Customer service support available from 8 AM to 8 PM).
- **Online Demo:** Free online demo for setup & installation available in 6 languages.
- **Service Network:** Widest service network covering over 19,000 Pincodes.

INDIA'S LARGEST & WIDEST SERVICE NETWORK



Widest Service Network
Covering Over **19,000 Pincodes**



12-Hour## Support Via
Toll-Free Call



Get **Free Online Demo** For Setup &
Installation In 6 Languages



Call 02262277488 To Book Your
Free At-Home Demo



##Customer service support available from 8 AM to 8 PM.

Eureka Forbes' extensive service network and support options.



© 2026 Eureka Forbes. All rights reserved.