

[manuals.plus](#) /› [LEGO](#) /› [LEGO Spring Festival Fortune Firecracker Building Toy \(Model 80118\) Instruction Manual](#)

LEGO 80118

LEGO Spring Festival Fortune Firecracker Building Toy (Model 80118) Instruction Manual

Model: 80118 | Pieces: 1,039 | Recommended Age: 9+

1. INTRODUCTION

The LEGO Spring Festival Fortune Firecracker Building Toy (Model 80118) is an interactive construction set designed to celebrate Chinese New Year and Lunar New Year traditions. This 1,039-piece set allows builders aged 9 and up to create a detailed, wall-mountable firecracker model featuring realistic sound effects and two interchangeable celebratory scenes. The set includes six unique minifigures, enhancing its play and display value.



Figure 1: The LEGO Spring Festival Fortune Firecracker (Model 80118) set, showing the product box and the fully assembled model.

2. SETUP AND ASSEMBLY

Assembly of the LEGO Fortune Firecracker (Model 80118) is guided by a comprehensive instruction manual included in the box. The building process is divided into numbered bags, corresponding to sequential steps in the manual, ensuring a clear and manageable construction experience.

2.1 Unpacking the Set

- Carefully open the product box and remove all contents.
- Organize the numbered bags and the instruction manual.
- Ensure all 1,039 pieces are accounted for before beginning assembly.

2.2 Building the Firecracker Model

Follow the step-by-step instructions provided in the included manual. Each section of the build is clearly illustrated, guiding you through the construction of the main firecracker structure, the internal scene mechanisms, and the decorative elements.



Build firework display & family celebration scenes



Figure 2: A child engaged in the assembly process of the LEGO Fortune Firecracker, illustrating the detailed building experience.

2.3 Minifigure Assembly

The set includes six minifigures: two grandparents, one adult, two children, and the God of Fortune. Assemble each minifigure according to the instructions, paying attention to their unique accessories and attire.



Figure 3: The six minifigures from the set, including the God of Fortune, ready for creative storytelling.

3. OPERATING INSTRUCTIONS

The LEGO Fortune Firecracker is designed with interactive features for an engaging experience.

3.1 Activating Sound Effects

The firecracker model features LEGO bricks inside that rattle to create realistic crackling sounds when the model is moved. Gently shake or move the assembled firecracker to activate this sound effect.

3.2 Revealing Celebratory Scenes

Press the designated button on the model to reveal one of two celebratory scenes hidden inside the firecracker. These scenes depict either a dazzling firework display or a traditional gathering welcoming the God of Fortune. The scenes are interchangeable, allowing for varied display and play.



Figure 4: A close-up view of the interactive reveal feature, showing one of the two celebratory scenes inside the firecracker.

3.3 Display Options

The Fortune Firecracker model can be hung on a wall as a festive Chinese New Year decoration. Ensure it is securely mounted to prevent accidental falls.



Figure 5: The assembled Fortune Firecracker model displayed as wall art, showcasing its decorative potential.

3.4 Official Product Video

For a visual guide on the features and operation of the LEGO Spring Festival Fortune Firecracker, please watch the official product video below.

Video 1: Official LEGO video demonstrating the features and interactive elements of the Spring Festival Fortune Firecracker (Model 80118).

4. MAINTENANCE

Proper care ensures the longevity and appearance of your LEGO set.

4.1 Cleaning

- Use a soft, dry cloth to gently wipe away dust from the model.
- For more thorough cleaning, use a mild soap solution and a soft brush, then rinse with clean water and air dry. Avoid harsh chemicals.

4.2 Storage

- Store the set in a cool, dry place away from direct sunlight to prevent discoloration of the bricks.

- If disassembling for storage, keep all pieces in a sealed container to prevent loss.

5. TROUBLESHOOTING

If you encounter any issues with your LEGO Spring Festival Fortune Firecracker set, refer to the following common solutions.

5.1 Missing Pieces

- Double-check all packaging and bags. Sometimes small pieces can be overlooked.
- If pieces are genuinely missing, contact LEGO Customer Service for replacements.

5.2 Scene Mechanism Not Functioning

- Ensure all connecting bricks in the scene reveal mechanism are firmly pressed together.
- Verify that no loose pieces are obstructing the movement of the internal parts.

5.3 Crackling Sound Not Heard

- Confirm that the internal rattling bricks are correctly installed as per the instructions.
- Gently move the firecracker model to ensure the internal elements can freely rattle.

6. SPECIFICATIONS

Feature	Detail
Model Number	80118
Piece Count	1,039
Recommended Age	9 years and up
Product Dimensions (assembled)	Over 18.5 in. (47 cm) high, 10.5 in. (27 cm) wide, and 2.5 in. (7 cm) deep
Item Weight	2.55 pounds
Interactive Features	Realistic crackling sound effects, two interchangeable celebratory scenes
Minifigures Included	6 (2 grandparents, 1 adult, 2 children, 1 God of Fortune)

7. WARRANTY AND SUPPORT

LEGO products are manufactured to high-quality standards. For information regarding product warranty, missing parts, or any other support needs, please visit the official LEGO customer service website or refer to the contact information provided in the product packaging.

Online support can be found at: www.lego.com/service

