



Manuals.plus /

› WONDER /

› Wonder WL8204AI 8kg Front-Load Washing Machine User Manual

WONDER WL8204AI

Wonder WL8204AI 8kg Front-Load Washing Machine

User Manual

1. INTRODUCTION

Thank you for choosing the Wonder WL8204AI 8kg Front-Load Washing Machine. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that are soiled with flammable substances.
- Keep the area around the washing machine clear of obstructions.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. The package includes the washing machine and this instruction manual. Inspect the appliance for any damage during transit. Keep packaging materials away from children.

3.2 Removing Transit Bolts

Before operating the washing machine, it is crucial to remove all transit bolts located at the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent damage during operation. Refer to the diagram below for bolt locations.



Image: Side view of the washing machine. Transit bolts are typically located on the back panel, not visible in this side view, but this image shows the appliance's overall form factor.

3.3 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and maintenance. The dimensions of the washing machine are approximately 84.5 cm (height) x 59.8 cm (width) x 45 cm (depth). The appliance weighs 52 kg.

3.4 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. The drain hose should be securely placed into a standpipe or laundry tub, ensuring it is not kinked or blocked.

3.5 Electrical Connection

Connect the power cord to a grounded electrical outlet. The washing machine operates at 1600W. Ensure the power supply matches the requirements specified on the appliance's rating label.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features an electronic control system with an LED display and a rotary program selector. Buttons for temperature, delayed start, and start/pause are also present.



Image: Control panel with program dial, LED display, and function buttons.

4.2 Loading Laundry

Open the front door and load laundry into the drum. Do not overload the machine; the maximum capacity is 8 kg. Ensure no items are caught in the door seal before closing the door firmly.

4.3 Detergent Dispenser

Add appropriate detergent and fabric softener to the designated compartments in the dispenser drawer. Refer to your detergent packaging for recommended dosages.

4.4 Program Selection

Turn the program selector dial to choose one of the 11 available wash programs:

- **Centrifugado:** Spin cycle only.
- **Aclarado y Centrifugado:** Rinse and spin cycle.
- **Vapor:** Steam program for enhanced cleaning and wrinkle reduction.
- **Delicados:** For delicate fabrics.
- **Sintéticos:** For synthetic items.
- **Limpieza Tambor:** Drum cleaning program.
- **Mixto:** Mixed load program.
- **Eco 40-60:** Energy-efficient program for cottons and mixed items at 40-60°C.
- **Algodón 20°C:** Cotton wash at 20°C.
- **Rápido 30':** Quick wash program (30 minutes).
- **Rápido 15':** Super quick wash program (15 minutes).

4.5 Function Buttons

- **Temperatura:** Press to adjust the wash temperature.
- **Diferido:** Press to set a delayed start time for the wash cycle.
- **Inicio/Pausa:** Press to start or pause the selected wash program. Hold for 3 seconds to activate the Stop&Go function (add/remove items).

4.6 Starting a Cycle

After selecting the program and any desired functions, press the 'Inicio/Pausa' button to start the wash cycle. The LED display will show the remaining time.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your washing machine.

- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Detergent Dispenser:** Remove and clean the detergent dispenser drawer regularly to prevent residue buildup.
- **Drum Cleaning:** Use the 'Limpieza Tambor' program periodically to clean the drum and remove any odors or residue.
- **Drain Filter:** Clean the drain filter located at the bottom front of the machine regularly to prevent blockages. Refer to the full manual for detailed instructions on accessing and cleaning the filter.
- **Door Seal:** Wipe the door seal after each wash to remove lint and moisture, preventing mold growth.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Program not selected; 'Inicio/Pausa' not pressed.	Check power connection; Ensure door is latched; Select a program; Press 'Inicio/Pausa'.
No water intake	Water tap closed; Water inlet hose kinked; Water supply pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Check and clear drain hose; Clean the drain filter.
Excessive vibration/noise	Transit bolts not removed; Machine not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry in the drum.

7. SPECIFICATIONS

Feature	Specification
Model	WL8204AI
Brand	WONDER
Capacity	8 kg
Spin Speed	1200 rpm
Motor Type	Inverter Motor
Energy Efficiency Class	A
Noise Level (Spin)	72 dB
Number of Programs	11
Drum Type	Stainless Steel Diamond Drum
Control Type	Electronic with LED Display, Touch
Dimensions (H x W x D)	84.5 x 59.8 x 45 cm
Weight	52 kg
Power	1600W
EPREL Product Page	https://eprel.ec.europa.eu/qr/2304447


For detailed energy consumption and program information, please refer to the official energy label and product information sheet:



ENERG ⚡






38 kWh / 



8,0 kg

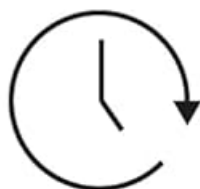


3:38



40 L



A **B** C D E F G

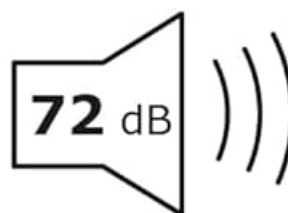

A **B** C D

Image: Energy label for Wonder WL8204AI.

Ficha de información del producto					
REGLAMENTO DELEGADO (UE) 2019/2014 DE LA COMISIÓN en lo relativo al etiquetado energético de las lavadoras domésticas y las lavadoras-secadoras domésticas					
Nombre o marca comercial del proveedor: WONDER					
Dirección del proveedor: Wonder, Avd. del Este 34, 30100 Murcia, ES					
Identificador del modelo: WL8204AI					
Parámetros generales del producto:					
Parámetro	Valor	Parámetro	Valor		
Capacidad asignada ^(a) (kg)	8,0	Dimensiones en cm	Altura	85	
			Anchura	60	
			Profundidad	45	
Índice de eficiencia energética ^(a) (IEE _w)	41,6	Clase de eficiencia energética ^(a)	A		
Índice de eficiencia de lavado ^(a)	1,031	Eficacia del aclarado (g/kg) ^(a)	5,0		
Consumo de energía en kWh por ciclo, sobre la base del programa «eco 40-60» en una combinación a plena carga y con parte de la carga. El consumo real de energía dependerá de cómo se utilice el aparato.	0,378	Consumo de agua en litros por ciclo, sobre la base del programa «eco 40-60» en una combinación a plena carga y con parte de la carga. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	40		
Temperatura máxima dentro de la ropa tratada ^(a) (°C)	Capacidad asignada	30	Contenido de humedad residual ponderado ^(a) (%)	53,9	
	Mitad				25
	Cuarta parte				22
Velocidad de centrifugado ^(a) (rpm)	Capacidad asignada	1 200	Clase de eficiencia de centrifugado ^(a)	B	
	Mitad				1 200
	Cuarta parte				1 200
Duración del programa ^(a) (h:min)	Capacidad	3:38	Tipo	de libre instalación	

asignada			
Mitad	2:48		
Cuarta parte	2:48		
Ruido acústico aéreo emitido en la fase de centrifugado ^(a) (dB(A) re 1 pW)	72	Clase de ruido acústico aéreo emitido ^(a) (fase de centrifugado)	A
Modo apagado (W) (si procede)	0,50	Modo preparado (W) (si procede)	0,50
Inicio aplazado (W) (si procede)	4,00	Modo preparado en red (W) (si procede)	No aplicable
Duración mínima de la garantía ofrecida por el proveedor: 36 meses			
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado		NO	
Información adicional:			
Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: https://svanelectro.com/			
(a) para el programa «eco 40-60»			
Modelo introducido en el mercado de la Unión desde 14/07/2025			
Número de registro EPREL: 2304447		https://eprel.ec.europa.eu/qr/2304447	
Proveedor: SVAN TRADING. SL (Importador)		Sitio web:	
Servicio de atención al cliente:		Sitio web:	
Nombre: Wonder		Teléfono: 960 600 034	
Correo electrónico: info@wonderelectro.com		Dirección:	
Dirección:		España	
Avd. del Este 34		30100	
España			

Página 1 / 2

Página 2 / 2

Image: Product information sheet with detailed specifications.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Wonder washing machine comes with a minimum warranty period of 36 months provided by the manufacturer. Please retain your proof of purchase for warranty claims.

8.2 Contact Information

For technical support, service, or warranty inquiries, please contact Wonder customer service:

- **Manufacturer:** Wonder
- **Address:** Avd. del Este 34, 30100 Murcia, ES
- **Email:** info@wonderelectro.com
- **Phone:** 960 600 034