



Manuals.plus /

› Leiksen /

› Leiksen 12-in-1 Powerful Steam Mop Model 1 Instruction Manual

Leiksen 1

Leiksen 12-in-1 Powerful Steam Mop Model 1 Instruction Manual

Your guide to effective and chemical-free cleaning.

INTRODUCTION

Thank you for choosing the Leiksen 12-in-1 Powerful Steam Mop Model 1. This versatile cleaning device utilizes high-temperature steam to clean and sanitize various surfaces in your home without the need for harsh chemicals. Its multi-functional design allows it to transform from an upright steam mop to a handheld steamer, providing comprehensive cleaning solutions for floors, carpets, windows, upholstery, and more. Please read this manual thoroughly before operating the device to ensure safe and efficient use.



Image: Leiksen 12-in-1 Powerful Steam Mop in its upright configuration.

SAFETY INFORMATION

- Always use distilled or demineralized water to prevent mineral buildup and extend the life of your steam mop.
- Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the unit and void the warranty.
- Keep the steam mop and its accessories out of reach of children and pets.
- Exercise extreme caution when using steam, as it is very hot and can cause burns. Keep hands, face, and body away from steam vents.
- Never direct steam at people, animals, or electrical appliances.
- Unplug the device from the power outlet before filling or emptying the water tank, changing accessories, or performing maintenance.
- Ensure the power cord is not damaged and avoid kinking or stretching it.
- Do not use the steam mop on unsealed hardwood floors, delicate fabrics, or surfaces that are not heat-

resistant.

PACKAGE CONTENTS

Your Leiksen 12-in-1 Powerful Steam Mop package includes the following components:

- Main Steam Unit
- Extension Pole
- Handle
- Floor Mop Head
- 2 x Microfiber Mop Pads
- Carpet Glider Attachment
- Straight Nozzle
- Bent Nozzle
- Large Round Nylon Brush
- Small Round Nylon Brush
- Copper Bristle Brush
- Glass Scraper Tool
- Mini Scraper Tool
- Cloth Attachment for Garment Steaming
- Measuring Cup
- Instruction Manual

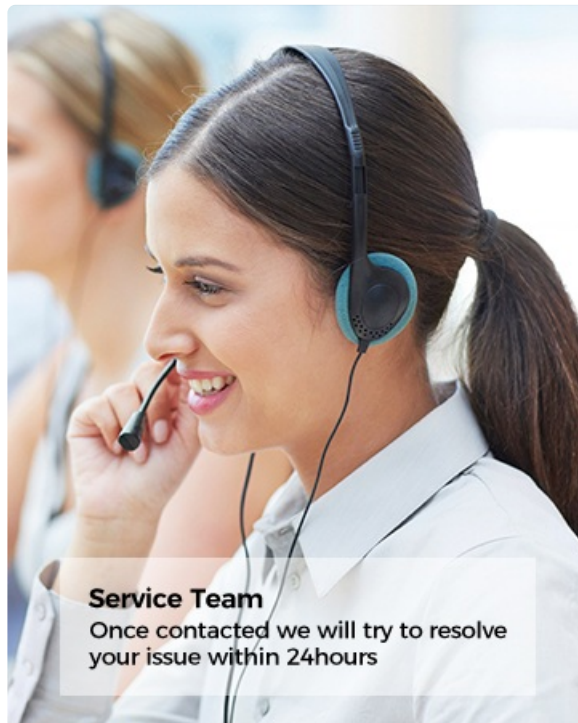


Image: All included accessories and the main unit of the Leiksen Steam Mop.

SETUP

1. Assembly

1. Connect the handle to the extension pole by aligning the connectors and pushing until it clicks into place.
2. Attach the assembled pole to the main steam unit in the same manner.
3. Secure the floor mop head to the bottom of the main steam unit.
4. Attach a microfiber mop pad to the bottom of the floor mop head using the Velcro fasteners.

2. Filling the Water Tank

1. Ensure the steam mop is unplugged from the power outlet.
2. Locate the water tank on the main unit and gently pull it out.
3. Open the rubber flap on the water tank.
4. Using the provided measuring cup, carefully fill the water tank with distilled or demineralized water. Do not overfill. The tank has a capacity of 550 milliliters.
5. Close the rubber flap securely and reinsert the water tank into the main unit until it clicks into place.

Your browser does not support the video tag.

Video: Quick tour of features, assembly, water filling, and cleaning demonstrations.

OPERATING INSTRUCTIONS

1. Powering On and Preheating

1. Plug the power cord into a suitable electrical outlet.
2. Press the power button on the main unit. The preheating indicator (red wavy lines) will illuminate and blink.
3. Wait approximately 10-15 seconds for the unit to preheat. The preheating indicator will stop blinking when ready.

2. Selecting Steam Mode

Press the mode button (circle icon) to cycle through the available steam settings:

- **Low Steam:** Indicated by a blue steam icon. Ideal for delicate surfaces or light cleaning.
- **High Steam:** Indicated by a green steam icon. Suitable for stubborn stains and heavy-duty cleaning.

3. Using as an Upright Steam Mop

For cleaning hard floors (hardwood, tile, marble) or refreshing carpets:

1. Ensure the microfiber mop pad is attached to the floor mop head. For carpets, place the floor mop head with the pad into the carpet glider attachment.
2. Select your desired steam mode.
3. Slowly move the steam mop back and forth over the surface to be cleaned. The steam will be released automatically.
4. For heavily soiled areas, hold the mop over the spot for a few seconds to allow the steam to penetrate.

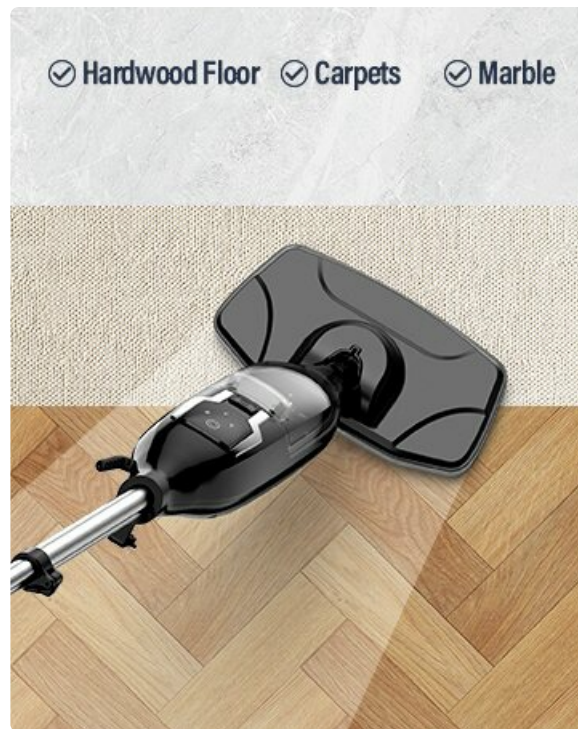


Image: Steam mop effectively cleaning different floor surfaces.

4. Using as a Handheld Steamer

For targeted cleaning of various surfaces:

1. Unplug the unit. Detach the extension pole and floor mop head from the main steam unit.
2. Attach the handheld handle to the main steam unit.
3. Select the appropriate nozzle or brush for the task:
 - **Straight Nozzle:** For general spot cleaning and hard-to-reach areas.
 - **Bent Nozzle:** Ideal for cleaning around faucets, toilet bases, and other curved surfaces.
 - **Round Nylon Brushes (Large/Small):** For scrubbing grout, tile, and other durable surfaces.
 - **Copper Bristle Brush:** For very tough grime on resilient surfaces like oven racks.
 - **Glass Scraper Tool:** For streak-free cleaning of windows, mirrors, and glass surfaces.
 - **Mini Scraper Tool:** For removing baked-on food or sticky residues.
 - **Cloth Attachment:** Place over a brush for steaming garments or delicate upholstery.
- Plug in the unit, power on, and select your steam mode.
- Direct the steam and attachment towards the area to be cleaned.



Image: Handheld steamer in action with specialized attachments.

MAINTENANCE

1. Cleaning Microfiber Pads

The microfiber mop pads are machine washable. Wash them with similar colors and air dry. Do not use bleach or fabric softeners, as these can reduce their cleaning effectiveness.

2. Emptying the Water Tank

After each use, ensure the unit is unplugged and cooled down. Remove the water tank and empty any remaining water. This prevents stagnant water and potential mineral buildup.

3. Descaling (as needed)

Over time, mineral deposits can build up inside the unit, especially if tap water is used. If you notice reduced steam output, descaling may be necessary. Consult the manufacturer's website or customer support for specific descaling instructions for your model.

4. Storage

Store the steam mop in a cool, dry place. Ensure the power cord is neatly wrapped around the cord hooks on the unit to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Unit not preheated; Mineral buildup; Nozzle clogged.	Refill water tank; Wait for preheating indicator to stabilize; Perform descaling; Clean nozzle.
Water leaking from unit	Water tank not properly seated; Overfilled water tank; Damaged seal.	Ensure water tank is securely in place; Do not overfill; Contact customer support if seal is damaged.
Unit not turning on	Not plugged in; Power outlet malfunction; Unit malfunction.	Check power connection; Try a different outlet; Contact customer support.
Handle detaches during use	Handle not securely attached.	Ensure handle is fully inserted and clicks into place.

SPECIFICATIONS

- **Brand:** Leiksen
- **Model Name:** 1
- **Power Source:** Electric
- **Wattage:** 220W
- **Maximum Temperature:** 260 Degrees Fahrenheit (126.6 Degrees Celsius)
- **Item Weight:** 2.83 Kilograms (approx. 6.24 lbs)
- **Tank Volume:** 550 Milliliters (approx. 18.6 fl oz)
- **Form Factor:** Handheld, Upright
- **Special Feature:** Adjustable Height
- **Surface Recommendation:** Hardwood, Tile, Carpet, Marble, Glass, Upholstery

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the contact details provided on the product packaging or visit the official Leiksen website. Keep your purchase receipt as proof of purchase for any warranty claims.

Leiksen is committed to providing high-quality products and customer satisfaction. If you encounter any issues or have questions not covered in this manual, please do not hesitate to contact our customer service team.