

Manuals.plus /

› Vozascly /

› Vozascly W15 Smart Cordless 3-in-1 Floor Washer Instruction Manual

Vozascly W15

Vozascly W15 Smart Cordless 3-in-1 Floor Washer Instruction Manual

Model: W15

1. INTRODUCTION

Thank you for choosing the Vozascly W15 Smart Cordless 3-in-1 Floor Washer. This innovative appliance is designed to simplify your cleaning routine by vacuuming, washing, and mopping in a single pass. It is suitable for various sealed hard floor surfaces, including tiles, marble, wood, and laminate, as well as low-pile carpets. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Key Features:

- **3-in-1 Cleaning:** Vacuums, washes, and mops simultaneously.
- **Cordless Design:** Offers freedom of movement without power cord limitations.
- **Long Runtime:** Up to 45 minutes of continuous cleaning on a single charge.
- **Dual Tank System:** Separate 910ml clean water tank and 600ml dirty water tank for hygienic cleaning.
- **Self-Propelled Brush Roll:** Reduces effort during operation.
- **Edge Cleaning:** Designed to clean close to baseboards and corners (up to 6mm).
- **Smart Features:** LED display and voice prompts for real-time status updates.
- **Self-Cleaning Function:** Automatic cleaning of the brush roll and tubes.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the components included in your Vozascly W15 package:



Image: Vozasclly W15 Smart Cordless 3-in-1 Floor Washer and included accessories.

- Vozasclly W15 Floor Washer Unit (1)
- Cleaning Brush (1)
- HEPA Filter (2)

- Brush Roll (2)
- Charging Base (1)
- Power Adapter (1)

3. SETUP

3.1 Assembly

1. Carefully unpack all components from the packaging.
2. Insert the handle into the main body of the floor washer until it clicks securely into place.
3. Ensure the clean water tank and dirty water tank are correctly installed.

3.2 Initial Charging

1. Place the floor washer on its charging base.
2. Connect the power adapter to the charging base and then to a power outlet.
3. Allow the unit to fully charge before first use. The LED display will indicate charging status and battery level.

3.3 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean tap water. For enhanced cleaning, a small amount of non-foaming floor cleaning solution suitable for floor washers can be added (refer to solution manufacturer's instructions). Do not exceed the MAX fill line.
3. Securely close the cap and reattach the clean water tank to the unit.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Mode Selection

1. To power on, press the Power button located on the handle. The unit will start in its default cleaning mode.
2. To switch between cleaning modes (e.g., standard, strong, suction-only), press the Mode button on the handle. The LED display will show the current mode.
3. To power off, press and hold the Power button.

Stato Chiaro, Pieno Controllo

Display In Tempo Reale Della Batteria E Della Modalità
Per Un'Operazione Senza Problemi



Image: Voasclly W15 LED display providing real-time battery status and cleaning mode for easy operation.

4.2 Cleaning Operation

The Voasclly W15 is designed for efficient cleaning of various messes:

Reinigt alle Arten von versiegelten Oberflächen

Für Hartböden, Fliesen, Stein, Laminat und Teppiche.



Image: Vozasclly W15 cleaning various sealed surfaces including hard floors, tiles, stone, laminate, and carpets.

- **Self-Propelled Movement:** The brush roll assists in moving the unit forward and backward, reducing physical effort. Simply guide the cleaner.
- **Wet and Dry Cleaning:** The unit effectively handles both wet spills and dry debris, including pet hair, crumbs, and sticky messes.
- **Edge Cleaning:** The brush head is designed to clean close to edges and corners, reaching within 6mm of baseboards.

Kantenreinigung

Einfaches Auffangen von Staub und Partikeln in Ecken und Kanten, so dass der Schmutz nicht entweichen kann



Ecke



Treppe



Image: Voasclly W15 performing precise edge cleaning, reaching within 6mm of baseboards and corners.

4.3 Voice Prompts and LED Display

The Voasclly W15 provides real-time updates through voice prompts and its intuitive LED display. These alerts inform you about battery status, cleaning mode, and maintenance reminders (e.g., "empty dirty water tank").

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Voasclly W15.

5.1 Self-Cleaning Cycle

1. After each use, place the floor washer on its charging base.
2. Ensure there is sufficient clean water in the clean water tank.
3. Press the dedicated self-clean button (often indicated by a water droplet icon) on the handle or base. The unit will automatically clean the brush roll and internal tubes.
4. Once the cycle is complete, empty the dirty water tank.

Pulisci Tutta La Tua Casa Con Una Sola Carica

Nessuna Interruzione, Solo Risultati Puliti



Image: Vozasclly W15 on its charging and self-cleaning dock, ready for automatic brush and tube cleaning.

5.2 Emptying and Cleaning the Dirty Water Tank

1. Remove the dirty water tank from the main unit.
2. Open the tank and carefully pour out the dirty water.
3. Rinse the tank thoroughly with clean water. Use the provided cleaning brush to remove any debris or residue.
4. Allow the tank to air dry completely before reattaching.

Serbatoio Grande, Alta Efficienza

Meno Interruzioni, Più Potenza Di Pulizia



Image: Vozasclly W15 with large 910ml clean water tank and 600ml dirty water tank for extended cleaning.

5.3 Cleaning and Replacing the Brush Roll

1. Ensure the unit is powered off.
2. Open the brush roll cover.
3. Remove the brush roll. Use the cleaning brush to remove any tangled hair or debris.
4. Rinse the brush roll under running water. Allow it to air dry completely.
5. Replace the brush roll when worn or damaged. Insert the new brush roll and close the cover securely.

5.4 Cleaning and Replacing the HEPA Filter

1. Ensure the unit is powered off.
2. Locate and remove the HEPA filter, typically found near the dirty water tank.
3. Tap the filter gently to remove loose dust. If necessary, rinse under cold running water. Do not scrub.
4. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use the unit with a wet filter.
5. Replace the HEPA filter every 3-6 months, or as needed, to maintain optimal suction performance.

6. TROUBLESHOOTING

If you encounter any issues with your Vozascly W15, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on	Low battery; Power adapter not connected; Unit not properly assembled	Charge the unit; Ensure power adapter is securely connected; Check assembly of handle and tanks
Poor suction or cleaning performance	Dirty water tank full; Clean water tank empty; Clogged brush roll; Dirty HEPA filter	Empty dirty water tank; Refill clean water tank; Clean brush roll; Clean or replace HEPA filter
Water leakage	Tanks not properly installed; Tank caps not sealed; Unit tilted excessively	Ensure tanks are securely in place; Check tank caps for proper seal; Operate the unit upright
Brush roll not spinning	Brush roll jammed by debris; Brush roll not installed correctly	Remove debris and clean brush roll; Reinstall brush roll correctly
Voice prompts not clear or too loud/quiet	Volume settings; Language settings	Refer to the product's quick start guide or online resources for adjusting voice settings.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- **Model:** W15
- **Brand:** Vozascly
- **Color:** Black
- **Dimensions:** 19.1 x 44 x 32.7 cm
- **Weight:** 6.87 kg
- **Battery Autonomy:** Up to 45 minutes
- **Clean Water Tank Capacity:** 910 ml
- **Dirty Water Tank Capacity:** 600 ml
- **Filter Type:** HEPA Filter
- **Special Features:** Wet/Dry cleaning, Cordless, Self-propelled, Voice prompts, LED display

8. WARRANTY AND SUPPORT

Your Vozascly W15 Floor Washer comes with a **2-year warranty** from the date of purchase, covering manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Vozascly customer support. Our team is available 24/7 to provide assistance.

Customer Support:

- Refer to the contact information provided on the product packaging or the official Vozascly website.
- Online video tutorials are also available for common operations and maintenance tasks.