



Manuals.plus /

› KICKER /

› KICKER TW3 Wireless Earbuds with Active Noise Cancellation User Manual

KICKER TWS3

KICKER TW3 Wireless Earbuds with Active Noise Cancellation User Manual

Model: TWS3

INTRODUCTION

Thank you for choosing KICKER TW3 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as Hybrid Active Noise Cancellation (ANC) and Environmental Noise Cancellation (ENC) for clear calls. Enjoy extended listening times, intuitive touch controls, and a durable, sweatproof design suitable for various activities.

WHAT'S IN THE BOX

- KICKER TW3 Wireless Earbuds
- Recharging Carrying Case
- USB-C Charging Cable
- Three (3) Sizes of Rubber Ear Tips (S, M, L)
- Quick Start Guide / User Manual

Featuring ENC and ANC







ENVIRONMENTAL NOISE CANCEL	HYBRID ACTIVE NOISE CANCEL
Make your voice clearer	Block outside noise
 CALLS	 AIRPLANE
 VIDEO MEETINGS	 OFFICE
 WEB STREAMING	 CAFÉ



Image: Contents of the KICKER TW3 Earbuds box, including the earbuds, charging case, USB-C cable, and various sizes of ear tips.

PRODUCT OVERVIEW



Image: The KICKER TW3 Wireless Earbuds resting inside their sleek black charging case.

Dual Mics for Clear ENC Talking



Image: A close-up view of a KICKER TW3 earbud, illustrating its noise reduction feature with a graphic showing noise being reduced by 35dB.

SETUP

1. Fitting Ear Tips

Select the ear tips (Small, Medium, Large) that provide the most comfortable and secure fit for your ears. A proper seal is crucial for optimal sound quality and noise cancellation. Insert the earbud into your ear and gently twist it until it feels snug.



Image: A diagram illustrating the correct way to insert the earbuds and the three available ear tip sizes (S, M, L) for a comfortable fit.

2. Initial Charging

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case and connect the USB-C cable to the case and a power source. The indicator light on the case will show charging status.

3. Pairing with Your Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), go to Bluetooth settings.
3. Select "KICKER TW3" from the list of available devices.
4. Once connected, you will hear a confirmation tone, and the earbuds are ready for use.



Image: An icon representing Bluetooth wireless earbuds with auto-pairing functionality to a smartphone or device.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off. Earbuds will also auto power off after 3 minutes of no signal.

Touch Controls

The KICKER TW3 earbuds feature intuitive touch sensors on each earbud for easy control of music, calls, and noise modes.

Sensor Touch Control



PLAY/PAUSE



PREVIOUS SONG



NEXT SONG



VOICE ASSISTANCE



ANC ON/OFF
TRANSPARENCY



ANSWER CALL



END CALL



REJECT CALL

Image: A visual guide to the touch controls on the KICKER TW3 earbuds, showing actions for play/pause, previous/next song, voice assistance, ANC on/off/transparency, answer/end call, and reject call.

Action	Control
Play/Pause	Single tap on either earbud
Next Song	Double tap right earbud
Previous Song	Double tap left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Long press on either earbud
Activate Voice Assistant	Triple tap on either earbud
Switch ANC/Transparency Mode	Long press on either earbud (when not on a call)

Active Noise Cancellation (ANC) & Environmental Noise Cancellation (ENC)

The TW3 earbuds feature Hybrid Active Noise Cancellation, reducing ambient noise by up to -35dB, allowing you to focus on your audio. Transparency mode can be activated to hear your surroundings when needed. Environmental Noise Cancellation with dual microphones ensures your voice is clear during calls by blocking background chatter.

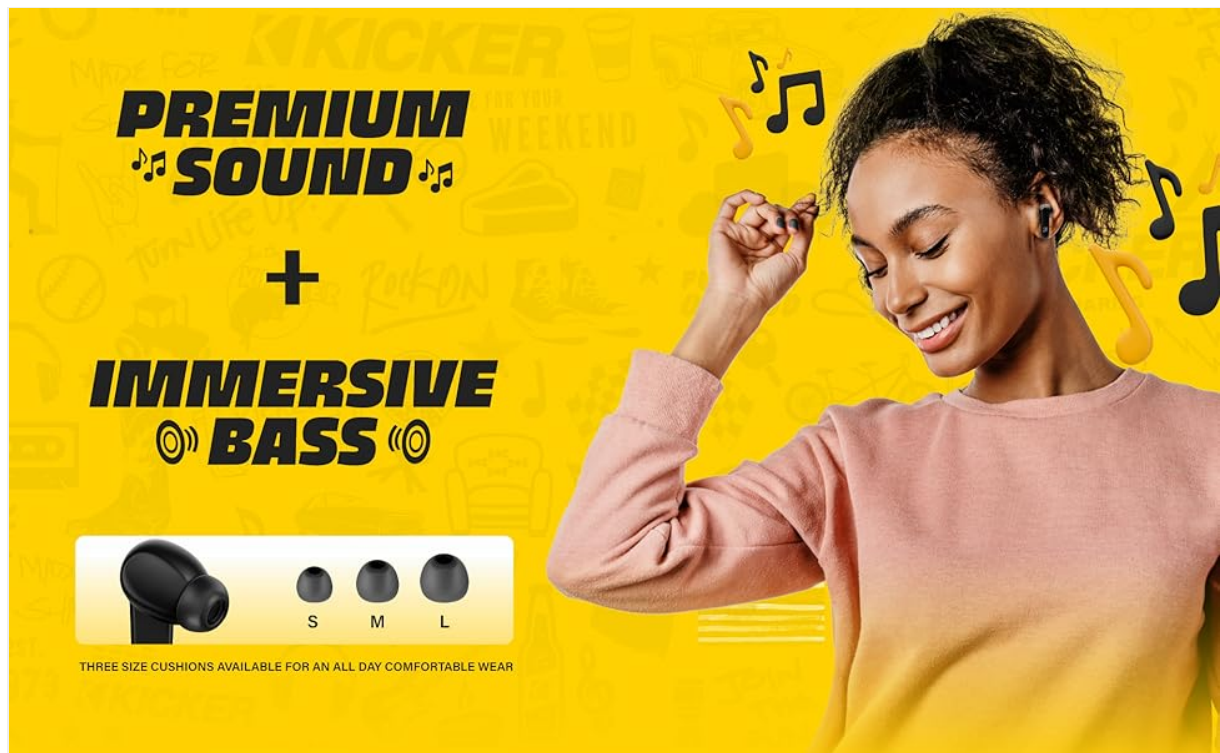


Image: A graphic illustrating the benefits of ENC for clear calls and ANC for blocking external noise from airplanes, offices, and cafes.

CHARGING

The KICKER TW3 earbuds offer extended battery life with their charging case.

- **Earbud Playtime:** Up to 5 hours on a single charge.
- **Total Playtime with Case:** Up to 25 hours (20 additional hours from the charging case).
- **Charging Time:** Approximately 1.5 hours for a full charge of the case and earbuds.

Charging the Case and Earbuds

1. Place the earbuds securely into their respective slots in the charging case.
2. Connect the provided USB-C charging cable to the charging port on the case and to a USB power adapter (not included).
3. The LED indicator on the case will flash red while charging.
4. The LED indicator will turn solid red when the case is fully charged.

WHAT'S IN THE BOX



RECHARGING
CARRYING CASE



3 SIZES OF
RUBBER EARTIPS



USB-C CHARGING CABLE



EARBUDS



DUAL MICROPHONES FOR
CLEAREST VOICE CLARITY



QUICK START GUIDE
USER MANUAL

Image: The KICKER TW3 charging case being charged via a USB-C cable, with text indicating 5 hours of playtime for earbuds and 20 additional hours from the charging case, totaling 25 hours.

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials. Gently remove ear tips and clean them with mild soap and water, ensuring they are completely dry before reattaching.

Water Resistance (IPX4)

The KICKER TW3 earbuds are IPX4 sweatproof, meaning they are resistant to splashes and sweat. They are suitable for workouts and outdoor activities but should not be submerged in water.

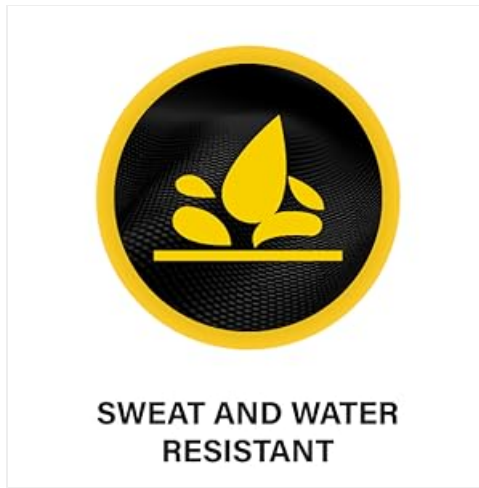


Image: An icon indicating the earbuds are sweat and water resistant.

Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Avoid storing them in extreme temperatures.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on your device's Bluetooth. Forget "KICKER TW3" in your device's Bluetooth settings and re-pair.
No sound from one earbud	Ensure both earbuds are charged. Place both earbuds back in the case, close the lid, then open again to reset. Check device audio balance settings.
Charging case not charging	Check USB-C cable connection. Try a different USB power adapter or port. Ensure the charging port is clean and free of debris.
ANC not effective	Ensure ear tips provide a proper seal. Switch between ANC and Transparency modes using touch controls to confirm functionality.

SPECIFICATIONS

- **Model:** TWS3
- **Bluetooth Version:** 5.0
- **Wireless Range:** Up to 10 meters (33 feet)
- **Noise Control:** Hybrid Active Noise Cancellation (up to -35dB), Environmental Noise Cancellation (ENC)
- **Earbud Playtime:** Up to 5 hours
- **Total Playtime with Case:** Up to 25 hours
- **Charging Time:** Approximately 1.5 hours
- **Water Resistance:** IPX4 (Sweatproof)
- **Microphones:** Dual Microphones for clear voice clarity
- **Auto Power Off:** After 3 minutes of no signal

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product features video for the KICKER Bluetooth TW3 ANC Earbuds, showcasing their design, noise cancellation, and other

key functionalities.

WARRANTY AND SUPPORT

KICKER products are designed for durability and performance. For warranty information, technical support, or any questions regarding your KICKER TW3 Wireless Earbuds, please refer to the official KICKER website or contact KICKER customer service directly. Keep your proof of purchase for warranty claims.

Contact KICKER Support: 1(800) 256-0800 or visit [kicker.com/support](https://www.kicker.com/support)