

AF04W-AFE4801

Generic 4.2QT Glass Air Fryer (Model AF04W-AFE4801) User Manual

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Generic 4.2QT Glass Air Fryer. Please read thoroughly before first use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating the air fryer.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the glass bowl is properly seated before operation.
- The appliance is designed for household use only.

PRODUCT COMPONENTS

Your Generic 4.2QT Glass Air Fryer consists of the following main components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Borosilicate Glass Bowl:** The 4.2-quart transparent cooking container, 5-6.5mm thick and shatter-resistant.
- **Stainless Steel Tray:** A removable tray that sits inside the glass bowl for optimal air circulation and food placement.

- **Handle:** A stay-cool handle attached to the glass bowl for safe removal and insertion.

Detachable Stainless Steel Tray

Easy to Clean



Image: The air fryer's main unit, detachable glass bowl, and stainless steel tray.

SETUP AND FIRST USE

Follow these steps to set up your air fryer for the first time:

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the appliance.
2. **Clean Components:** Wash the borosilicate glass bowl and stainless steel tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Insert Bowl and Tray:** Place the stainless steel tray inside the glass bowl, then slide the assembled bowl into the main unit until it clicks securely into place.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The control panel will illuminate briefly.
6. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at

350°F (175°C) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.



Safe Glass, Safe Choice

Made with pure glass, free from coatings and PFAS, for safe and healthy cooking every day.

Image: The air fryer positioned on a kitchen counter.

OPERATING INSTRUCTIONS

Your air fryer features an intuitive touch control panel and eight smart presets for various cooking needs.

Control Panel Overview

8 - IN - 1 FUNCTIONALITY



Preheat



Reheat



Wings



Fries



Steak



Seafood



Keep Warm



Roast



Image: The digital touch control panel with various settings.

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature/Time Adjustment Buttons (+/-):** Used to increase or decrease cooking temperature and time.
- **Preset Icons:** Select from 8 pre-programmed cooking functions.
- **DIY Button:** Allows for custom temperature and time settings.

Using Smart Presets

The air fryer comes with 8 optimized presets for common dishes:

- Preheat
- Reheat
- Wings
- Fries
- Steak
- Seafood
- Keep Warm
- Roast

To use a preset:

1. Place food on the stainless steel tray inside the glass bowl.
2. Press the Power button to turn on the air fryer.
3. Select the desired preset icon. The display will show the default temperature and time for that preset.
4. Press the Power button again to start cooking.

Manual Temperature and Time Adjustment

For custom cooking, use the DIY button:

1. Place food on the stainless steel tray inside the glass bowl.
2. Press the Power button.
3. Press the DIY button. The temperature will flash. Use the +/- buttons to adjust the temperature (range: 100°F - 400°F).
4. Press the DIY button again. The time will flash. Use the +/- buttons to adjust the cooking time.
5. Press the Power button to start cooking.

Cooking Process

During cooking, you can safely pull out the glass bowl using the stay-cool handle to check on your food or shake the contents. The air fryer will automatically pause and resume cooking once the bowl is reinserted.

TOUGHENED GLASS

VS



Non Toxic Air Fryer

Easy to **clean** with dishwasher

Hardness: 7 Mohs
Impact resistance: 200MPa
Temperature resistance: 482°F

Crystal **clear**: better control food process from overcooking

Material **cost**: \$30

TEFLON COATING



Toxic **Teflon** coating peels

Avoid dishwasher, as its detergent reacts with the coating

Avoid coating **scratches** from cutlery and winds
High-temperature oxidation

No-Viewing window

Material **cost**: \$7

Image: Food being air-fried in the transparent glass bowl.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

Cleaning the Glass Bowl and Tray

The borosilicate glass bowl and stainless steel tray are dishwasher safe, making cleanup effortless. For hand washing:

- Remove the glass bowl and stainless steel tray from the main unit.
- Wash them with warm, soapy water using a non-abrasive sponge.
- Rinse thoroughly and dry completely before reassembling or storing.
- The smooth, non-porous surface resists stains and odors.

400°F Air Crisp Technology

Crispy results with less oil

Up to

75%

Less Fat



Image: Detachable glass bowl and tray are dishwasher safe.

Cleaning the Main Unit

- Wipe the exterior of the main unit with a soft, damp cloth.
- Do not use abrasive cleaners or scourers, as they may damage the surface.
- Never immerse the main unit in water or any other liquid.

Storage

Ensure the air fryer is clean and completely dry before storing. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functional by plugging in another appliance.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Too much food in the basket. Food pieces are stacked.	Cook food in smaller batches. Shake the basket halfway through cooking for even results.
White smoke comes from the appliance.	Grease residue from previous use. Fatty food being cooked.	Clean the glass bowl and tray thoroughly after each use. For fatty foods, drain excess oil during cooking.
Food is not crispy.	Not enough oil applied. Temperature or time too low.	Lightly brush or spray food with oil. Increase cooking temperature or time as needed.

PRODUCT SPECIFICATIONS

Detailed specifications for your Generic 4.2QT Glass Air Fryer, Model AF04W-AFE4801:

Model Name	Glass Air Fryer 4.2Q (AF04W-AFE4801)
Capacity	4.2 Quarts
Product Dimensions	14.09"D x 11.24"W x 11.7"H
Item Weight	10.8 Pounds
Color	Creamy Beige
Material	Borosilicate Glass, Silicone, Stainless Steel
Output Wattage	1200 Watts
Voltage	120 Volts
Control Method	Touch
Min Temperature Setting	100 Degrees Fahrenheit
Max Temperature Setting	400 Degrees Fahrenheit
Has Nonstick Coating	No
Is Dishwasher Safe	Yes (Glass Bowl and Stainless Steel Tray)
Special Features	8 in 1 Functions, Glass Fry Bowl, Stain Resistant, Temperature Control, Transparent Design
Recommended Uses	Bake, Broil, Dehydrate, Reheat, Roast

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the manufacturer's official website. Keep your proof of purchase for any warranty claims.

If you require assistance with troubleshooting or have questions not covered in this manual, please contact customer support through the provided channels on the product packaging or website.

© 2026 Generic. All rights reserved.