

[Manuals.plus](#) /

> [advwin](#) /

> Advwin Foldable Dual-Burner Induction Cooktop 1800W Instruction Manual

advwin HL-SC04C

Advwin Foldable Dual-Burner Induction Cooktop 1800W Instruction Manual

Model: HL-SC04C

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to ensure safe operation and prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power outlet matches the cooktop's voltage (110 Volts). Do not use with damaged cords or plugs.
- **Cookware Compatibility:** This induction cooktop is only compatible with magnetic cookware. Use the included magnet to test your pots and pans. Non-magnetic cookware will not heat.
- **Overheat Protection:** The cooktop features automatic shut-off and overheat protection (E3/E5 error prevention). If an error occurs, turn off the unit, unplug it, and allow it to cool before restarting.
- **Child Safety Lock:** Activate the child safety lock to prevent accidental operation, especially in households with children.
- **Ventilation:** Ensure adequate ventilation around the cooktop during operation. Do not block the cooling fans.
- **Placement:** Place the cooktop on a stable, flat, heat-resistant surface. Keep it away from water and flammable materials.
- **Cleaning:** Always unplug the cooktop before cleaning. Do not immerse the unit in water.
- **Supervision:** Never leave the cooktop unattended while in use.

2. PRODUCT FEATURES

- **Powerful Heating:** 1800W total power for rapid heating.
- **Precision Controls:** 8-20 adjustable power levels (200W-1800W) and temperature settings from 140°F to 464°F. Features knob and sensor touch controls for precise adjustments.
- **Portable & Space-Saving:** Ultra-thin body (2.36"-2.5" height) and lightweight (5.7-6.1 lbs) with foldable legs for easy storage and transport.
- **Smart Timer:** Programmable timer from 3 to 10 hours, adjustable in 1-minute increments (long press for 10-minute adjustment).
- **Energy Efficient:** Up to 83% energy efficiency, reducing power consumption compared to traditional gas stoves.
- **Easy Cleaning:** Smudge-proof crystal glass surface for quick and easy cleaning.

- **Quiet Operation:** Equipped with 6-7 blade cooling fans for operation below 50dB.

3. PARTS LIST

- Advwin Foldable Dual-Burner Induction Cooktop (Model HL-SC04C)
- Power Cord (integrated)
- Magnet for Cookware Compatibility Test
- Instruction Manual (this document)

4. SETUP

1. **Unpack:** Carefully remove the cooktop and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the cooktop on a dry, stable, and level surface. Ensure there is at least 4 inches (10 cm) of clear space around all sides for proper ventilation.
3. **Unfold Legs:** Gently unfold the integrated legs until they lock into position, providing stable support for the cooktop.
4. **Power Connection:** Plug the power cord into a standard 110V AC electrical outlet. Ensure the outlet is properly grounded.
5. **Cookware Test:** Before first use, test your cookware using the provided magnet. If the magnet sticks firmly to the bottom of your pot or pan, it is compatible with induction cooking.



Image 1: The Advwin Foldable Dual-Burner Induction Cooktop in its portable, folded state, held by its handle. This illustrates its compact design for easy transport and storage.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** After plugging in, press the Power button (usually indicated by a symbol) or turn the control knob to activate the cooktop. The display will illuminate.
- **To Power Off:** Press the Power button again or turn the control knob to the 'OFF' position. The cooling fans may continue to run for a short period to dissipate residual heat.

5.2 Adjusting Power and Temperature

- **Power Levels:** Use the control knob or sensor touch buttons to select one of the 8-20 power levels (200W-1800W). Higher numbers indicate more power.
- **Temperature Settings:** Alternatively, select a specific temperature from 140°F to 464°F using the dedicated temperature

controls.

- **Dual Burners:** Each burner can be controlled independently. Adjust settings for each cooking zone as needed.

5.3 Using the Timer Function

- **Setting the Timer:** Press the Timer button. Use the '+' and '-' buttons or turn the knob to set the desired cooking time (from 3 to 10 hours). A long press on the adjustment buttons may change the time in 10-minute increments.
- **Automatic Shut-off:** Once the set time expires, the cooktop will automatically turn off and emit an audible signal.
- **Canceling the Timer:** Press the Timer button again or turn off the cooktop manually to cancel the timer.

5.4 Child Safety Lock

- **Activating Lock:** Locate the Child Lock button (often indicated by a lock symbol) and press and hold it for a few seconds until the indicator light illuminates. This will disable all other controls.
- **Deactivating Lock:** Press and hold the Child Lock button again for a few seconds until the indicator light turns off.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction cooktop.

1. **Disconnect Power:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
2. **Surface Cleaning:** Wipe the crystal glass surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a non-abrasive cooktop cleaner. Avoid abrasive pads or harsh chemicals.
3. **Control Panel:** Gently wipe the control panel with a soft, damp cloth. Ensure no liquid enters the control area.
4. **Ventilation Openings:** Periodically check and clean the ventilation openings to ensure they are free from dust and debris. Use a soft brush or vacuum cleaner if necessary.
5. **Storage:** When not in use, ensure the cooktop is clean and dry. Fold the legs for compact storage in a cool, dry place.

7. TROUBLESHOOTING GUIDE

If you encounter issues with your cooktop, please refer to the following common problems and solutions before contacting support.

Problem/Error Code	Possible Cause	Solution
Cooktop does not turn on	No power supply; loose plug; power outage.	Check if the plug is securely inserted. Verify the power outlet is functional. Check circuit breaker.
No heating / Cookware not detected	Non-magnetic cookware; cookware too small/large; no cookware on burner.	Use only magnetic, induction-compatible cookware. Ensure cookware is centered and covers at least 70% of the burner area.
Error Code E3 / E5	Overheat protection activated; internal component issue.	Turn off the cooktop, unplug it, and allow it to cool down for at least 30 minutes. Ensure ventilation is not blocked. If the error persists, contact customer support.
Unusual noise during operation	Normal fan operation; cookware vibration.	A low hum from the cooling fan is normal. Some cookware may produce a slight buzzing sound due to induction. This is not a defect.

8. SPECIFICATIONS

Model Number	HL-SC04C
Brand	Advwin
Power Output	1800 Watts
Voltage	110 Volts
Control Type	Knob / Sensor Touch
Material	Ceramic Glass
Product Dimensions (D x W x H)	10"D x 27"W x 1.9"H
Special Feature	Compact, Foldable Design
Heating Elements	Dual Burner

9. WARRANTY AND SUPPORT

Advwin products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Advwin website.

If you require technical assistance, troubleshooting beyond this guide, or have questions regarding your product, please contact Advwin customer support through the retailer where the product was purchased or via the contact information provided on the official Advwin website.

Please have your model number (HL-SC04C) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FMXC621R>

More documents and user manuals: <https://manuals.plus/>