

[Manuals.plus](#) /

› [ROBUD](#) /

› ROBUD RB-2-WG427 Outdoor Wooden Mud Kitchen Instruction Manual

ROBUD RB-2-WG427

ROBUD RB-2-WG427 Outdoor Wooden Mud Kitchen Instruction Manual

Model: RB-2-WG427

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference. Adult supervision is required at all times when children are using this product.

- **Age Recommendation:** Suitable for children aged 3 years and older.
- **Assembly:** This product must be assembled by an adult. Ensure all parts are securely fastened before allowing children to play.
- **Stability:** Place the mud kitchen on a flat, stable surface to prevent tipping.
- **Material Safety:** The mud kitchen is constructed from high-quality wood with rounded edges to minimize injury risk. Regularly inspect for any loose parts, splinters, or damage.
- **Outdoor Use:** Designed for outdoor use. While weather-resistant, prolonged exposure to extreme weather conditions may affect durability.
- **Choking Hazard:** Small parts may be present. Keep away from children under 3 years during assembly.

2. PRODUCT COMPONENTS

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Wooden Mud Kitchen Frame
- Removable Sink
- Faucet-equipped Water Tank
- Oven with Door
- Chalkboard
- Planting Cups (3x)
- Kitchen Utensils (3x)
- Soup Pot
- Frying Pan
- Watering Can

- Assembly Hardware (screws, bolts, etc.)



Image 2.1: Included accessories for the ROBUD Mud Kitchen.

This image displays the ROBUD Mud Kitchen alongside its various accessories, including three planting cups, a soup pot, a frying pan, three kitchen utensils, a chalkboard, and a watering can. These items are designed to enhance imaginative play.

3. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two adults for easier assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify all components against the parts list.
2. **Assemble Base Frame:** Connect the main wooden panels to form the base structure. Ensure all screws are tightened securely.
3. **Install Shelves:** Attach the bottom shelf and any other internal shelves to the frame.

4. **Attach Tabletop:** Secure the main tabletop surface to the assembled base.
5. **Mount Upper Structure:** Assemble and attach the upper rack and back panel, which includes the hanging hooks.
6. **Insert Sink and Faucet:** Place the removable sink into its designated opening. Install the water tank with the faucet as per the specific instructions provided in the detailed diagram.
7. **Assemble Oven:** Attach the oven door and knobs to the oven section. Ensure the door opens and closes smoothly.
Note: If the oven door does not align correctly, check the hinge installation and adjust as needed.
8. **Attach Chalkboard:** Hang the chalkboard in its designated area.
9. **Final Check:** Once assembled, double-check all connections to ensure they are tight and stable.



Image 3.1: Product dimensions for the ROBUD Mud Kitchen.

This image provides a detailed diagram of the ROBUD Mud Kitchen's dimensions, indicating a height of 32 inches (81 cm), a width of 29.7 inches (75.5 cm), and a depth of 12.2 inches (31 cm). These measurements are crucial for planning placement and ensuring proper fit in your outdoor space.

4. OPERATING INSTRUCTIONS

The ROBUD Mud Kitchen offers various interactive features for imaginative play.

4.1. Sink and Faucet

- Fill the water tank with water.
- Turn the faucet handle to dispense water into the removable sink.
- The sink is ideal for washing play vegetables, mixing mud, or engaging in water play.
- After use, empty the sink and water tank to prevent stagnant water.

4.2. Oven and Stovetop

- The stovetop features simulated burners for pretend cooking.
- Rotate the knobs on the front panel to simulate adjusting temperature.
- Open the oven door to place play food or utensils inside.

4.3. Chalkboard

- Use standard chalk to draw, write menus, or leave messages on the chalkboard.
- Wipe clean with a damp cloth.

4.4. Planting Cups

- The included planting cups can be used for pretend gardening, holding small natural items, or storing accessories.

REAL FAUCETS AND SINKS

Various Ways to Play



Planting Plants



Playing With Mud



Watering With
A Kettle



Image 4.1: Various play scenarios with the sink and faucet.

This image illustrates different ways children can interact with the mud kitchen's sink and faucet. It shows a child planting small plants in the cups, engaging in mud play within the removable sink, and using the watering can to water plants, highlighting the versatility of the water features.



Image 4.2: Realistic cooking experience features.

This image provides close-up views of the mud kitchen's realistic cooking features. It shows a child pretending to cook on the stovetop with play food, washing play vegetables in the sink, and turning the functional knobs on the oven, demonstrating the interactive elements for an immersive play experience.

5. MAINTENANCE

Regular maintenance will extend the life of your ROBUD Mud Kitchen.

- **Cleaning:** Wipe down all surfaces with a damp cloth after each use. For stubborn dirt, use mild soap and water, then rinse thoroughly. Avoid harsh chemical cleaners.
- **Wood Care:** The wooden components are treated for outdoor use. However, to maintain the wood's condition, it is recommended to store the mud kitchen under cover or use a protective cover during periods of heavy rain or extreme weather. Periodically check for any signs of wear or damage to the wood.
- **Sink and Water Tank:** Regularly clean the removable sink and water tank to prevent mold or mildew buildup. Ensure they are completely dry before storage.

- **Hardware:** Periodically check all screws and bolts to ensure they remain tight. Tighten if necessary.



Image 5.1: Details of the sturdy solid wood construction.

This image showcases the robust construction of the ROBUD Mud Kitchen, featuring close-ups of its rounded edges for safety, the natural texture of the wood, and confirmation of its solid wood material, emphasizing its durability for outdoor play.

6. TROUBLESHOOTING

- **Missing Parts:** If you find any parts missing upon opening the package, please contact ROBUD customer service immediately with your purchase details.
- **Oven Door Misalignment:** If the oven door does not close properly or is difficult to open, check the hinges and ensure they are installed correctly and tightened evenly. Slight adjustments to screw tightness may resolve the issue.
- **Water Leakage from Faucet:** Ensure the water tank is properly seated and the faucet connection is tight. Check for any cracks in the tank or faucet.
- **Wobbly Structure:** Re-check all assembly screws and bolts. Tighten any loose connections to ensure the structure

is stable.

7. SPECIFICATIONS

Brand Name	ROBUD
Model Number	RB-2-WG427
Material Type	Wood
Item Dimensions (L x W x H)	12.2 x 29.72 x 31.89 inches (31 x 75.5 x 81 cm)
Item Weight	9.16 Kilograms
Age Range Description	Kid (Manufacturer Minimum Age: 36 months)
Included Components	ROBUD Outdoor Mud Kitchen Set for Kids

8. WARRANTY AND SUPPORT

ROBUD products are manufactured with quality and safety in mind. For warranty information, product support, or to report missing/damaged parts, please contact ROBUD customer service through the retailer where the product was purchased or visit the official ROBUD website.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FMXH3TM9>

More documents and user manuals: <https://manuals.plus/>