



Manuals.plus /

› Ueadcm /

› Ueadcm C7W-1 3-in-1 Walking Pad with Incline Treadmill User Manual

Ueadcm C7W-1

Ueadcm C7W-1 3-in-1 Walking Pad with Incline Treadmill User Manual

Model: C7W-1

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Ueadcm C7W-1 Walking Pad. Retain this manual for future reference. Failure to follow these safety guidelines may result in injury or damage to the product.

- **Placement:** Place the walking pad on a flat, stable surface. Ensure there is adequate clear space (at least 2 feet) behind and on both sides of the unit.
- **Power Source:** Connect the walking pad to a grounded electrical outlet. Do not use extension cords unless absolutely necessary, and ensure any extension cord is rated for the appliance's power requirements.
- **User Weight Limit:** Do not exceed the maximum user weight of 265 pounds (120 kg).
- **Children and Pets:** Keep children and pets away from the walking pad during operation. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- **Medical Conditions:** Consult a physician before starting any exercise program, especially if you have pre-existing medical conditions. Stop exercising immediately if you feel faint, dizzy, or experience pain.
- **Footwear:** Always wear appropriate athletic footwear when using the walking pad.
- **Emergency Stop:** Familiarize yourself with the emergency stop procedure. In case of an emergency, step off the belt and press the power button on the remote control.
- **Maintenance:** Unplug the walking pad from the power outlet before cleaning, maintenance, or moving.
- **Damage:** Do not operate the walking pad if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged. Contact customer support for assistance.

2. PRODUCT OVERVIEW

The Ueadcm C7W-1 is a versatile 3-in-1 walking pad designed for home and office use, offering a compact solution for daily exercise. It features a manual incline, a quiet motor, and an LED display for tracking workout metrics.



Image 2.1: The Ueadcm C7W-1 Walking Pad in operation, demonstrating its compact design and suitability for active use.

Key Features:

- **5% Manual Incline:** Simulates uphill walking to increase workout intensity and calorie expenditure.
- **2.5 HP Quiet Motor:** Provides smooth and stable operation with noise levels below 45dB, suitable for office environments.
- **LED Display:** Tracks essential workout data including time, calories, speed, and distance.
- **Wireless Remote Control:** Allows for convenient speed adjustments during exercise.
- **Anti-Skid Deck with Shock Absorption:** Ensures stable footing and reduces impact on joints.
- **Compact & Foldable Design:** No assembly required, easy to store under furniture, and features

integrated transport wheels for portability.

- **Weight Capacity:** Supports users up to 265 lbs.



Image 2.2: Illustration of the 5% manual incline feature, designed to enhance workout intensity.

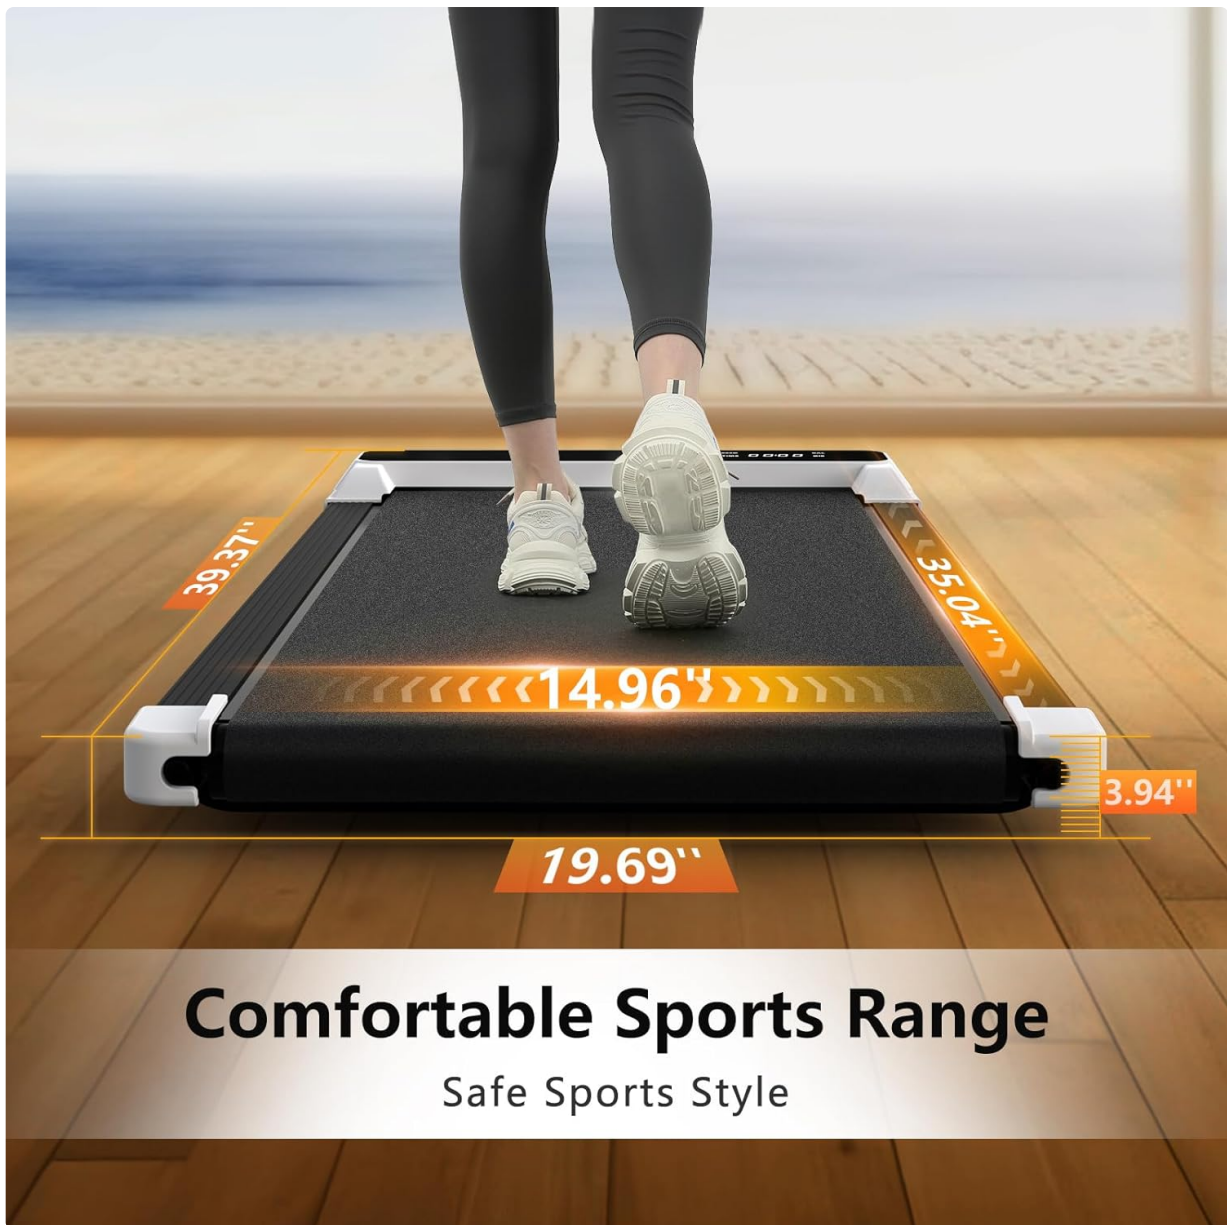


Image 2.3: Details on the 2.5 HP motor, maximum weight capacity, and quiet operation (under 45dB).

3. SETUP

The Ueadcm C7W-1 Walking Pad is designed for immediate use with no assembly required. Follow these steps for initial setup:

1. **Unpack:** Carefully remove the walking pad from its packaging.
2. **Position:** Place the walking pad on a firm, level surface. Ensure sufficient clear space around the unit for safe operation.
3. **Power Connection:** Plug the power cord into a standard grounded electrical outlet.
4. **Remote Control:** Insert the required batteries (not included) into the remote control.

Cutting-Edge Brushless Motor Tech

EXTRA QUIETER

Than regular walking pad with brushed motor



Motor Power **2.5HP**



265 lbs
Weight Capacity



<45 dBS
Low Noise



Image 3.1: The walking pad's compact dimensions (39.37" x 19.69" x 3.94") allow for easy storage under furniture.

4. OPERATING INSTRUCTIONS

The Ueadcm C7W-1 Walking Pad is operated using the provided wireless remote control.

Remote Control Functions:

- **Power On/Off:** Press the power button to start or stop the walking pad. A 3-second countdown will precede startup.
- **Speed Adjustment:** Use the "+" button to increase speed and the "-" button to decrease speed. The maximum speed is 3.8 MPH.
- **Mode Button (M):** Press the "M" button to cycle through display modes: time, calories burned, speed, and distance.

LED Display:

The integrated LED display shows your workout metrics in real-time. Cycle through the modes using the "M" button on the remote control to view:

- **Time:** Duration of your workout.

- **Calories:** Estimated calories burned.
- **Speed:** Current walking speed.
- **Distance:** Total distance covered.



Image 4.1: The walking pad supports various activities, from active walking to use with a standing desk.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Ueadcm C7W-1 Walking Pad. Always unplug the unit before performing any maintenance.

Cleaning:

- Wipe down the walking pad's surface with a damp cloth after each use to remove sweat and dust.
- Avoid using abrasive cleaners or solvents, as these can damage the finish.

Belt Lubrication:

The walking belt requires periodic lubrication to reduce friction and extend its lifespan. Refer to the included user manual for specific lubrication instructions and recommended lubricant type. Typically, lubrication is needed every few months depending on usage.

Belt Adjustment:

If the walking belt begins to slip or drift to one side, it may require adjustment. This process typically involves using an Allen wrench (often included) to turn adjustment bolts located at the rear of the walking pad. Refer to the detailed instructions in the original user manual for precise steps. Generally, turning the bolt clockwise tightens the belt or moves it to the right, while counter-clockwise loosens it or moves it to the left. Adjust in small increments and test the belt's alignment and tension.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Ueadcm C7W-1 Walking Pad.

Problem	Possible Cause	Solution
Walking pad does not power on.	Power cord not securely plugged in. No power from outlet. Remote control batteries are dead or incorrectly inserted.	Ensure power cord is fully inserted into the unit and the wall outlet. Test the outlet with another appliance. Replace remote control batteries and ensure correct polarity.
Walking belt slips or drags.	Belt tension is too loose. Belt requires lubrication.	Adjust belt tension using the rear adjustment bolts (refer to Section 5: Maintenance). Lubricate the walking belt (refer to Section 5: Maintenance).

Problem	Possible Cause	Solution
Walking belt drifts to one side.	Belt alignment is off.	Adjust belt alignment using the rear adjustment bolts (refer to Section 5: Maintenance).
Unusual noise during operation.	Loose components. Belt friction or misalignment.	Inspect the unit for any loose screws or parts and tighten them. Check belt lubrication and alignment (refer to Section 5: Maintenance).

If you encounter issues not listed here or if problems persist after attempting troubleshooting steps, please contact Ueadcm customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Ueadcm
Model Name	C7W-XJ (Style: C7W-1)
Color	White
Product Dimensions (L x W x H)	39.4"D x 19.7"W x 5.1"H (100cm x 50cm x 13cm)
Item Weight	31.6 Pounds (14.3 kg)
Material	Alloy Steel
Maximum Speed	3.8 Miles per Hour (6.1 km/h)
Special Feature	Foldable, Manual Incline
Maximum Horsepower	2.5 HP
Maximum Weight Recommendation	265 Pounds (120 kg)
Noise Level	Under 45dB
UPC	199284617285

Healthy lifestyles at **Home** and **Office**



Image 7.1: Detailed dimensions of the walking surface (35.04" x 14.96") for user reference.

8. WARRANTY AND SUPPORT

The Ueadcm C7W-1 Walking Pad comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Ueadcm customer service. Refer to the contact information provided with your purchase documentation or visit the official Ueadcm website for support details.

When contacting support, please have your model number (C7W-1) and proof of purchase readily available.