

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-558 Portable Wireless Car Model Bluetooth Speaker Instruction Manual

WSTER WS-558

WSTER WS-558 Portable Wireless Car Model Bluetooth Speaker Instruction Manual

1. INTRODUCTION

Thank you for choosing the WSTER WS-558 Portable Wireless Car Model Bluetooth Speaker. This device combines a unique retro pickup truck design with advanced audio features, offering a versatile listening experience. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and enjoyment of your speaker.



Image 1.1: The WSTER WS-558 Portable Wireless Car Model Bluetooth Speaker in Red.

2. WHAT'S IN THE BOX

Upon opening your package, please verify that all the following items are included:

- 1 x WSTER WS-558 Portable Wireless Car Model Bluetooth Speaker
- 1 x Power Cable (Type-C)
- 1 x Quick Start Guide

WS-558BT CAR SPEAKER



WSTER

«▶ Enjoy Music Enjoy Life ▶»

Image 2.1: Packaging contents for the WS-558 speaker.

3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls:

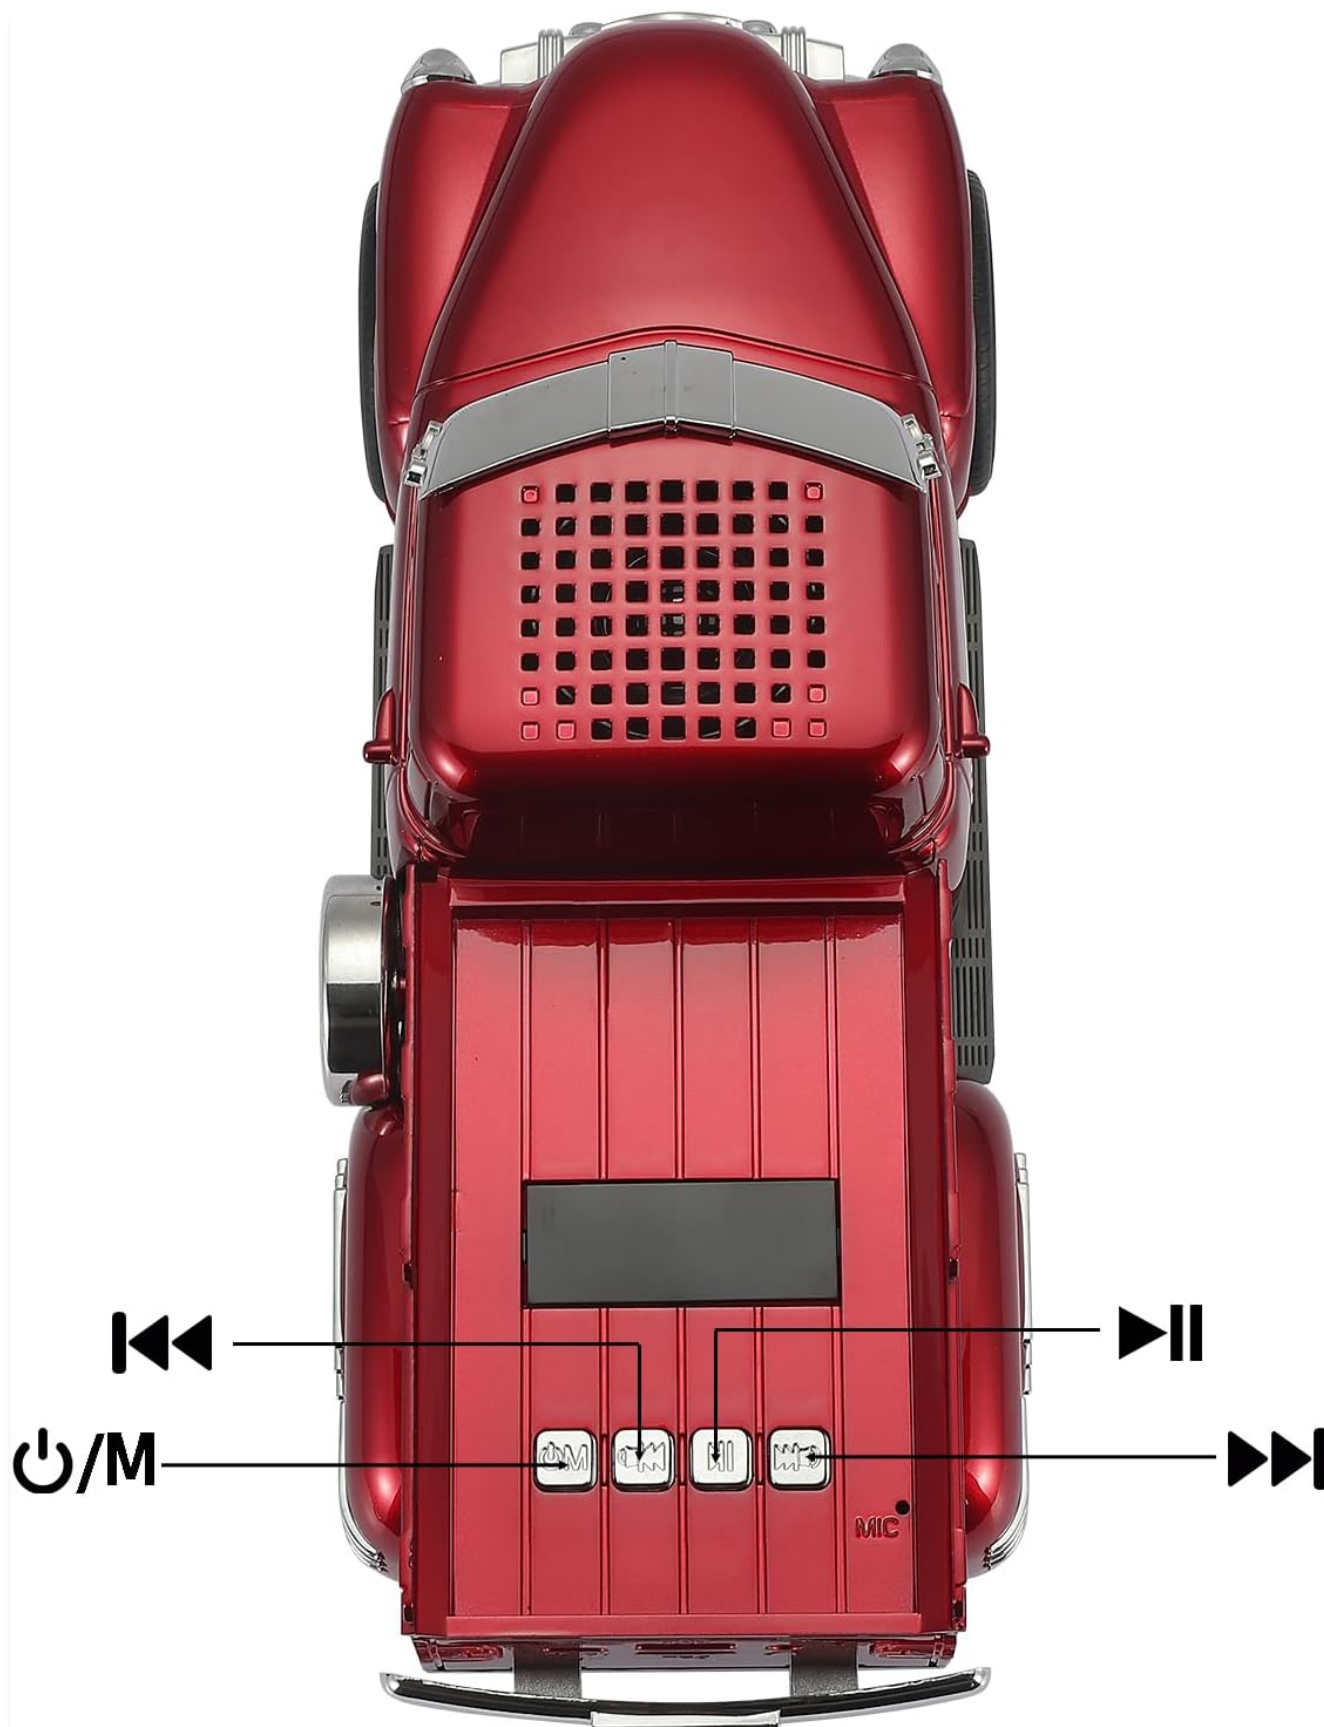


Image 3.1: Top view of the WS-558 speaker showing control buttons.

- **Power/Mode Button (/M):** Press and hold to power on/off. Briefly press to switch between modes (Bluetooth, FM Radio, USB, TF Card).
- **Play/Pause/Call Button (▶/⏸ /📞):** Briefly press to play/pause music. Briefly press to answer/end calls. Press and hold to reject calls. Double-click for TWS pairing.
- **Previous Track/Volume Down Button (◀◀):** Briefly press for previous track. Press and hold to decrease volume.

- **Next Track/Volume Up Button (▶▶):** Briefly press for next track. Press and hold to increase volume.
- **USB Port:** For USB drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **Type-C Charging Port:** For charging the speaker.
- **LED Display:** Shows current mode, volume, and other information.



Image 3.2: Close-up of the speaker's control panel and various ports.

4. SETUP

4.1. Charging the Speaker

Before first use, fully charge the speaker using the provided Type-C USB cable. Connect the cable to the speaker's Type-C charging port and a compatible USB power adapter (not included). The LED display will indicate charging status.

4.2. Power On/Off

To power on the speaker, press and hold the **Power/Mode (/M)** button for approximately 3 seconds until you hear a startup sound and the LED display illuminates.

To power off the speaker, press and hold the **Power/Mode (/M)** button again for approximately 3 seconds until you hear a shutdown sound and the LED display turns off.

Your browser does not support the video tag.

Video 4.1: Demonstrates powering on and off the speaker (0:04 - 0:26).

4.3. Bluetooth Pairing

After powering on, the speaker will automatically enter Bluetooth pairing mode, indicated by "BLUE" on the LED display and a flashing Bluetooth icon. To connect your device:

1. Enable Bluetooth on your smartphone or tablet.
2. Search for available Bluetooth devices.
3. Select "WS-558" from the list.
4. Once connected, you will hear a confirmation tone, and "BLUE" will stop flashing.



The connection is stable and pairing is swift without any lag

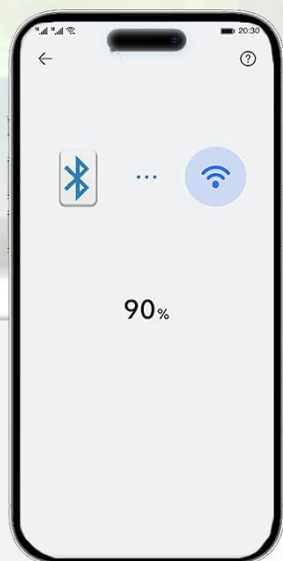


Image 4.1: Bluetooth connection process shown with a smartphone.

Your browser does not support the video tag.

Video 4.2: Demonstrates Bluetooth connection (0:26 - 0:40).

5. OPERATING INSTRUCTIONS

5.1. Playing Music (Bluetooth Mode)

Once connected via Bluetooth, you can control music playback directly from your device or using the speaker's buttons:

- **Play/Pause:** Briefly press the **Play/Pause** (▶/■) button.
- **Volume Up:** Press and hold the **Next Track/Volume Up** (▶▶) button.
- **Volume Down:** Press and hold the **Previous Track/Volume Down** (◀◀) button.

- **Next Track:** Briefly press the **Next Track/Volume Up (▶▶)** button.
- **Previous Track:** Briefly press the **Previous Track/Volume Down (◀◀)** button.

Your browser does not support the video tag.

Video 5.1: Demonstrates music playback controls including play/pause, volume adjustment, and track skipping (0:40 - 1:26).

5.2. Switching Modes

The WS-558 supports multiple playback modes. To switch between modes (Bluetooth, FM Radio, USB, TF Card), briefly press the **Power/Mode (/M)** button.

Your browser does not support the video tag.

Video 5.2: Demonstrates switching between different modes (1:26 - 1:52).

5.3. FM Radio Mode

To use the FM Radio function:

1. Switch to FM Radio mode by briefly pressing the **Power/Mode (/M)** button until "FM" appears on the display.
2. To auto-scan and save available stations, press and hold the **Play/Pause (▶/■ ■)** button. The speaker will scan frequencies and store stations automatically.
3. Once scanning is complete, briefly press the **Previous Track (◀◀)** or **Next Track (▶▶)** buttons to navigate through the saved stations.

Your browser does not support the video tag.

Video 5.3: Demonstrates the operation process of FM radio mode (1:52 - 2:26).

5.4. USB/TF Card Playback

Insert a USB drive or TF (MicroSD) card into the respective port. The speaker will automatically switch to the corresponding mode and begin playing audio files. Use the **Play/Pause (▶/■ ■)**, **Previous Track (◀◀)**, and **Next Track (▶▶)** buttons to control playback.

5.5. Hands-Free Calling

When connected via Bluetooth, the speaker can be used for hands-free calls:

- **Answer Call:** When an incoming call rings, briefly press the **Play/Pause/Call (▶/■ ■ /☎)** button.
- **End Call:** During a call, briefly press the **Play/Pause/Call (▶/■ ■ /☎)** button.
- **Reject Call:** When an incoming call rings, press and hold the **Play/Pause/Call (▶/■ ■ /☎)** button.
- **Switch Audio Source:** During a call, briefly press the **Play/Pause/Call (▶/■ ■ /☎)** button to switch the audio between the speaker and your mobile phone.



Image 5.1: Hands-free calling feature in use.

Your browser does not support the video tag.

Video 5.4: Demonstrates answering and managing calls (2:26 - 2:55).

5.6. TWS (True Wireless Stereo) Pairing

If you have two WS-558 speakers, you can pair them together for a true stereo audio experience:

1. Ensure both speakers are powered on and in Bluetooth mode, but not connected to any device.
2. On one of the speakers (this will be the primary speaker), double-click the **Play/Pause** (▶/■ ■) button. You will hear a

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FMY2B1K7>

More documents and user manuals: <https://manuals.plus/>