

[Manuals.plus](#) /

› [DayPlus](#) /

› DayPlus JY-CCQ Cordless Window Cleaner User Manual

DayPlus JY-CCQ

DayPlus JY-CCQ Cordless Window Cleaner User Manual

Model: JY-CCQ

INTRODUCTION

Thank you for choosing the DayPlus JY-CCQ Cordless Window Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your DayPlus JY-CCQ Cordless Window Cleaner.

BESCHREIBUNG DES PRODUKTS



Image Description: A diagram illustrating the components of the DayPlus JY-CCQ Cordless Window Cleaner. Labels point to the squeegee attachment, microfiber cloth, spray head, spray bottle, collection tank, power on/off switch, and charging port.

- **Squeegee Attachment:** For streak-free cleaning.
- **Microfiber Cloth:** Attaches to the spray bottle for initial cleaning.
- **Spray Bottle:** Holds cleaning solution.
- **Collection Tank:** Gathers dirty water during vacuuming.
- **Power On/Off Switch:** Activates and deactivates the device.
- **Charging Port:** For connecting the charging adapter.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x DayPlus Electric Window Cleaner
- 1 x 150 ml Water Tank (integrated)
- 1 x 300 ml Spray Bottle
- 1 x 24 cm Wide Microfiber Wiper (removable and washable)
- 1 x 28 cm Soft Rubber Squeegee (integrated)
- 1 x Charging Adapter
- 1 x Instruction Manual (this document)

SPECIFICATIONS

Power	20 W
Suction Power	2.0 KPA (2000 Pa)
Battery Capacity	2200 mAh Lithium Battery
Squeegee Width	28 cm
Working Time	Up to 30 minutes
Charging Time	Approximately 3 hours
Dirty Water Tank Capacity	150 ml
Spray Bottle Capacity	300 ml
Waterproof Rating	IPX4
Product Weight	0.8 kg



Image Description: An image showing the dimensions of the DayPlus JY-CCQ Cordless Window Cleaner and its accompanying spray bottle with microfiber cloth. Measurements are provided in both inches and centimeters.

SETUP

1. Charging the Battery

- Before first use, fully charge the device.
- Connect the charging adapter to the charging port on the device.
- Plug the adapter into a suitable power outlet.
- The charging indicator light will illuminate. A full charge takes approximately 3 hours.
- Once fully charged, disconnect the adapter. The device provides up to 30 minutes of working time on a full charge.

2. Preparing the Spray Bottle

- Attach the microfiber wiper to the spray bottle. Ensure it is securely fastened.
- Fill the 300 ml spray bottle with your preferred window cleaning solution and water according to the cleaner's instructions.
- Securely close the spray bottle.

OPERATING INSTRUCTIONS

1. Pre-cleaning with Spray Bottle

- Spray the cleaning solution onto the surface to be cleaned using the spray bottle.
- Use the microfiber wiper attached to the spray bottle to spread the solution evenly and loosen dirt.

WISCHEN SIE DIE OBERFLÄCHE AB

Die Sprühflasche mit Wischer und Mikrofasertuch kann zur Nachreinigung von Oberflächen verwendet werden.



Image Description: A hand holding the spray bottle with an attached microfiber cloth, spraying and wiping a window surface to loosen dirt and apply cleaning solution.

2. Vacuuming and Squeegeeing

- Turn on the DayPlus Cordless Window Cleaner by pressing the Power On/Off switch.
- Place the 28 cm rubber squeegee blade firmly against the top of the wet surface.
- Draw the device downwards in a straight, even motion. The 2000Pa suction will collect the dirty water into the 150 ml tank, preventing drips and streaks.
- For optimal results, overlap each stroke slightly.
- The device is suitable for various smooth surfaces, including windows, mirrors, shower screens, and ceramic tiles. It can also be used for cleaning car windows.

FENSTERPUTZEN IST EINFACHER



Image Description: A person is shown using the DayPlus Cordless Window Cleaner on a window, demonstrating the vacuuming action to remove cleaning solution and dirty water.



Image Description: A person is using the DayPlus Cordless Window Cleaner on an indoor window, showcasing its ergonomic design and ease of use for streak-free cleaning.



REINIGEN

Perfekt für die Reinigung von Autoscheiben



ABSTREIFER KOPF

Keine Schlieren für ein glänzendes Finish



STAUBSAUGEN & ABRAKELN

Hinterlässt Spiegel, Duschen und Fenster makellos



Image Description: A collage of images demonstrating the versatility of the DayPlus Cordless Window Cleaner, showing its use on car windows, home windows, and highlighting its streak-free finish and vacuuming capabilities.

MAINTENANCE

1. Emptying and Cleaning the Dirty Water Tank

- After each use, or when the tank is full, turn off the device.
- The 150 ml dirty water tank is designed for easy removal. Locate the release mechanism (refer to the product diagram if unsure) and detach the tank.
- Empty the dirty water into a sink.
- Rinse the tank thoroughly with clean water.
- Allow the tank to air dry before reattaching it to the device. This prevents odors and bacterial growth.

ES IST EINFACH ZU BENUTZEN

Der Schmutzwassertank lässt sich leicht öffnen und sofort entleeren.



Image Description: A hand is shown detaching and emptying the dirty water tank of the DayPlus Cordless Window Cleaner into a sink, illustrating the ease of cleaning.

2. Cleaning the Microfiber Wiper

- Remove the microfiber wiper from the spray bottle.
- The wiper is washable. Hand wash or machine wash it according to fabric care instructions.
- Allow it to dry completely before reattaching or storing.

3. General Device Cleaning

- Wipe the exterior of the device with a damp cloth. Do not immerse the main unit in water.
- Ensure the rubber squeegee blade is clean and free of debris for optimal performance.
- Store the device in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your DayPlus JY-CCQ Cordless Window Cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Device does not turn on.	Battery is depleted.	Charge the battery for approximately 3 hours.
Poor suction or leaves streaks.	Dirty water tank is full or improperly seated. Squeegee blade is dirty or damaged. Insufficient cleaning solution on surface.	Empty and properly reattach the dirty water tank. Clean or replace the squeegee blade. Apply more cleaning solution to the surface.
Battery not charging.	Charging adapter not properly connected. Faulty power outlet.	Ensure the charging adapter is securely connected to both the device and the power outlet. Try a different power outlet.
Water leaks from the device.	Dirty water tank not properly sealed.	Ensure the dirty water tank is correctly attached and sealed.

If the problem persists after trying these solutions, please contact customer support.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.