

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [INAIR](#) /

> INAIR Wakey - Remote PC Wake-Up Device Instruction Manual

## INAIR INAIR Wakey

# INAIR Wakey Instruction Manual

Model: INAIR Wakey | Brand: INAIR

## 1. INTRODUCTION

The INAIR Wakey is a remote PC wake-up device designed to seamlessly integrate with your INAIR Spatial Computer ecosystem. This accessory allows you to power on your personal computer from any location with internet access, providing convenience and flexibility for remote work or access.

### Wake Your PC Anytime, From Anywhere.

By connecting to Wakey, you can remotely power on your PC and enjoy seamless cross-regional streaming and control.

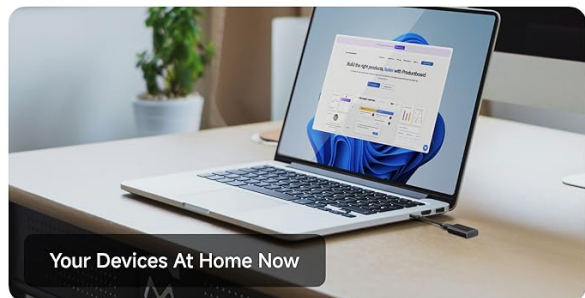
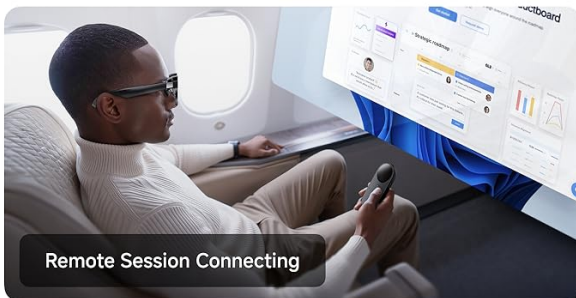


Image 1.1: The INAIR Wakey device connected to a laptop.

Key features include:

- **Remote Wake-Up:** Activate your PC from a distance using an internet connection.
- **Seamless Integration:** Works with INAIR Space software for unified control.
- **Enterprise-Grade Security:** Utilizes encrypted communication for secure remote access.

## 2. SETUP INSTRUCTIONS

Follow these steps to set up your INAIR Wakey device:

1. **Plug In:** Connect the INAIR Wakey device into an available USB-C port on your personal computer.
2. **Network Connection:** Ensure both your PC (with INAIR Wakey connected) and your INAIR Spatial Computer are connected to the same network. This facilitates automatic pairing.
3. **Software Installation:** Verify that the latest version of INAIR Space software is installed on your INAIR Spatial Computer. This is crucial for optimal performance and security.
4. **Account Login:** Log in with your INAIR account on both your PC (via INAIR Space software) and your INAIR Spatial Computer. This enables the remote control functionality.




Image 2.1: Connecting the INAIR Wakey to your PC.

The device is designed for simple setup and should automatically pair once connected to the same network and logged into your INAIR account.

### 3. OPERATING INSTRUCTIONS

Once setup is complete, you can remotely wake up and access your PC using your INAIR Spatial Computer:

1. **Launch INAIR Space:** On your INAIR Spatial Computer, open the INAIR Space application.
2. **Select PC:** Within the INAIR Space interface, locate and select your connected PC.
3. **Initiate Wake-Up:** Follow the on-screen prompts within INAIR Space to send the wake-up command to your PC. Your PC will power on and become accessible.
4. **Remote Access:** After your PC is awake, you can proceed with remote streaming and control through the INAIR Space software, enjoying a seamless experience regardless of your physical location.

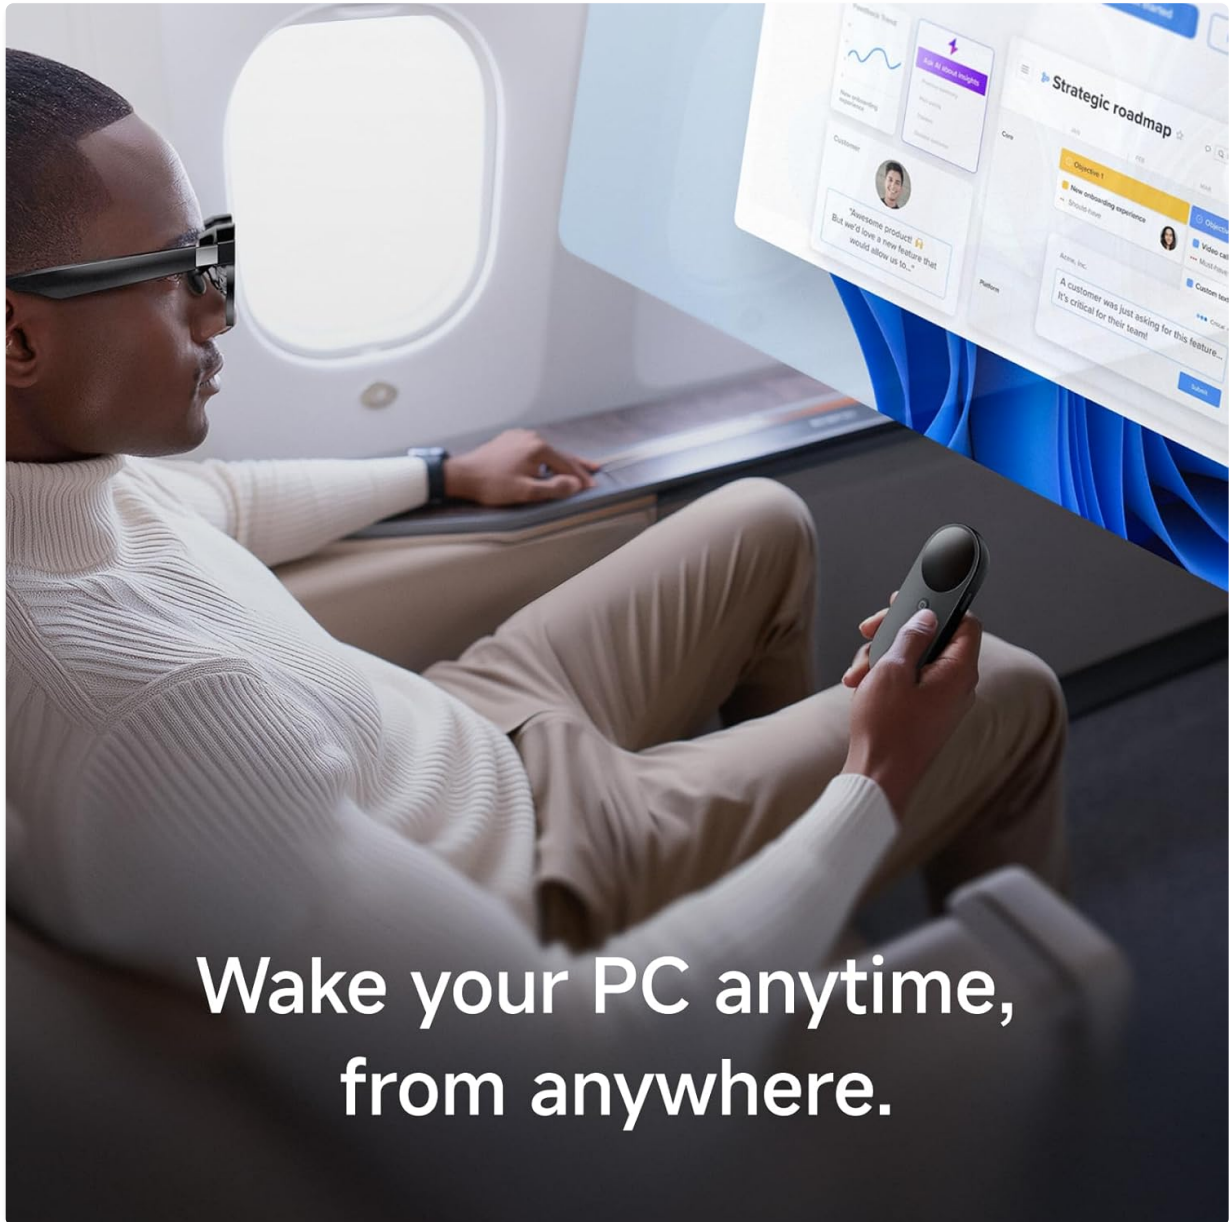

**Wake your PC anytime,  
from anywhere.**

Image 3.1: Remote PC access from a distance.



## Works effortlessly with INAIR Space through automatic integration.

Image 3.2: Interacting with INAIR Space software.

### 4. MAINTENANCE

The INAIR Wakey device requires minimal maintenance to ensure optimal performance.

- **Cleaning:** Gently wipe the device with a dry, soft cloth to remove dust or smudges. Avoid using liquid cleaners or abrasive materials.
- **Software Updates:** Regularly ensure that your INAIR Space software on both your PC and Spatial Computer is updated to the latest version. This ensures compatibility, security, and access to new features.
- **Storage:** When not in use, store the device in a cool, dry place away from direct sunlight and extreme temperatures.

### 5. TROUBLESHOOTING

If you encounter issues with your INAIR Wakey, consider the following troubleshooting steps:

- **PC Not Waking Up:**
  - Ensure the INAIR Wakey is securely plugged into a USB-C port on your PC.
  - Verify that both your PC and INAIR Spatial Computer are connected to the same network (Wi-Fi or Ethernet).

- Confirm that the INAIR Space software is running on your PC and you are logged into your INAIR account.
  - Check for any power management settings on your PC that might prevent wake-on-LAN or USB device wake-up.
- **Device Not Pairing:**
    - Restart both your PC and your INAIR Spatial Computer.
    - Ensure your INAIR Space software is up-to-date on both devices.
    - Verify that you are logged into the same INAIR account on both devices.
- **Connectivity Issues:**
    - Check your internet connection on both devices.
    - If using Wi-Fi, ensure a strong signal.

If these steps do not resolve the issue, please refer to the Support section for further assistance.

## 6. SPECIFICATIONS

Feature	Detail
Product Name	INAIR Wakey
Model Name	INAIR Wakey
Brand	INAIR
Color	Black
Connectivity Technology	Wi-Fi
Compatible Devices	Personal Computer
Special Feature	Lightweight
Button Quantity	1
Controller Type	Button Control
Interface	Type-C
Voltage/Current	5V – 1A

## Product Specifications

<b>Product Name</b>	INAIR Wakey
<b>Color</b>	Black
<b>Model</b>	Moo-A01
<b>Interface</b>	Type-c
<b>Voltage/Current</b>	5V == 1A

\*All measurements are manual; a 3-5mm variance is within the normal range.

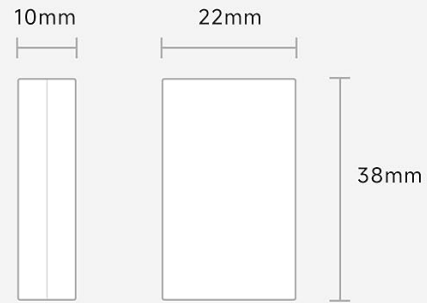 


Image 6.1: INAIR Wakey device dimensions.

## 7. WARRANTY INFORMATION

The INAIR Wakey device comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper installation.

For warranty claims or detailed terms and conditions, please retain your proof of purchase and contact INAIR customer support.

## 8. SUPPORT

For additional assistance, technical support, or to provide feedback, please visit the official INAIR website or contact our customer support team.

- **Online Support:** Visit [the INAIR Store on Amazon](#) for FAQs and product information.
- **Customer Service:** Refer to your product packaging or the INAIR website for specific contact details.