

[Manuals.plus](#) /

> [TANLANIN](#) /

> TANLANIN Vintage Portable CD Player with Bluetooth and Built-in Speakers (Model CD-001-WHT) User Manual

## TANLANIN CD-001-WHT

# TANLANIN Vintage Portable CD Player User Manual

Model: CD-001-WHT | Brand: TANLANIN

## INTRODUCTION

---

Thank you for choosing the TANLANIN Vintage Portable CD Player. This device combines classic aesthetics with modern functionality, offering multiple audio playback options including CD, Bluetooth input and output, USB, and AUX. Its compact, rechargeable design allows for versatile use both indoors and outdoors. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment of your CD player.

## WHAT'S IN THE BOX

---

- CD Player
- User Manual
- Charging Cable

## PRODUCT OVERVIEW AND COMPONENTS

---

Familiarize yourself with the various parts and controls of your TANLANIN Portable CD Player.



**Figure 1:** Front view of the TANLANIN Vintage Portable CD Player, showcasing its elegant white PU leather finish and rose gold hardware.



**Figure 2:** Close-up of the LED display and control panel, indicating various modes such as Bluetooth Input, Bluetooth Out, USB, CD, and Line/AUX. The intuitive controls allow for easy navigation and status monitoring.



## Bluetooth Receive

Stream CD through external Bluetooth speakers

**Figure 3:** Side view illustrating the compact dimensions (8 x 6 x 4.3 inches) and the Type-C charging port. The device features a built-in 2000 mAh rechargeable battery, providing 5-8 hours of playback on a 4-hour charge.

Your browser does not support the video tag.

**Video 1:** An overview of the TANLANIN Portable CD Player, demonstrating its physical features, rear panel connections (Power Switch, USB Audio Input, Type-C Charging Port, AUX Audio Input, Headphone Jack/AUX Audio Output), and basic CD loading and playback. It also highlights Bluetooth transmission capabilities.

## SETUP

### 1. Charging the Device

1. Locate the Type-C charging port on the rear panel of the CD player.

2. Connect the provided charging cable to the Type-C port and a suitable USB power adapter (not included).
3. The LED indicator will show charging status. A full charge typically takes approximately 4 hours and provides 5-8 hours of playback.

## 2. Inserting a CD

1. Open the top lid of the CD player.
2. Gently place a compatible CD (CD/CD-R/CD-RW/MP3/WMA formats supported) onto the spindle, ensuring it is centered.
3. Close the lid.


## 3. Powering On/Off

1. Locate the Power Switch on the rear panel.
2. Slide the switch to the 'ON' position to power on the device.
3. Slide the switch to the 'OFF' position to power off the device.

# OPERATING INSTRUCTIONS

## 1. CD Playback

1. Ensure a CD is properly inserted and the device is powered on.
2. The player will automatically detect the CD and begin playback in CD Mode. The LED display will show 'CD'.
3. Use the Play/Pause, Next Song, Previous Song, and Stop buttons on the control panel to manage playback.
4. The device supports single song repeat and all repeat playback functions.

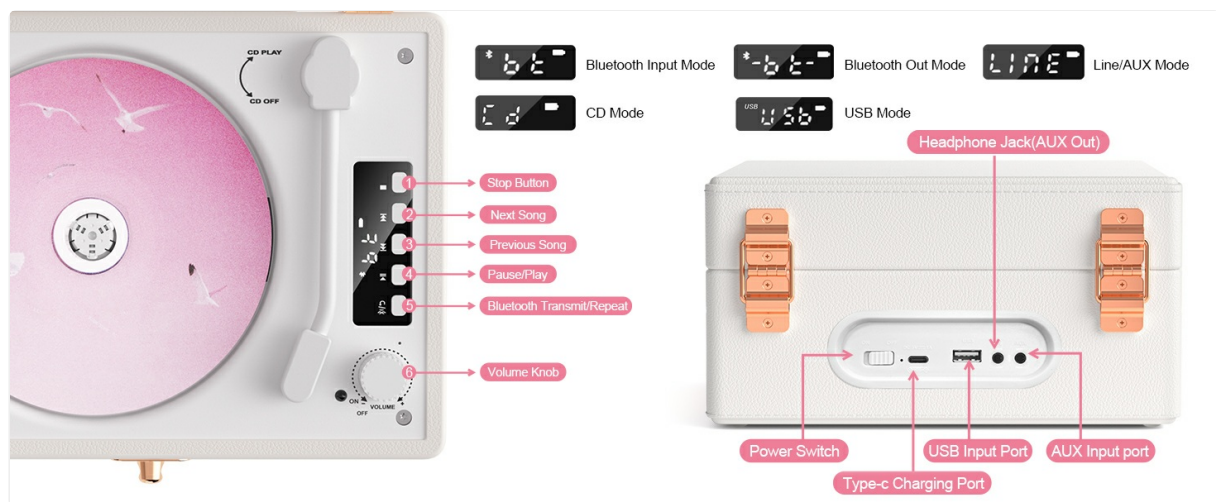

**Figure 4:** The CD player displaying its compatibility with various formats including CD, CD-R, CD-RW, MP3, and WMA.

## 2. Bluetooth Input Mode (Receiving Audio)

1. Press the Bluetooth Transmit/Repeat Switch button until the LED display shows 'bt' (Bluetooth Input Mode).
2. On your external device (smartphone, tablet, etc.), enable Bluetooth and search for 'TANLANIN CD Player'.
3. Select the device to pair. Once connected, audio from your external device will play through the CD player's built-in speakers.

U-Disk via the USB port.

non-Bluetooth devices.

## MULTIPLE POWER SUPPLY OPTIONS

COMPACT SIZE

EASY TO CARRY



Figure 5: Demonstrates connecting a smartphone to the CD player via Bluetooth in receiver mode, allowing music playback from the phone through the player.

### 3. Bluetooth Output Mode (Transmitting Audio)

1. Ensure the CD player is in CD, USB, or AUX mode.
2. Press and hold the Bluetooth Transmit/Repeat Switch button until the LED display shows '-bt-' (Bluetooth Output Mode).
3. Place your Bluetooth headphones or speaker into pairing mode.
4. The CD player will automatically search and connect to the nearest Bluetooth audio device. Once connected, audio will be transmitted to your external Bluetooth device.



Figure 6: Illustrates the CD player transmitting audio via Bluetooth to external headphones or a Bluetooth speaker, enabling private or amplified listening.

### 4. USB Playback

1. Insert a USB flash drive containing MP3/WMA audio files into the USB Audio Input port on the rear panel.
2. The player will automatically switch to USB Mode, indicated by 'USB' on the LED display, and begin playback.
3. Use the control buttons to navigate tracks and control playback.

# AUDIO INPUT MODE



Read and play audio files from



Supports audio input from

Figure 7: Shows the USB input port and a USB drive, indicating the ability to read and play audio files directly from a U-Disk.

## 5. AUX Input Mode

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX Audio Input port on the rear panel using a 3.5mm audio cable (not included).
2. The player will automatically switch to AUX Mode, indicated by 'LINE' on the LED display.
3. Control playback directly from your connected external device.

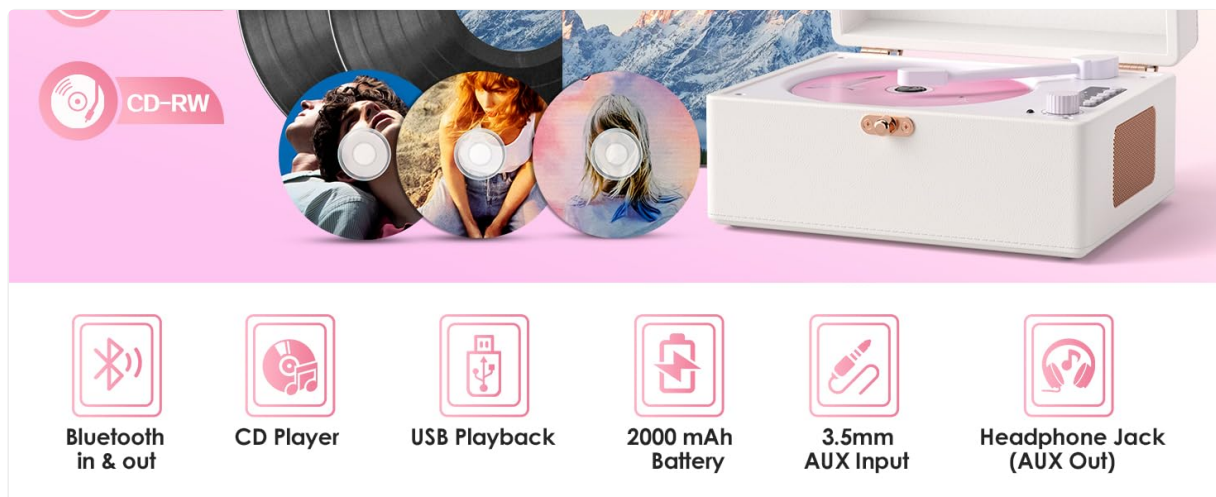


Figure 8: Depicts the AUX input port, allowing connection of non-Bluetooth audio devices for playback through the CD player.

## 6. Volume Control

1. Rotate the 'VOLUME' knob on the control panel clockwise to increase volume and counter-clockwise to decrease volume.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the CD player. For the CD lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the CD player in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the lid is closed to prevent dust accumulation.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted or power switch is off.	Charge the device using the provided cable. Ensure the power switch is in the 'ON' position.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD with a soft cloth. Ensure the CD is placed correctly on the spindle. Try a different CD.
No sound from speakers.	Volume is too low or device is in Bluetooth Output mode.	Increase the volume using the knob. Ensure the device is not transmitting audio to an external Bluetooth device if you want sound from internal speakers.
Cannot connect via Bluetooth.	Device is not in the correct Bluetooth mode or too far from the paired device.	Ensure the CD player is in the correct Bluetooth mode (Input or Output). Move the devices closer. Restart both devices and try pairing again.
USB playback not working.	USB drive not inserted correctly or unsupported file format.	Ensure the USB drive is fully inserted. Verify that audio files are in MP3 or WMA format.

## SPECIFICATIONS

---

- **Model Name:** CD-001-WHT
- **Brand:** TANLANIN
- **Product Dimensions:** 8 x 6 x 4.3 inches
- **Item Weight:** 3.41 pounds
- **Battery:** Built-in 2000 mAh rechargeable battery (1 12V battery included)
- **Battery Life:** 5-8 hours (playback)
- **Charging Time:** Approx. 4 hours
- **Supported CD Formats:** CD, CD-R, CD-RW, MP3, WMA
- **Connectivity Technology:** Auxiliary, Bluetooth (Input & Output), USB
- **Special Features:** Battery Level Indicator, Battery protection function, LED Display, Built-in Speakers

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official TANLANIN website. Keep your purchase receipt as proof of purchase for any warranty claims.