

[Manuals.plus](#) /

› [WONDER](#) /

› Wonder WJ13602ED Dishwasher User Manual

WONDER WJ13602ED

Wonder WJ13602ED Dishwasher User Manual

Model: WJ13602ED

1. SAFETY INFORMATION

Please read this manual carefully before using your dishwasher. Keep it for future reference. This appliance is intended for household use only.

1.1 General Safety

- Ensure the appliance is properly installed and grounded by a qualified technician.
- Do not operate the dishwasher if it is damaged. Contact customer support.
- Keep children and pets away from the dishwasher when it is in operation.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the hot wash or drying cycle, as hot water or steam may escape.

1.2 Electrical Safety

- The dishwasher must be connected to a properly grounded electrical outlet.
- Do not use extension cords or adapter plugs with this appliance.
- Before cleaning or performing maintenance, always unplug the dishwasher or switch off the power supply at the circuit breaker.

1.3 Water Safety

- Ensure all water connections are secure to prevent leaks.
- The water inlet hose should not be cut or damaged.

2. PRODUCT OVERVIEW

The Wonder WJ13602ED is a 60cm freestanding dishwasher designed for efficient cleaning of your daily dishes and glassware. It features a capacity for 14 place settings, 6 wash programs, and a user-friendly LED touch display.

2.1 Control Panel



Image 1: Front view of the Wonder WJ13602ED dishwasher control panel. It features a central LED display showing program time, surrounded by touch-sensitive buttons for power, program selection (P), delay start (clock icon), function selection (F), half-load (1/2), and start/pause/reset (play/pause/stop icon). A child lock indicator (lock icon with 3sec) is also visible.

The intuitive LED touch display allows for easy selection of wash programs and special functions. Refer to the detailed operating instructions for specific button functionalities.

2.2 Energy Label



Image 2: Energy efficiency label for the Wonder WJ13602ED dishwasher. It indicates an energy efficiency class of E, an energy consumption of 95 kWh per 100 cycles, water consumption of 11.5 liters per cycle, and a noise level of 49 dB. The capacity is 14 place settings. For more details, visit the official EPREL database: eprel.ec.europa.eu/qr/2284275.

This dishwasher is rated Class E for energy efficiency, ensuring optimized performance with reduced energy consumption. The noise level is 49 dB, providing quiet operation.

2.3 Interior Overview



Image 3: Interior view of the Wonder WJ13602ED dishwasher, showing the upper and lower racks designed to accommodate 14 place settings. The cutlery basket is visible in the lower rack.

The dishwasher features two adjustable trays and a dedicated cutlery basket, providing flexible loading options for various dish sizes and types.

3. SETUP

3.1 Installation

The Wonder WJ13602ED is a freestanding dishwasher. Ensure it is placed on a level surface and properly connected to the water supply and drainage system. The electrical connection requires a 220 Volt supply.

- **Positioning:** Place the dishwasher in its desired location, ensuring there is adequate space for opening the door and accessing connections.
- **Water Inlet:** Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- **Water Drain:** Connect the drain hose to a suitable drain pipe or the sink trap. Ensure the hose is not kinked or obstructed.
- **Electrical Connection:** Plug the appliance into a grounded 220V electrical outlet. Do not use extension cords.

For detailed installation instructions, refer to the separate installation guide provided with the appliance.

3.2 First Use Preparation

Before the first wash cycle, perform the following steps:

1. **Add Dishwasher Salt:** Unscrew the cap of the salt dispenser (usually located at the bottom of the wash tub). Fill the dispenser with dishwasher salt using the provided funnel. Add water until it overflows. Replace the cap securely.
2. **Add Rinse Aid:** Open the rinse aid dispenser (located inside the door, next to the detergent dispenser). Fill with rinse aid up to the maximum level indicator. Close the dispenser cap firmly.
3. **Run an Empty Cycle:** Select a short program without dishes to clean the interior of the dishwasher and ensure proper functioning of the salt and rinse aid dispensers.

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

Proper loading ensures optimal cleaning results and prevents damage to dishes.

- Scrape off large food particles from dishes before loading.
- Place larger items and pots in the lower rack.
- Place glasses, cups, and smaller plates in the upper rack.
- Ensure dishes do not block the spray arms from rotating freely.
- Place cutlery in the dedicated cutlery basket with handles down for forks and spoons, and handles up for knives (for safety).

4.2 Adding Detergent

Open the detergent dispenser located on the inside of the door. Add the appropriate amount of dishwasher detergent (powder, liquid, or tablet) according to the program selected and the soil level of your dishes. Close the dispenser lid firmly.

4.3 Selecting a Program

The Wonder WJ13602ED offers 6 wash programs. To select a program:

1. Press the Power button (**U**) to turn on the dishwasher.
2. Press the Program button (**P**) repeatedly to cycle through the available programs. The selected program will be indicated on the LED display.
3. Refer to the program chart (usually on the inside of the door or in the full manual) for details on each program's duration and temperature.

4.4 Special Functions

- **Delay Start (Clock icon):** Press this button to delay the start of the wash cycle by a few hours.
- **Function (F):** This button may activate additional features depending on the selected program, such as extra drying or intensive wash.
- **Half Load (1/2):** Use this function when you have fewer dishes to save water and energy.
- **Stop&Go:** This function allows you to pause the current cycle, add or remove dishes, and then resume the cycle from where it left off. Press the Start/Pause button to activate.
- **Child Lock (Lock icon, 3sec):** To activate or deactivate the child lock, press and hold the indicated button (often the 'F' or '1/2' button) for approximately 3 seconds.

4.5 Starting a Wash Cycle

After loading dishes, adding detergent, and selecting a program:

1. Close the dishwasher door firmly.
2. Press the Start/Pause button (play/pause/stop icon) to begin the cycle.
3. The LED display will show the remaining time.

4.6 End of Cycle

When the wash cycle is complete, the dishwasher will signal with an audible tone or a message on the display. Open the door slightly to allow steam to escape and dishes to cool before unloading. Unload the lower rack first to prevent water

from dripping onto dry dishes.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning Filters

The filter system prevents large food particles from entering the pump. Clean the filters regularly (e.g., once a week or every few cycles).

1. Turn off and unplug the dishwasher.
2. Locate the filter assembly at the bottom of the wash tub.
3. Twist and remove the coarse filter, then separate the fine filter.
4. Rinse all filter components under running water to remove any trapped food particles. Use a soft brush if necessary.
5. Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked in place.

5.2 Cleaning Spray Arms

Check the spray arm nozzles for blockages regularly. If clogged, remove the spray arms and clear the holes with a thin object like a toothpick. Rinse them thoroughly before reattaching.

5.3 Exterior and Interior Cleaning

- Wipe the exterior of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the door seal regularly with a damp cloth to remove food residues and prevent odors.
- Periodically run a dishwasher cleaning cycle using a specialized dishwasher cleaner to remove grease and limescale buildup.

5.4 Winterization (for non-use in cold environments)

If the dishwasher will be left in an unheated place during winter, drain all water from the appliance to prevent freezing and damage. Consult the full manual for detailed instructions on winterization.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown/circuit breaker tripped.	Check power connection; Ensure door is latched; Check household fuse/breaker.
Dishes are not clean	Improper loading; Insufficient detergent; Clogged spray arms/filters; Incorrect program selected.	Reload dishes correctly; Add more detergent; Clean spray arms and filters; Select a more intensive program.
Water not draining	Drain hose kinked/blocked; Clogged filter; Drain pump malfunction.	Check and clear drain hose; Clean filters; Contact service if pump issue persists.
White streaks on dishes	Too much detergent; Insufficient rinse aid; Hard water.	Reduce detergent; Refill rinse aid; Adjust water softener setting (if applicable).

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Model: WJ13602ED

Brand: WONDER

Type: Freestanding Dishwasher

Capacity: 14 Place Settings

Dimensions (W x D x H): 59 cm x 59.8 cm x 84.5 cm

Weight: 47 kg

Noise Level: 49 Decibels

Energy Efficiency Class: E

Programs: 6

Control Type: Touch

Voltage: 220 Volts

Color: White

Recommended Use: Daily dishware and glassware

Included Components: Dishwasher, Instruction Manual

EPREL Product Database Link: eprel.ec.europa.eu/qr/2284275

8. WARRANTY AND SUPPORT

This product comes with a comprehensive instruction manual. For specific warranty details, please refer to the warranty card included with your purchase or contact Wonder customer support directly. Keep your proof of purchase for any warranty claims.

For technical assistance, spare parts, or service requests, please contact the authorized Wonder service center in your region. Contact information can typically be found in the full instruction manual or on the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FMZQT4HX>

More documents and user manuals: <https://manuals.plus/>