

WONDER WJ13602EDX

Wonder WJ13602EDX Dishwasher User Manual

Model: WJ13602EDX

Brand: WONDER

1. INTRODUCTION

Thank you for choosing the Wonder WJ13602EDX Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before using the dishwasher and keep it for future reference.

The Wonder WJ13602EDX is a 60cm wide dishwasher designed for modern kitchens. It offers a capacity for 14 place settings and features a residual drying system. Equipped with a universal motor, it boasts an energy efficiency class E and operates at a maximum noise level of 49 dB. The stainless steel aesthetic includes two baskets and a cutlery basket. Its tactile control system with an LED display provides 6 washing programs and various functions to ensure optimal cleaning results and care for your dishes.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- Read all instructions before using the appliance.
- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact authorized service personnel.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Sharp items should be loaded with points down to avoid injury.

- Do not overload the dishwasher.
- Disconnect the power supply before performing any maintenance or cleaning.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your dishwasher. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to your dealer immediately.

3.2 Positioning

Place the dishwasher on a flat, stable surface. Ensure there is adequate space for door opening and closing. The dimensions of the product are approximately 59 cm (depth) x 59.8 cm (width) x 84.5 cm (height).

3.3 Water Connection

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Connect the drain hose to a suitable drain pipe, ensuring it is securely fastened and free from kinks.

3.4 Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 220 Volts. Do not use extension cords or adapters.

3.5 Leveling

Adjust the leveling feet at the bottom of the dishwasher to ensure it is perfectly level. This prevents vibrations and ensures proper door alignment.

4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Wonder dishwasher.



Figure 4.1: Dishwasher Control Panel. This image shows the LED display, power button, program selection button, delay start, function buttons (e.g., half load, extra dry), and indicators for salt and rinse aid.

4.1 Loading the Dishwasher

- Scrape off large food particles from dishes.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure dishes do not block the spray arms.
- Place cutlery in the cutlery basket with handles down for most items, but sharp knives with points down.

4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid indicator and refill the rinse aid dispenser if necessary.

4.3 Program Selection

The dishwasher features 6 washing programs. Use the program selection button on the tactile LED display to choose the desired program based on the soil level and type of dishes.

Table 4.1: Typical Wash Programs

Program	Description	Typical Use
Intensive	For heavily soiled dishes, pots, and pans.	Dried-on food, stubborn stains.
Eco	Standard program for normally soiled dishes, most efficient in terms of energy and water consumption.	Daily use, mixed load.
Quick	For lightly soiled dishes that do not require drying.	Glasses, cups, lightly soiled items.
Glass	For delicate items like glasses and fine china.	Fragile items.
90 Min	For normally soiled dishes that need a quicker wash.	Everyday dishes.
Pre-wash	Short rinse to prevent food from drying on dishes.	Before a full wash, or for dishes stored for a while.

4.4 Starting a Wash Cycle

Close the dishwasher door firmly. Press the Power button to turn on the appliance. Select your desired program. Press the Start/Pause button to begin the cycle. The "Stop&Go" function allows you to pause the cycle, add or remove items, and then resume.

4.5 End of Cycle

The dishwasher will signal when the cycle is complete. Open the door slightly to allow steam to escape before unloading. Wait a few minutes for dishes to cool and dry completely.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

5.1 Cleaning the Filters

The filter system should be cleaned regularly to prevent blockages and ensure efficient washing. Twist the cylindrical filter counter-clockwise and remove it. Remove the fine filter and coarse filter. Rinse all filter components under running water to remove food particles. Reassemble the filters and place them back into the dishwasher, twisting the cylindrical filter clockwise until it locks.

5.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin wire or toothpick. Rinse thoroughly and reattach.

5.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, periodically run a dishwasher cleaner or a cycle with white vinegar to remove mineral buildup and odors.

5.4 Salt and Rinse Aid Indicators

Monitor the salt and rinse aid indicators on the control panel. Refill the salt reservoir and rinse aid dispenser as needed to ensure proper washing and drying results.

6. TROUBLESHOOTING

Before contacting service, refer to this section for common issues and their solutions.

Table 6.1: Common Troubleshooting Guide

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; fuse blown.	Check power connection; ensure door latches; check circuit breaker.
Dishes not clean	Improper loading; clogged spray arms; insufficient detergent; incorrect program.	Reload dishes correctly; clean spray arms; add more detergent; select appropriate program.
Water not draining	Clogged filter; kinked drain hose; drain pump malfunction.	Clean filters; straighten drain hose; contact service if pump is faulty.
Excessive noise	Dishes rattling; foreign object in pump; improper leveling.	Rearrange dishes; check pump area; level the dishwasher.
Spots or film on dishes	Low rinse aid; hard water; incorrect detergent dosage.	Refill rinse aid; use dishwasher salt; adjust detergent.

If the problem persists after attempting these solutions, please contact customer service.

7. SPECIFICATIONS

Key technical specifications for the Wonder WJ13602EDX Dishwasher:


- **Model Number:** WJ13602EDX
- **Brand:** WONDER
- **Dimensions (D x W x H):** 59 cm x 59.8 cm x 84.5 cm
- **Weight:** 47 kg
- **Capacity:** 14 Place Settings
- **Color:** Inox (Stainless Steel)
- **Control Type:** Touch (Tactile LED Display)
- **Number of Programs:** 6
- **Noise Level:** 49 dB
- **Energy Efficiency Class:** E
- **Voltage:** 220 Volts
- **Included Components:** Dishwasher, Instruction Manual
- **Country of Origin:** Spain

 


ENERG ⚡






95 kWh / 

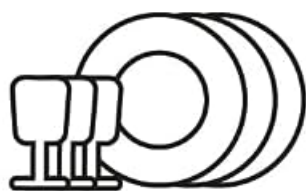


14 x



 11,5 L

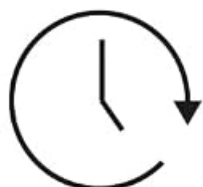

1:00

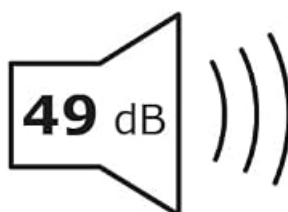 

49 dB

Figure 7.1: Energy Efficiency Label. This label provides key energy consumption and performance data for the dishwasher. For more detailed information, refer to the official EPREL database: <https://eprel.ec.europa.eu/qr/2284277>

8. WARRANTY AND SUPPORT

Your Wonder WJ13602EDX Dishwasher comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact your retailer or the authorized Wonder service center. Ensure you have your model number (WJ13602EDX) and purchase date available when contacting support.



Figure 8.1: Wonder WJ13602EDX Dishwasher. A full view of the appliance.