Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- MCombo /
- > MCombo 5-Button Lift Chair Remote Controller User Manual

MCombo 6160-FF-HLR

MCombo 5-Button Lift Chair Remote Controller User Manual

Model: 6160-FF-HLR

INTRODUCTION

This manual provides comprehensive instructions for the proper setup, operation, and maintenance of your MCombo 5-Button Lift Chair Remote Controller. Please read this manual thoroughly before use to ensure safe and efficient operation.

PRODUCT OVERVIEW

The MCombo 5-Button Lift Chair Remote Controller is designed as a replacement part for various MCombo lift recliner chair models.





Image 1: Front view of the MCombo 5-Button Lift Chair Remote Controller. The remote is black with five green illuminated buttons: four directional buttons arranged around a central 'HOME' button. The MCombo logo is visible at the bottom.

Compatibility

This remote controller is compatible with the following MCombo Lift Recliner Chair models:

- #7890
- #7815
- #7679
- #7680

- #7893
- #R7897
- #R7891
- #R7894
- #R7070
- #R7166
- #R7688
- #R7677

SETUP

- 1. **Disconnect Power:** Before connecting the new remote, ensure your lift chair is unplugged from the main power outlet to prevent electrical hazards.
- 2. **Locate Connection Port:** Identify the remote control connection port on your MCombo lift chair. This is typically located near the motor or on the side of the chair frame.
- 3. **Connect New Remote:** Carefully plug the connector of the new MCombo 5-Button Lift Chair Remote Controller into the chair's connection port. Ensure a secure and snug fit.
- 4. **Reconnect Power:** Once the remote is securely connected, plug your lift chair back into the main power outlet.
- 5. **Test Functions:** Test all buttons on the remote to ensure proper operation of the lift chair's functions.

OPERATING INSTRUCTIONS

The MCombo 5-Button Lift Chair Remote Controller features intuitive controls for adjusting your chair's position. Refer to the image below for button identification.





Image 2: Close-up of the MCombo 5-Button Lift Chair Remote Controller showing the five green buttons. The top-left button moves the chair up, top-right reclines the back, bottom-left lifts the footrest, bottom-right lowers the footrest, and the center button returns the chair to the home

- **Top-Left Button (Chair Up):** Press and hold this button to raise the entire chair, assisting with standing.
- Top-Right Button (Recline Back): Press and hold this button to recline the chair's backrest.
- Bottom-Left Button (Footrest Up): Press and hold this button to raise the footrest.
- Bottom-Right Button (Footrest Down): Press and hold this button to lower the footrest.
- Center Button (HOME): Press this button to return the chair to its default, upright, and un-reclined position.

- Cleaning: Wipe the remote controller with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Storage: Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- Cable Inspection: Periodically inspect the remote control cable for any signs of wear, fraying, or damage. If damage is observed, discontinue use and replace the remote.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Chair not plugged in. Loose connection. Damaged cable.	Ensure chair is securely plugged into a working power outlet. Check remote cable connection to the chair. Inspect cable for damage; replace remote if damaged.
Only some buttons work.	Internal remote malfunction.	Contact MCombo customer support for assistance or replacement.
Chair moves erratically.	Faulty remote or chair motor.	Disconnect and reconnect the remote. If the issue persists, contact MCombo customer support.

SPECIFICATIONS

• Model Number: 6160-FF-HLR

• Button Configuration: 5-Button (Up, Recline, Footrest Up, Footrest Down, Home)

· Color: Black

• Compatibility: MCombo Lift Recliner Chairs (specific models listed in Product Overview)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your MCombo lift chair or visit the official MCombo website. You may also contact MCombo customer service directly for assistance with this replacement part.

MCombo Official Store: Visit MCombo Store on Amazon

Related Documents - 6160-FF-HLR



MCombo Lift Recliner Owner's Manual

Owner's manual for the MCombo Lift Recliner, providing safety guidelines, assembly instructions, operating procedures, care and maintenance tips, troubleshooting, warranty information, and customer support details for models R7677, R7688, R7897, R7891, and R7894.



Mcombo Lift Recliner Owner's Manual: Assembly, Operation, and Care

Comprehensive owner's manual for the Mcombo Lift Recliner, covering assembly instructions, operating procedures, care and maintenance, troubleshooting, warranty, and return policy. Includes model numbers 6160-7893, 6160-7679, 6160-7680.

