

[Manuals.plus](#) /

> [Qimedo](#) /

> Qimedo Electric Mop YD-QJS721SS User Manual

Qimedo YD-QJS721SS

Qimedo Electric Mop YD-QJS721SS User Manual

Model: YD-QJS721SS

1. INTRODUCTION

Thank you for choosing the Qimedo Electric Mop. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.

The Qimedo Electric Mop (Model YD-QJS721SS) is designed for effective floor cleaning, featuring a rechargeable battery and replaceable mop pads for convenience.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Qimedo Electric Mop Unit (Handle, Pole, Mop Head)
- Rechargeable Battery (Quantity: 2)
- Mop Pads (Quantity: 4, including 2 green scrubbing pads and 2 grey microfiber pads)
- Charging Adapter (not explicitly listed but implied for a rechargeable device)
- User Manual (this document)



Figure 1: Qimedo Electric Mop components including the main mop unit, two rechargeable batteries, and four mop pads (two green, two grey).

3. SAFETY INSTRUCTIONS

To ensure safe operation, please adhere to the following guidelines:

- Read all instructions before use.
- Do not immerse the main unit in water.
- Keep away from children and pets.
- Use only the provided charging adapter and batteries.
- Do not operate if the device or charger is damaged.
- Avoid using on extremely wet surfaces to prevent electrical hazards.
- Store in a dry place when not in use.

4. SETUP

4.1 Assembling the Mop

1. **Attach the Pole:** Insert the lower pole section into the mop head unit until it clicks securely into place.
2. **Attach the Handle:** Connect the upper handle section to the lower pole section, ensuring a firm connection.
3. **Install Mop Pads:** Align the mop pads with the hook-and-loop fasteners on the bottom of the mop head. Press firmly to secure them.

4.2 Charging the Battery

Before first use, fully charge the battery. The mop comes with two rechargeable batteries.

1. Insert a battery into the charging slot on the mop unit or external charger (if provided).
2. Connect the charging adapter to a power outlet.
3. The battery indicator lights on the mop unit (100%, 75%, 50%, 25%) will illuminate to show charging progress. A full charge is indicated when all lights are solid.
4. Charging time may vary. Disconnect the charger once fully charged.



Figure 2: Close-up of the mop handle showing the power button and battery indicator lights (100%, 75%, 50%, 25% labels are visible on the main body). The image also shows the two rechargeable batteries.

5. OPERATING INSTRUCTIONS

5.1 Preparing for Cleaning

- Ensure the battery is fully charged and inserted correctly into the mop unit.
- Attach the desired mop pads. For general cleaning, use the grey microfiber pads. For tougher stains, the green scrubbing pads may be more effective.
- For optimal results, lightly dampen the mop pads with water or a suitable floor cleaner before use.

5.2 Starting the Mop

1. Press the power button located on the handle to turn the mop on. The mop pads will begin to rotate.
2. Guide the mop across the floor surface. The rotating pads will clean and polish.
3. The mop is designed for use on various floor types.

5.3 Stopping the Mop

Press the power button again to turn the mop off.

6. MAINTENANCE

6.1 Cleaning Mop Pads

- After each use, remove the mop pads from the mop head.
- The mop pads are washable. Hand wash or machine wash with mild detergent. Do not use bleach or fabric softener.
- Air dry the mop pads completely before reattaching or storing.

6.2 Cleaning the Mop Unit

- Wipe the exterior of the mop head and pole with a damp cloth.
- Do not rinse the mop head directly under water or immerse it.
- Ensure the charging port is clean and dry.

6.3 Battery Care and Storage

- Store batteries in a cool, dry place.
- If storing for extended periods, charge the battery periodically to maintain its lifespan.
- Do not expose batteries to extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop does not turn on.	Battery is not charged or not inserted correctly.	Ensure battery is fully charged and properly seated.
Mop pads do not rotate.	Obstruction or loose connection.	Check for debris under the pads. Ensure the pole is securely connected.

Problem	Possible Cause	Solution
Poor cleaning performance.	Mop pads are dirty or worn out.	Clean or replace mop pads. Dampen pads before use.
Battery drains quickly.	Battery not fully charged or nearing end of life.	Ensure full charge. Consider replacing battery if performance consistently degrades.

8. SPECIFICATIONS

Model: YD-QJS721SS

Brand: Qimedo

Material: Metal, Plastic

Color: Yellow

Item Weight: 454 g

Special Features: Rechargeable, Replaceable Head

Surface Recommendation: Floor

Included Components: Battery, Mop Pads

UPC: 199284850637

Dimensions (Parcel): 43.18 x 19.81 x 17.02 cm

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Qimedo customer service through their official website or the retailer where the product was purchased. Please have your model number (YD-QJS721SS) and purchase details ready when contacting support.

