

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AX WABER](#) /

› [AX WABER Floor TV Stand with Power Outlet Instruction Manual, Model AX1010TW](#)

AX WABER AX1010TW

AX WABER Floor TV Stand with Power Outlet Instruction Manual

Model: AX1010TW | Brand: AX WABER

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your AX WABER Floor TV Stand with Power Outlet. Please read this manual thoroughly before installation and use to ensure safe and correct operation. Keep this manual for future reference.



Figure 1: AX WABER Floor TV Stand with Power Outlet in a modern living room setting.

2. SAFETY INFORMATION

Always follow basic safety precautions when installing and using this product to reduce the risk of injury or damage. This product is designed for indoor use only.

- Do not exceed the maximum weight capacity of 88 lbs (40 kg).
- Ensure the TV size is within the recommended range of 27-65 inches.
- Verify VESA mounting patterns (100x100mm to 400x400mm) are compatible with your TV.
- Always use the safety lock mechanism to secure the TV to the stand.
- Keep children and pets away from the stand during assembly and operation.
- Do not attempt to modify the product.

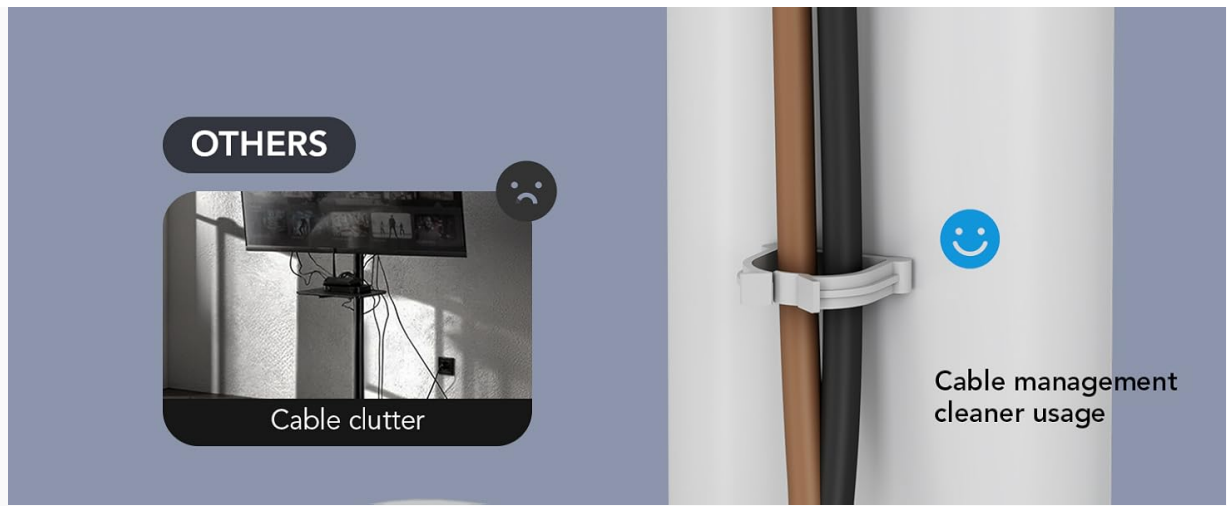


Figure 2: Safety lock mechanism to prevent TV from dropping.

3. PACKAGE CONTENTS

Before assembly, ensure all parts are present and undamaged. Refer to the detailed installation manual included in the packaging for a complete list of components and hardware.



Figure 3: Overview of the AX WABER Floor TV Stand with Power Outlet.

4. SPECIFICATIONS

Feature	Detail
Brand	AX WABER

Model	AX1010TW
Compatible TV Sizes	27-65 inches
Maximum TV Weight	88 lbs (40 kg)
VESA Compatibility	100x100mm to 400x400mm
Movement Type	Swivel (± 35 degrees)
Height Adjustment	9 levels (985-1285mm)
Power Outlet	4 AC outlets (120V/15A), 6.5ft power cord
Material	Alloy Steel, Tempered Glass Base
Item Weight	18.76 pounds



Figure 4: VESA compatibility and dimensions.

5. SETUP AND ASSEMBLY INSTRUCTIONS

The AX WABER Floor TV Stand is designed for easy assembly. Most accessories are pre-assembled, and

a detailed installation manual with numbered parts is included. Assembly can typically be completed within 15 minutes.

5.1. Unpacking and Preparation

- Carefully unpack all components and verify against the parts list in the included manual.
- Lay out all parts on a soft, clean surface to prevent scratches.

5.2. Assembling the Base and Column

Follow the step-by-step diagrams in your manual to attach the main column to the tempered glass base. Ensure all screws are tightened securely.

5.3. Attaching the TV Mounting Brackets

Attach the vertical mounting brackets to the back of your TV using the appropriate screws and spacers provided. Ensure the brackets are vertical and securely fastened to your TV's VESA holes.

Video 1: AX WABER TV Stand Assembly and Features (Model AX1010TW). This video demonstrates the assembly process and highlights key features like the integrated power outlet, swivel, and height adjustment.

5.4. Mounting the TV to the Stand

- Carefully lift your TV and hook the attached brackets onto the main mounting plate of the stand.
- Engage the safety lock mechanism to prevent accidental dislodgement.

Video 2: Mobile TV Stand Features. This video illustrates the mobility, socket solution, swivel, height adjustment, and safety features of a similar AX WABER TV stand.

6. OPERATING INSTRUCTIONS

6.1. Height Adjustment

The TV stand offers 9 levels of height adjustment, ranging from 985mm to 1285mm. To adjust the height, loosen the securing bolts on the main column, slide the TV to the desired height, and re-tighten the bolts firmly.

9 Height adjustment



Figure 5: Height adjustment range of the TV stand.

6.2. Swivel Function

The TV mount allows for a ± 35 -degree swivel. Gently push the TV to the left or right to achieve your preferred viewing angle. This feature is ideal for adjusting the screen from different positions in a room.



Figure 6: Swivel functionality for optimal viewing angles.

6.3. Integrated Power Outlet

The stand features a built-in power outlet with 4 AC outlets (120V/15A) and a 6.5ft power cord. Plug your TV and other devices directly into the stand's power strip to minimize cable clutter. The ambient lighting at the base can be turned on/off via a switch.

Integrated Power Strip



6.5-Foot
Power Cord



120V/15A
AC Outlets



Socket
UL Certification

6.5ft Power Cable



Figure 7: Integrated power strip details.

6.4. Cable Management

Utilize the integrated cable management clips along the main column to organize and conceal TV and device cables, maintaining a tidy and organized appearance.

Organize the Cables



Others



Figure 8: Cable management system.

7. MAINTENANCE

- Regularly check all screws and connections to ensure they remain tight and secure.
- Clean the stand with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Keep the power outlets free from dust and debris.

8. TROUBLESHOOTING

- **TV is wobbly:** Ensure all assembly screws are fully tightened, especially those connecting the TV to the mounting brackets and the column to the base. Verify the TV weight does not exceed the maximum capacity.
- **Power outlets not working:** Check if the stand's main power cord is securely plugged into a functional wall outlet. Ensure the power switch on the stand (if applicable) is in the 'ON' position.
- **Difficulty adjusting height/swivel:** Ensure no cables are obstructing movement. For height adjustment, loosen the securing bolts before attempting to slide the TV.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official AX WABER website. Keep your purchase receipt as proof of purchase.

© 2025 AX WABER. All rights reserved.