

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AKASO](#) /
- › [AKASO Magnetic Neck Mount Instruction Manual](#)

## AKASO Magnetic Neck Mount

# AKASO Magnetic Neck Mount Instruction Manual

Model: Magnetic Neck Mount (ASIN: B0FN3RXSJC)

## INTRODUCTION

---

The AKASO Magnetic Neck Mount provides a convenient and hands-free solution for recording videos with your action camera or smartphone. Its innovative magnetic design allows for quick attachment and detachment, while supporting various shooting angles, including 180-degree rotation. This manual will guide you through the setup, operation, and maintenance of your new neck mount.

# 多様なシーンで活躍



Image: The AKASO Magnetic Neck Mount being used in various scenarios such as hiking, fishing, and cycling, demonstrating its versatility.

## PACKAGE CONTENTS

---

Please check that all items are present in your package:

- AKASO Magnetic Neck Mount (main unit with neck strap)
- Magnetic Plate
- Universal Action Camera Adapter

*Note: Additional accessories like a chest strap for enhanced stability are sold separately.*

# 幅広い互換性を実現

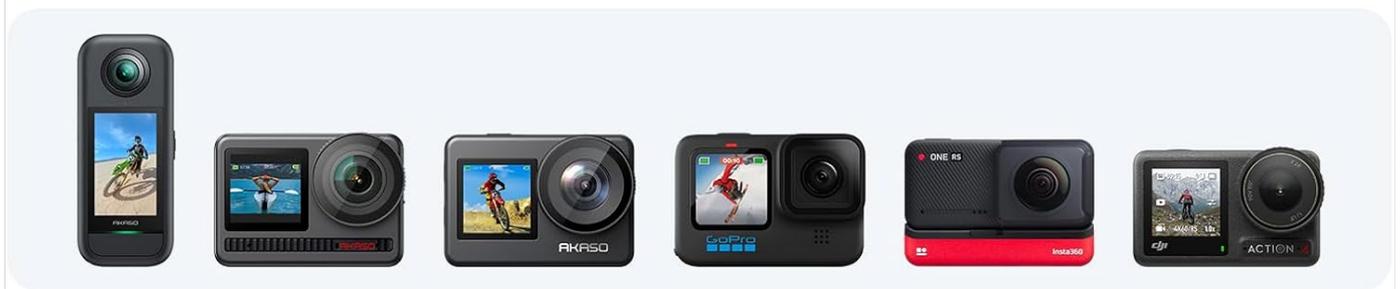


Image: The main components of the AKASO Magnetic Neck Mount, including the neck strap, magnetic plate, and universal adapter, alongside various compatible action cameras and smartphones.

## SETUP GUIDE

- 1. Attach Camera to Adapter:** Secure your action camera or smartphone holder to the universal action camera adapter. Ensure it is tightened firmly.
- 2. Connect Adapter to Magnetic Plate:** Attach the adapter with your camera to the magnetic plate.
- 3. Wear the Neck Mount:** Place the neck strap around your neck. The magnetic base should rest inside your clothing, against your chest.
- 4. Secure the Camera:** Position the magnetic plate (with camera attached) on the outside of your clothing, aligning it with the magnetic base worn inside. The strong magnets will snap into place, securing your camera for hands-free recording.



Image: A person wearing the AKASO Magnetic Neck Mount with an action camera attached, demonstrating the hands-free setup.

# 強力マグネットでピタッと固定！

服の内側にも装着可能



Image: A close-up view illustrating the strong magnetic connection between the neck mount's internal base and external plate, ensuring secure camera attachment.

## OPERATING INSTRUCTIONS

---

- **Hands-Free Recording:** Once securely mounted, your camera will record from a natural, first-person perspective, leaving your hands free for other activities.
- **Quick Release:** To detach the camera, simply pull the magnetic plate away from the base. Reattachment is just as easy by bringing the magnets close together.
- **Angle Adjustment:** The mount allows for 180-degree rotation, enabling you to switch between vertical and horizontal shooting modes or adjust the camera angle as needed.
- **Magnetic Stand Function:** The magnetic plate can also be used independently to attach your camera to any magnetic metal surface, transforming it into a temporary stand.

# 多角度撮影対応

ワンタッチで着脱でき、撮影後のリプレイも便利



Image: Demonstrates the multi-angle shooting capabilities of the neck mount, showing how the camera can be oriented vertically or horizontally.

# マグネットスタンドとしても使用可能



磁性体や鉄の表面に吸着可能



Image: Shows the magnetic plate being used to attach an action camera to a metal surface, highlighting its functionality as a versatile magnetic stand.

## MAINTENANCE

- **Cleaning:** Wipe the mount with a soft, damp cloth to remove dirt or sweat. Do not use harsh chemicals.
- **Storage:** Store the mount in a cool, dry place away from direct sunlight when not in use.
- **Magnet Care:** Keep the magnetic surfaces clean and free from debris to ensure a strong connection. Avoid placing the mount near sensitive electronic devices that could be affected by magnets.

## TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Camera feels loose or unstable.	<ul style="list-style-type: none"><li>◦ Ensure the camera is securely tightened to the adapter.</li><li>◦ Verify that the magnetic plate is properly aligned and fully engaged with the base.</li><li>◦ Check for any debris between the magnetic surfaces.</li><li>◦ For high-impact activities, consider using an additional chest strap (sold separately) for enhanced stability.</li></ul>
Difficulty detaching the camera.	<ul style="list-style-type: none"><li>◦ Apply firm, even pressure to pull the magnetic plate away from the base.</li><li>◦ Ensure your hands are dry for a better grip.</li></ul>
Camera angle is not optimal.	<ul style="list-style-type: none"><li>◦ Adjust the camera on the adapter to achieve the desired vertical or horizontal orientation.</li><li>◦ Utilize the 180-degree rotation feature of the mount for fine-tuning the angle.</li></ul>

## SPECIFICATIONS

---

- **Brand:** AKASO
- **Model:** Magnetic Neck Mount
- **Color:** Black
- **Dimensions (Packaged):** 9 x 6.5 x 5.2 cm
- **Weight (Packaged):** 130 g
- **ASIN:** B0FN3RXSJC
- **UPC:** 810082456608
- **Compatibility:** AKASO Brave 4, AKASO Brave 7, AKASO EK7000, GoPro HD Hero2, Insta360, DJI Action, Smartphones (with appropriate adapter)

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or further assistance, please refer to the official AKASO website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Official AKASO Store on Amazon: [AKASO Store](#)