

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Goldair](#) /

› [Goldair Digital Grind & Brew Coffee Maker \(Model B0FN3W3P6P\) Instruction Manual](#)

Goldair B0FN3W3P6P

Goldair Digital Grind & Brew Coffee Maker

MODEL: B0FN3W3P6P

Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Goldair Digital Grind & Brew Coffee Maker. Please read this manual thoroughly before first use and retain it for future reference.

The Goldair Digital Grind & Brew Coffee Maker is designed to deliver fresh, aromatic coffee by integrating a bean grinder and a programmable brewing system. Its sleek black and silver design complements modern kitchens, and the user-friendly control panel offers multiple brewing options. The appliance features a clear water reservoir, a glass coffee pot, and a keep-warm function. Removable filter basket and carafe ensure easy cleaning.



Image: Front view of the Goldair Digital Grind & Brew Coffee Maker, showcasing the control panel, glass carafe, and the Goldair branding.

Important Safety Instructions

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.
- This appliance is for household use only.

Package Contents

Carefully unpack your coffee maker and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Goldair Digital Grind & Brew Coffee Maker Unit
- Glass Carafe with Lid
- Removable Filter Basket
- Measuring Scoop
- Cleaning Brush
- Instruction Manual (this document)



Image: The glass carafe, showing the included measuring scoop and cleaning brush.

Product Overview and Components

Familiarize yourself with the various parts of your Goldair coffee maker before use.

1. **Bean Hopper Lid:** Covers the bean hopper.
2. **Bean Hopper:** Holds whole coffee beans for grinding.
3. **Grinder Assembly:** Integrated burr grinder for fresh coffee.
4. **Water Reservoir:** Clear tank for water, with level indicator.
5. **Control Panel:** Features On/Off, Grind, Brew Strength, and Program buttons.
6. **Filter Basket:** Removable basket for ground coffee.
7. **Shower Head:** Distributes hot water over coffee grounds.
8. **Glass Carafe:** Collects brewed coffee.
9. **Warming Plate:** Keeps brewed coffee warm.



Image: Angled view of the coffee maker, highlighting its overall structure including the bean hopper, control panel, and carafe area.



Image: Top-down view of the coffee maker with the lid open, showing the water filling area and the removable filter basket compartment.

Setup

1. **Unpack:** Remove all packaging materials and labels from the coffee maker.

2. **Initial Cleaning:** Before first use, wash the glass carafe, carafe lid, and removable filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **Positioning:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.
4. **First Brew Cycle (without coffee):**
 - Fill the water reservoir with fresh, cold water up to the MAX fill line.
 - Place the empty filter basket into its compartment.
 - Place the carafe with its lid on the warming plate.
 - Plug the coffee maker into a grounded electrical outlet.
 - Press the ON/OFF button to start a brewing cycle without coffee. This cleans the internal components.
 - Once the cycle is complete, discard the water from the carafe.

Operating Instructions

Brewing Coffee from Whole Beans (Grind & Brew)

1. **Fill Water Reservoir:** Open the top lid and fill the water reservoir with fresh, cold water to the desired level, corresponding to the number of cups you wish to brew. Do not exceed the MAX fill line.
2. **Add Coffee Beans:** Open the bean hopper lid and add whole coffee beans. Refer to the recommended ratios in the table below. Do not overfill.
3. **Insert Filter Basket:** Ensure the removable filter basket is clean and properly seated in its compartment.
4. **Place Carafe:** Place the glass carafe with its lid securely on the warming plate.
5. **Select Grind/Brew Settings:**
 - Press the **GRIND** button to select the desired grind setting (e.g., fine, medium, coarse).
 - Press the **BREW STRENGTH** button to choose your preferred coffee strength (e.g., mild, regular, strong).
 - (Optional) Use the **PROGRAM** button to set a delayed start time for brewing. Consult the specific programming section for detailed instructions.
6. **Start Brewing:** Press the **ON/OFF** button. The machine will begin grinding the beans, then automatically proceed to the brewing cycle.
7. **Keep Warm:** After brewing is complete, the warming plate will automatically activate to keep the coffee warm for a set period (typically 30-60 minutes) before automatically shutting off.

Brewing Coffee from Pre-Ground Coffee

1. Follow steps 1, 3, and 4 from the "Brewing Coffee from Whole Beans" section.
2. **Add Ground Coffee:** Add the desired amount of pre-ground coffee directly into the filter basket. Do not use the bean hopper for pre-ground coffee.
3. **Bypass Grinder:** Ensure the grinder function is set to "OFF" or bypassed, if applicable, to prevent damage.
4. **Select Brew Strength:** Press the **BREW STRENGTH** button to choose your preferred coffee strength.
5. **Start Brewing:** Press the **ON/OFF** button.

Recommended Coffee Ratios

Cups of Coffee	Water (ml)	Whole Beans (grams)	Ground Coffee (scoops)
2	300	15-20	2

Cups of Coffee	Water (ml)	Whole Beans (grams)	Ground Coffee (scoops)
4	600	30-40	4
6	900	45-60	6

Note: Adjust ratios to personal taste. 1 scoop ≈ 5-7 grams.

Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

Daily Cleaning

- Unplug:** Always unplug the coffee maker from the power outlet before cleaning.
- Discard Grounds:** Remove the filter basket and discard used coffee grounds.
- Wash Removable Parts:** Wash the glass carafe, carafe lid, and filter basket in warm, soapy water. Rinse thoroughly and dry. These parts may also be top-rack dishwasher safe (check product markings).
- Wipe Exterior:** Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Clean Warming Plate:** Wipe the warming plate with a damp cloth. Do not use abrasive materials.

Grinder Cleaning

The integrated grinder should be cleaned regularly to prevent oil buildup and ensure consistent grinding performance.

- Ensure Power Off:** Make sure the coffee maker is unplugged.
- Remove Bean Hopper Lid:** Open the lid to the bean hopper.
- Remove Upper Burr:** Carefully lift and twist the upper grinding burr to remove it. Refer to the product diagram for assistance.
- Clean Burrs:** Use the provided cleaning brush to remove any coffee grounds or residue from both the upper and lower grinding burrs.
- Reassemble:** Reinsert the upper burr, ensuring it clicks securely into place. Close the bean hopper lid.



Image: A hand demonstrating the removal of the upper burr from the integrated coffee grinder for cleaning.

Descaling

Mineral deposits (limescale) can build up in your coffee maker over time, affecting performance and taste. Descaling your machine every 2-3 months, or more frequently if you have hard water.

- 1. Prepare Descaling Solution:** Mix 1 part white vinegar with 2 parts water, or use a commercial descaling solution designed for coffee makers, following the product's instructions.
- 2. Fill Reservoir:** Pour the descaling solution into the water reservoir up to the MAX fill line.
- 3. Run Half Cycle:** Place the empty carafe on the warming plate. Start a brewing cycle. After about half the solution has brewed through, turn off the coffee maker and let it sit for 15-20 minutes to allow the solution to work.
- 4. Complete Cycle:** Turn the coffee maker back on to complete the brewing cycle.
- 5. Rinse Cycles:** After the descaling cycle is complete, discard the solution. Fill the water reservoir with fresh, cold water and run at least two full brewing cycles with only water to rinse out any remaining descaling solution.

Troubleshooting

Review the following common issues and their solutions before contacting customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee not brewing.	No power; water reservoir empty; carafe not properly placed.	Check power connection; fill water reservoir; ensure carafe is correctly positioned on warming plate.
Coffee is too weak.	Not enough coffee grounds; incorrect brew strength setting; coarse grind.	Add more coffee; select a stronger brew setting; adjust grinder to a finer setting.
Coffee is too strong.	Too much coffee grounds; incorrect brew strength setting; fine grind.	Reduce coffee amount; select a milder brew setting; adjust grinder to a coarser setting.
Grinder not working.	Bean hopper empty; grinder clogged; burr not properly seated.	Fill bean hopper; clean grinder burrs (see "Grinder Cleaning"); ensure burr is correctly installed.
Water overflowing from filter basket.	Too much coffee grounds; filter basket clogged; carafe removed during brewing.	Reduce coffee amount; clean filter basket; do not remove carafe during brewing.

Specifications

Feature	Detail
Model Number	B0FN3W3P6P
Brand	Goldair (Generic)
Power / Wattage	900 watts
Capacity	1 Liters (approx. 4-6 cups)
Colour	Black And Silver
Material	Metal, Plastic
Product Dimensions (D x W x H)	25D x 20W x 35H centimetres
Item Weight	3 kg
Special Features	Automatic Shut-off, Built-in Grinder, Programmable
Coffee Maker Type	Drip Coffee Machine

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact the retailer where the product was purchased. Please have your model number (B0FN3W3P6P) and purchase date available when contacting support.

For general inquiries, you may also visit the manufacturer's website or contact their customer service department. Contact details are typically found on the product packaging or the retailer's website.



