

TOUCHBeauty TB-2158A

TOUCHBeauty Facial Multi-Trimmer TB-2158A User Manual

Model: TB-2158A

1. INTRODUCTION

Thank you for purchasing the TOUCHBeauty Facial Multi-Trimmer TB-2158A. This versatile grooming device is designed for precise and gentle hair removal on eyebrows, nose, and body. Please read this manual carefully before use to ensure safe and optimal performance. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The TOUCHBeauty Facial Multi-Trimmer TB-2158A features a compact design with interchangeable heads for various grooming needs. It is equipped with a powerful motor for efficient hair removal.

Key Features:

- **3-in-1 Attachments:** Includes dedicated heads for eyebrows, nose, and body hair.
- **eyebrow Shaver:** Trapezoidal 3D blade for natural eyebrow arch shaping and precise adjustments.
- **Nose Trimmer:** 360° rotating micro-blade with a special circular cover to protect nasal mucosa.
- **Body Shaver:** Wide-angle blade with a safety guard for safe body hair removal.
- **Washable Heads:** All trimmer heads are water-washable for hygienic maintenance.
- **Powerful Motor:** High-speed motor for effective and quick trimming.

Product Components:

The device comes with the main unit and three interchangeable trimmer heads.

垢抜け×息づかい

3in1 交換式カッターヘッド



シェービング
ヘッド



眉用カッター
ヘッド



ノーズトリマー
ヘッド

Image: The TOUCHBeauty Facial Multi-Trimmer main unit with its three distinct interchangeable heads: a shaving head, an eyebrow cutter head, and a nose trimmer head, illustrating its multi-functional design.

パワフルなモーター 切れみ抜群

10500

*半分の時間で倍の清潔感。10500回転モーターの剃浄力が、最後の毛髪も瞬時にいたします



Image: An internal view of the trimmer highlighting its powerful motor, capable of 10,500 rotations per minute, ensuring efficient and clean hair removal.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Battery Installation (if applicable):** If your model uses dry cell batteries, open the battery compartment and insert the required batteries, ensuring correct polarity. If it is a rechargeable model, ensure it is fully charged before first use.
3. **Attach Trimmer Head:** Select the desired trimmer head (eyebrow, nose, or body) and align it with the main unit. Gently twist or push until it clicks securely into place.

4. OPERATING INSTRUCTIONS

Always ensure your skin is clean and dry before use. Turn on the device using the power button.

肌をほっと、一日良い気分を

『1台3役』



まゆ毛

フェイス

全身の毛

Image: The multi-trimmer in use for eyebrow shaping, facial hair removal, and body hair trimming, showcasing its versatility.

4.1. Eyebrow Trimming

1. Attach the eyebrow trimmer head.
2. For shaping, gently glide the blade against the direction of hair growth.
3. For length adjustment, use the included comb attachments (3mm or 5mm) by placing them over the eyebrow head.
4. Move the trimmer slowly and steadily to achieve desired eyebrow shape and length.

整える仕上げに

長さそろえ、ボリュームを整え

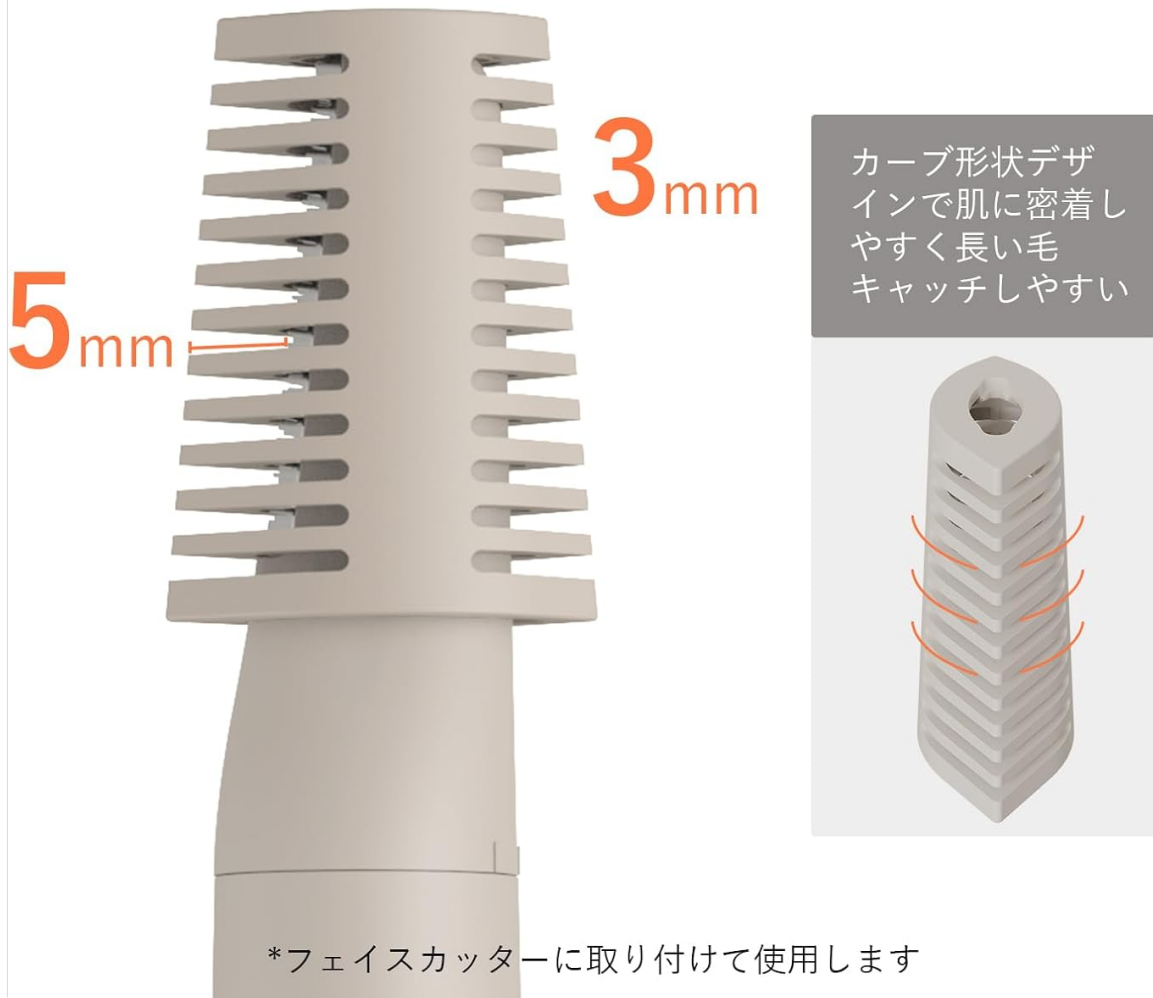


Image: The eyebrow trimmer head with its 3mm and 5mm comb attachments, designed for precise length control and shaping.

「空気感眉」 6秒でGET

0.1mm 精度で眉毛の『間』を作り、
余白を残しながら野生感を演出します

R型純角刃

可動刃×固定刃
2枚の刃で毛を挟んで
お肌を傷めず優しくカット



Image: A close-up demonstration of the eyebrow trimmer in action, showing how to gently glide the device to achieve a clean and defined eyebrow shape.

4.2. Nose Hair Trimming

1. Attach the nose trimmer head.
2. Gently insert the trimmer tip into your nostril, ensuring the blade does not touch the nasal mucosa.
3. Move the trimmer in a circular motion to effectively cut unwanted nose hair.

ハゲタカ鼻解消、剃り心地満点

360° R型純角

直接刃が触れないだから
鼻毛をキレイに剃る



*子供や敏感肌の方でも安心して使用できます

Image: The nose trimmer in use, highlighting its 360-degree R-type pure angle blade design for safe and efficient removal of nose hair without direct skin contact.

4.3. Body Shaving

1. Attach the body shaver head.
2. Hold the device at a slight angle against the skin.
3. Gently glide the shaver over the desired area, moving against the direction of hair growth for best results.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene.

1. **Turn Off:** Always turn off the device before cleaning.
2. **Remove Head:** Detach the trimmer head from the main unit.
3. **Rinse:** Rinse the trimmer head under running water. The heads are washable for easy cleaning.
4. **Dry:** Allow the trimmer head to air dry completely before reattaching or storing.
5. **Clean Main Unit:** Wipe the main unit with a dry or slightly damp cloth. Do not immerse the main

unit in water.

6. TROUBLESHOOTING

- **Device not turning on:** Check if batteries are correctly inserted or if the device needs charging. Ensure the power button is fully pressed.
- **Poor trimming performance:** Ensure the trimmer head is clean and free of hair debris. Replace batteries if power is low.
- **Excessive noise:** Ensure the trimmer head is securely attached. Clean the head to remove any obstructions.

If problems persist, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	TOUCHBeauty
Model Number	TB-2158A (Manufacturer Reference: TB-2128A)
Color	Off-white
Power Source	Battery Operated (Type not specified in main product details)
Attachments	Eyebrow Trimmer, Nose Trimmer, Body Shaver
Special Features	Interchangeable trimmer heads, storage case included, washable heads, mucosa protection for nose trimmer
Dimensions	1 x 1 x 1 cm
Weight	12 g
Country of Origin	China

8. SAFETY INFORMATION

- Keep out of reach of children.
- Do not use on irritated, damaged, or infected skin.
- Avoid pressing the blade too hard against the skin to prevent cuts or irritation.
- Do not disassemble the main unit or attempt repairs yourself.
- Store in a cool, dry place when not in use.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact TOUCHBeauty customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 TOUCHBeauty. All rights reserved.