

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Doohoek](#) /

> [Doohoek Keyboard Folio with Status Screen User Manual for Samsung Galaxy Tab S11 11 inch 2025](#)

Doohoek Tab S11 11 inch 2025

Doohoek Keyboard Folio with Status Screen User Manual

MODEL: SAMSUNG GALAXY TAB S11 11 INCH 2025 (SM-X730/SM-X736B)

Brand: Doohoek

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Doohoek Keyboard Folio with Status Screen. This accessory is designed to enhance the functionality of your Samsung Galaxy Tab S11 11 inch 2025, transforming it into a versatile workstation with a comfortable typing experience and integrated protection.

Compatibility

This keyboard folio is exclusively compatible with the **Samsung Galaxy Tab S11 11-inch 2025** (model numbers: **SM-X730** and **SM-X736B**).

To verify your tablet's model number, navigate to **Settings > About tablet** on your device, or check the back of your tablet for the printed model information.



Image: Illustration showing the keyboard folio's compatibility with the Samsung Galaxy Tab S11 2025 11-inch tablet.

Key Features

- **Status Display Screen:** Provides real-time information on battery level, connection status, and charging status.
- **Backlit Keys:** Features 7 adjustable colors and 3 brightness levels for comfortable typing in various lighting conditions.
- **Integrated Trackpad:** Supports multi-touch gestures and palm-rejection technology for precise navigation.
- **Any-Angle Kickstand:** Allows for smooth adjustment of viewing angles in both horizontal and vertical orientations.
- **Removable Magnetic Keyboard:** The keyboard can be easily detached from the folio for flexible use.
- **S-Pen Holder:** A dedicated cutout in the case securely holds and provides easy access to your S-Pen.
- **Rechargeable Battery:** Built-in 650mAh battery for extended use.
- **Scissor-Switch Keys:** Provides a tactile and responsive typing experience.
- **Bluetooth Connectivity:** Ensures a stable wireless connection to your tablet.

COMPATIBLE WITH




**Samsung Galaxy Tab S11 2025 11 INCH
(SM-X730/SM-X736B)**

Please check the model number before purchase

Image: Close-up view of the keyboard's status display screen, showing indicators for pairing, wireless connection, and battery level.

7 - COLOR EFFECTS

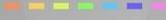

3 - LEVEL BRIGHTNESS



Image: Two views of the keyboard folio, highlighting the 7-color backlit keys and 3 brightness levels.

Removable Keyboard & 150° Kickstand

Easily leave the keyboard behind after finishing typing, more flexibility less weight



Image: Detailed view of the keyboard folio showing the exact cutout for the S-Pen, the rechargeable battery, and the scissor-switch key mechanism.

Setup

1. Inserting the Tablet

1. Gently align your Samsung Galaxy Tab S11 11-inch 2025 with the case's frame.
2. Press the tablet firmly into the case until it is securely seated. Ensure all edges are properly covered by the protective frame.

2. Charging the Keyboard

1. Locate the charging port on the keyboard (typically USB-C).

2. Connect the provided charging cable to the keyboard and a suitable USB power adapter.
3. The status display screen will indicate charging status. A full charge typically takes approximately 2-3 hours.

3. Bluetooth Pairing

1. Ensure the keyboard is charged and powered on.
2. On the keyboard, press and hold the **Fn + C** keys simultaneously for 1 second. The status display screen will show "Pairing..." and the Bluetooth indicator will flash.
3. On your Samsung Galaxy Tab S11, go to **Settings > Connected devices > Bluetooth**.
4. Turn on Bluetooth and search for available devices.
5. Select "Doohoeek Keyboard" (or similar name) from the list of devices.
6. Follow any on-screen prompts to complete the pairing process. The status display screen will show "Wireless Keyboard Connected" once pairing is successful.



Image: Illustration demonstrating the pairing process, showing the keyboard's status display screen indicating "Pairing..." and "Wireless Keyboard Connected".

Operating Instructions

1. Using the Keyboard and Trackpad

- **Typing:** The QWERTY layout with scissor-switch keys provides a familiar and comfortable typing experience.
- **Trackpad:** Use the integrated trackpad for precise cursor control. It supports standard multi-touch gestures for scrolling, zooming, and other functions. Palm-rejection technology helps prevent accidental inputs.

..
Store Your Pens
DOOHOOEEK

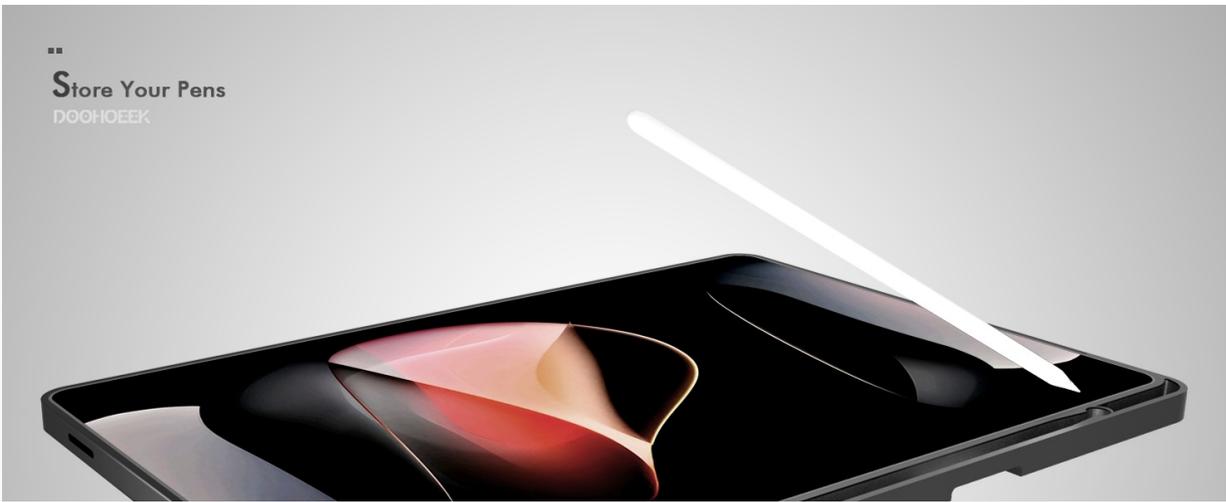


Image: Illustration demonstrating the multi-touch trackpad and palm-rejection feature, showing hands interacting with the trackpad.

2. Adjusting Backlight

- To change backlight colors, press the **Fn + Light bulb icon** key. Cycle through the 7 available colors.
- To adjust backlight brightness, press the **Fn + Up/Down arrow** keys (or specific brightness keys if available). There are 3 brightness levels.

3. Using the Any-Angle Stand

- The integrated kickstand on the back of the folio allows you to prop up your tablet.
- Adjust the stand to achieve your desired viewing angle for both horizontal (landscape) and vertical (portrait) orientations.



Image: Illustration showing the keyboard folio with the tablet in various viewing angles, demonstrating the versatility of the any-angle stand for both horizontal and vertical use.

4. Detaching the Keyboard

- The keyboard is held in place by strong magnets. To detach, simply pull the keyboard away from the folio.
- This allows for lighter tablet use when typing is not required, or for more flexible positioning of the keyboard.

Exact Custout



**Rechargeable Battery
650MAH**



Scissor-Switch Keys



Image: The keyboard folio with the keyboard detached, showcasing the tablet propped up by the kickstand and the separate keyboard unit.

5. S-Pen Access

- The case features a dedicated cutout on the back for storing your S-Pen.
- To retrieve the S-Pen, gently push it through the cutout from the back of the case.

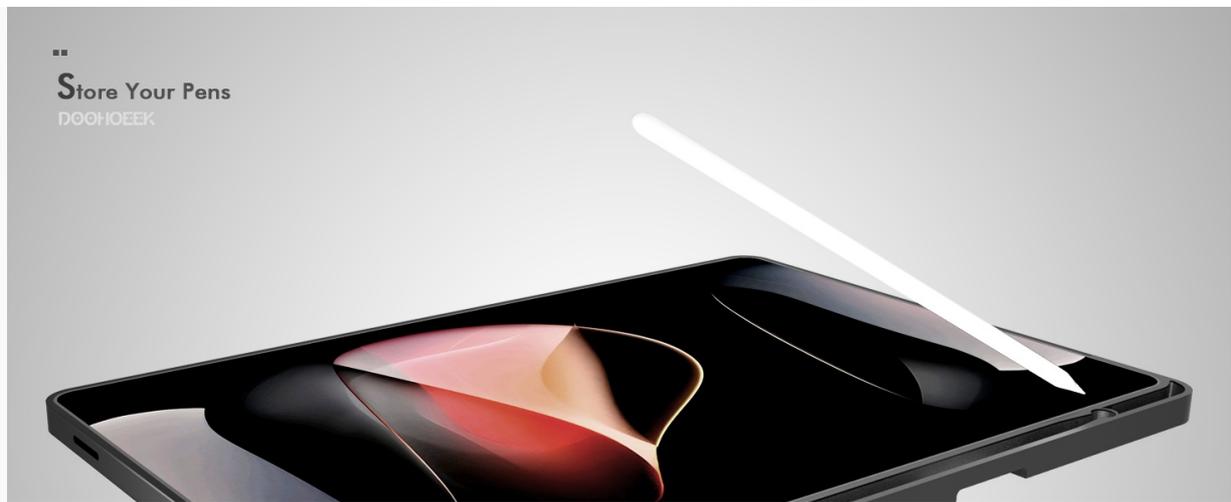


Image: Illustration showing the S-Pen being stored and retrieved from the dedicated holder on the tablet case.

Maintenance

Cleaning

- To clean the keyboard and case, use a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the surface.
- Ensure the keyboard is powered off and disconnected from any power source before cleaning.

Battery Care

- For optimal battery life, avoid fully discharging the keyboard frequently.
- Store the keyboard in a cool, dry place when not in use for extended periods.

Troubleshooting

Keyboard Not Connecting/Responding

- **Check Battery:** Ensure the keyboard has sufficient charge. Refer to the status display screen.
- **Re-pair Bluetooth:** If the connection is lost, try re-pairing the keyboard with your tablet following the "Bluetooth Pairing" steps in the Setup section.
- **Restart Devices:** Turn off and on both your tablet and the keyboard, then attempt to reconnect.

Keyboard Entering Sleep Mode Too Quickly

- The keyboard is designed to enter a power-saving sleep mode after a period of inactivity.
- To wake it up, simply press any key. There might be a slight delay for the first few keystrokes as it reconnects.

Backlight Not Working

- **Check Battery:** Low battery can affect backlight functionality. Charge the keyboard.
- **Adjust Settings:** Ensure the backlight is turned on and brightness is set to a visible level using the Fn key combinations.

Specifications

Brand	Doohoek
-------	---------

Compatible Devices	Samsung Galaxy Tab S11 11-inch 2025 (SM-X730/SM-X736B)
Connectivity Technology	Bluetooth
Keyboard Description	Keyboard Folio with Status Screen
Special Features	Backlit, Built-In Screen, Integrated Stand, Trackpad, Removable Keyboard
Material	Plastic
Power Source	Rechargeable Battery (650mAh)
Switch Type	Mechanical (Scissor-Switch)
Keyboard Layout	QWERTY
Number of Keys	84

Warranty

This Doohoeek Keyboard Folio comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Doohoeek customer support through the retailer where the product was purchased or visit the official Doohoeek website for contact information.