

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lenovo](#) /
- › [Lenovo Idea Tab Octa-Core Tablet ZAFR0853BR User Manual](#)

Lenovo ZAFR0853BR

Lenovo Idea Tab Octa-Core Tablet ZAFR0853BR User Manual

Model: ZAFR0853BR

1. INTRODUCTION

Thank you for choosing the Lenovo Idea Tab Octa-Core Tablet. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it carefully to ensure optimal performance and longevity of your tablet.



Image 1.1: Lenovo Idea Tab Octa-Core Tablet with stylus and case.

2. WHAT'S IN THE BOX

Verify that all items are present in your product packaging:

- Lenovo Idea Tab Tablet
- Power Adapter (20W)
- USB-A to USB-C Charging Cable
- Protective Cover/Case
- Lenovo Tab Pen (Stylus)
- 2 Replacement Pen Tips
- MicroSD Tray Eject Pin
- Quick Start Guide
- Safety and Warranty Guide
- AAAA Battery (for pen)

O que vem na caixa



Lenovo Idea Tab + Capa Folio + Lenovo Tab Pen



Adaptador de energia 20W



USB-A para USB-C
cabo de carregamento



2 substitutos de ponta



Pin ejetor para bandeja MicroSD



Guia de inicialização rápida,
guia de segurança e garantia



Bateria AAAA

Image 2.1: Illustration of the items included in the product packaging.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's charging port and the power adapter to a wall outlet. The charging indicator will illuminate.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the Lenovo logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

3.3 Initial Setup Wizard

Upon first power-on, follow the on-screen instructions to configure your tablet:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up security features like PIN, pattern, or password.

3.4 Attaching the Protective Case

Align the tablet with the case and gently press it into place. The case is designed to protect your device and can often function as a stand.

**Visual nítido,
som claro**

500 nits
de brilho

90Hz
taxa de atualização

Quatro alto-falantes

Dolby
ATMOS

11" 2.5K

Image 3.1: Tablet positioned in its protective case, acting as a stand.

3.5 Using the Lenovo Tab Pen

The Lenovo Tab Pen enhances interaction with your tablet. It may require an AAAA battery (included). Insert the battery according to the polarity markings. The pen can be used for writing, drawing, and precise navigation.



Image 3.2: Lenovo Idea Tab with the accompanying stylus.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

Your tablet uses Android 15, offering intuitive touch gestures:

- **Tap:** Select an item.
- **Double-tap:** Zoom in/out on web pages or images.
- **Swipe:** Scroll through lists or pages.
- **Pinch:** Zoom in/out.
- **Long press:** Access contextual menus or move icons.

4.2 Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Internet**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

4.3 Bluetooth Pairing

To pair with a Bluetooth device:

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Turn on Bluetooth.

3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the 'Available devices' list and follow any on-screen prompts.

4.4 Camera Usage

Your tablet features a 5MP front camera and an 8MP rear camera. Open the Camera app to take photos or record videos. Tap the screen to focus and press the shutter button to capture.

4.5 Display and Audio Features

Experience clear visuals and immersive sound:

- **Display:** The 11-inch 2.5K (2560 x 1600) WVA display offers 500 nits of brightness and a 90Hz refresh rate for smooth visuals. Adjust brightness in **Settings > Display**.
- **Audio:** Equipped with four speakers and Dolby Atmos support for rich, clear audio.



Image 4.1: Visual representation of the tablet's display and audio capabilities.

4.6 Circle to Search with Google

Utilize the 'Circle to Search' feature for quick information retrieval. Simply circle an object, text, or image on your screen to

initiate a Google search without leaving your current application.

Suave, poderoso, imersivo

MediaTek D6300
Octa-core processador

Até
12 hours
de reprodução de vídeo*



*A vida útil efetiva da bateria pode variar e depende de diversos fatores, como configurações do produto e condições de uso.

Image 4.2: Example of using 'Circle to Search' on the tablet.

4.7 Unify Your Digital Life

The tablet supports features like Share Hub and Smart Clipboard to seamlessly integrate with your other devices, allowing for easy file sharing and content transfer.

5. MAINTENANCE

5.1 Cleaning the Device

To clean your tablet:

- Use a soft, lint-free cloth.
- For stubborn marks, lightly dampen the cloth with water or a screen cleaner specifically designed for electronics.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

5.2 Battery Care

To maximize battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Unplug the charger once the battery is full.

5.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

6. TROUBLESHOOTING

If you encounter issues with your tablet, try the following solutions:

Problem	Solution
Tablet does not turn on	Ensure the battery is charged. Connect to the charger for at least 30 minutes, then try powering on again.
Wi-Fi connection issues	Restart your Wi-Fi router and the tablet. Forget the network in settings and reconnect.
Slow performance	Close unused apps. Clear cache. Check for software updates. Consider a factory reset if the issue persists (back up data first).
Touchscreen unresponsive	Restart the tablet. If unresponsive, force restart by holding the power button for 10-15 seconds.

6.1 Factory Reset

If troubleshooting steps do not resolve the issue, you may perform a factory reset. **Warning: This will erase all data on your tablet. Back up important data before proceeding.** Go to **Settings > System > Reset options > Erase all data (factory reset)**.

7. SPECIFICATIONS

Feature	Detail
Model Name	Lenovo Idea Tab
Model Number	ZAFR0853BR
Processor	MediaTek Dimensity 6300 Octa Core
Operating System	Android 15
RAM	4 GB
Storage	128 GB

Feature	Detail
Display Size	11 inches
Display Resolution	2560 x 1600 (2.5K)
Refresh Rate	90 Hz
Brightness	500 Nits
Rear Camera	8 MP
Front Camera	5 MP
Wi-Fi	Wi-Fi 5 (802.11ac)
Bluetooth	Bluetooth 5.2
Dimensions (L x W x H)	25.4 x 16.6 x 0.69 cm
Weight	1.28 kg
Power Source	AC / DC
Compatible Devices	Cover, Pen, Stylus

8. WARRANTY INFORMATION

Your Lenovo Idea Tab Tablet is covered by a limited warranty. Please refer to the 'Safety and Warranty Guide' included in your product packaging for detailed terms and conditions, warranty period, and claim procedures. Keep your proof of purchase for warranty service.

9. SUPPORT

For further assistance, technical support, or to download the latest drivers and manuals, please visit the official Lenovo support website:

Website: support.lenovo.com

You can also find contact information for customer service in your region on the support website.