

## FOTING FT-KLC-T3-RD-NEW-002

# FOTING Pressure Washer Instruction Manual

MODEL: FT-KLC-T3-RD-NEW-002

## 1. Introduction


Thank you for choosing the FOTING Pressure Washer. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before use and retain it for future reference.

The FOTING Pressure Washer is designed for effective cleaning of various surfaces, including cars, decks, terraces, driveways, siding, and outdoor equipment. It features a powerful motor, a hose reel for convenient storage, and multiple quick-connect nozzles for versatile cleaning tasks.




### STABILIZED BASE

Extra foot Added to make your washer more stable

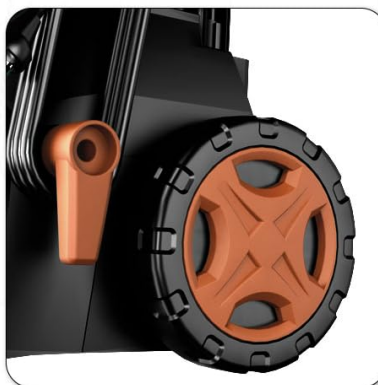

### EASY TO MOVE & CARRY

For quick movement and easy storage

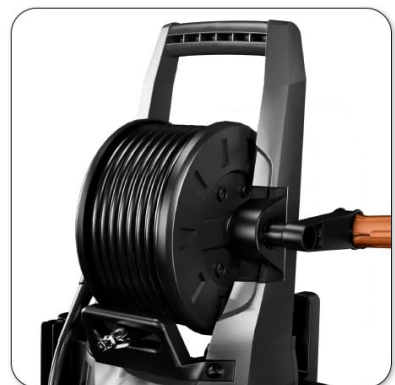

### PORTABLE STORAGE

23FT Long Hose Stows in Seconds

Image 1.1: FOTING Pressure Washer highlighting key specifications like Max. Pressure 4500PSI and Max. Flow Rate 3.2GPM.

## 2. Safety Instructions

**WARNING:** Read all safety warnings, instructions, illustrations, and specifications provided with this pressure washer. Failure to follow all instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses, gloves, and hearing protection.
- Never point the spray gun at people, pets, or electrical devices.

- Ensure the power cord and plug are in good condition before each use. Do not use if damaged.
- Connect the pressure washer to a grounded outlet only.
- Do not operate the pressure washer in the rain or near standing water.
- Keep children and bystanders away from the operating area.
- Always engage the trigger safety lock when the spray gun is not in use.
- The Total Stop System (TSS) automatically shuts off the pump when the trigger is not engaged, saving energy and prolonging pump life.

## ***Easily push pressure washer to wherever cleaning is needed***



Image 2.1: Close-up view of the pressure washer's child safety switch on the spray gun and the Total Stop System (TSS) mechanism.

### **3. Product Components**

Your FOTING Pressure Washer package includes the following components:

- Pressure Washer Main Unit with Hose Reel
- High-Pressure Spray Gun
- High-Pressure Water Pipe (Hose)
- Inlet Hose with Filter

- Foam Cannon (Detergent Bottle)
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Various Connectors and Adapters

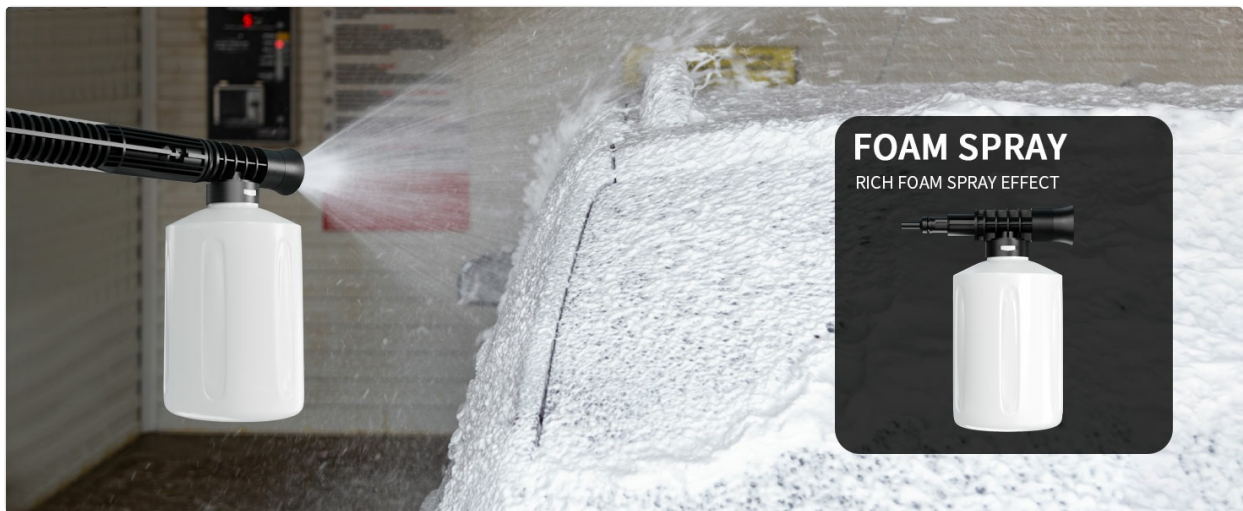


Image 3.1: All included accessories for the FOTING Pressure Washer, including the spray gun, hose, nozzles, and foam cannon.

## 4. Setup Instructions

Follow these steps for proper assembly and initial setup of your pressure washer:

1. **Mounting the Handle:** Secure the handle to the main unit using the provided swivel screws.
2. **Mounting the Bracket:** Attach any necessary mounting brackets for accessories to the main unit.
3. **Connecting the Nozzle:** Insert the desired quick-connect nozzle into the spray gun until it clicks into place.
4. **Install the Water Outlet Pipe:** Connect the high-pressure hose to the water outlet on the pressure washer unit. Ensure it is securely tightened.
5. **Install the Water Inlet Pipe:** Connect the garden hose (not included) to the water inlet on the pressure washer. Attach the inlet hose with filter to the garden hose. Ensure all connections are tight to prevent leaks.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image 4.1: Visual guide demonstrating the six key steps for assembling and connecting the FOTING Pressure Washer.

## 5. Operating Instructions

---

Before starting, ensure all connections are secure and the water supply is turned on.

1. **Purge Air from System:** Squeeze the spray gun trigger to allow water to flow through the system and expel any trapped air. Continue until a steady stream of water emerges.
2. **Turn On Power:** Rotate the power switch to the 'ON' position. The pump will start, and pressure will build.
3. **Select Nozzle:** Choose the appropriate quick-connect nozzle for your cleaning task.
  - **0° Red Nozzle:** For concentrated, high-impact cleaning on cracks and hard surfaces. Use with caution.
  - **15° Yellow Nozzle:** For intense cleaning on concrete and brick.
  - **25° Green Nozzle:** For general cleaning on fences and wood decks.
  - **40° White Nozzle:** For gentle cleaning on windows and vehicles.
4. **Apply Detergent (Optional):** Fill the foam cannon with pressure washer-safe detergent. Attach the foam cannon to the spray gun. The pressure washer will draw detergent automatically.
5. **Begin Cleaning:** Hold the spray gun firmly and squeeze the trigger to start the high-pressure spray. Maintain a safe distance from the surface being cleaned.
6. **Shut Down:** When finished, turn the power switch to 'OFF'. Turn off the water supply. Squeeze the trigger to release any remaining pressure in the system. Engage the trigger safety lock.



# 5 Spray Modes



Image 5.1: Illustration of the five spray modes (0°, 15°, 25°, 40°, and detergent bottle) and their recommended uses for various cleaning tasks.



Image 5.2: Demonstration of the foam spray function using the detergent bottle for rich foam application on a vehicle.

## 6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Nozzle Cleaning:** If a nozzle becomes clogged, use the included nozzle cleaning tool to clear any debris.
- **Inlet Filter:** Regularly check and clean the water inlet filter to prevent debris from entering the pump.

- **Hose and Connections:** Inspect the high-pressure hose and all connections for wear, cuts, or leaks before each use. Replace damaged parts immediately.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Use the integrated hose reel and cable hook for tidy storage.
- **Winterization:** If storing in freezing temperatures, drain all water from the pump and hoses. Consider using a pump protector solution to prevent damage.

## 7. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Motor does not start	No power supply; Faulty outlet; Power switch off	Check power cord and outlet; Ensure switch is ON; Try a different outlet
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump; Inlet filter clogged	Ensure full water flow; Clean nozzle; Purge air from system; Clean inlet filter
Water leaks	Loose connections; Damaged O-rings/seals; Cracked hose	Tighten all connections; Replace O-rings/seals; Replace damaged hose
Motor stops during operation	Overheating; TTS activated (trigger released)	Allow motor to cool; Ensure trigger is engaged for continuous operation

## 8. Specifications





Feature	Specification
Brand	FOTING
Model Number	FT-KLC-T3-RD-NEW-002
Power Source	AC Electric
Maximum Pressure	Up to 4500 PSI
Maximum Flow Rate	3.2 Gallons Per Minute (GPM)
Rated Voltage	120V/60Hz
Hose Length	23 Feet
Power Cord Length	16 Feet
Item Weight	28 Pounds
Product Dimensions (L x W x H)	12.2" x 16.9" x 13.8"
Nozzle Types	0°, 15°, 25°, 40° Quick-Connect


Feature	Specification
Safety Feature	Total Stop System (TSS)

## 9. Warranty and Support

FOTING is committed to providing quality products. For warranty information, technical support, or replacement parts, please contact FOTING customer service through the retailer where the product was purchased or visit the official FOTING brand store online. Please have your model number (FT-KLC-T3-RD-NEW-002) and purchase date available when contacting support.
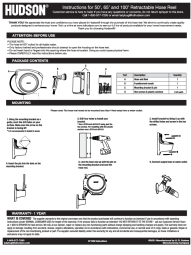
### Related Documents - FT-KLC-T3-RD-NEW-002

	<p><a href="#">Hudson Retractable Hose Reel: 50', 65', 100' Installation and Operation Guide</a></p> <p>Comprehensive instructions for installing, operating, storing, and maintaining Hudson retractable hose reels (50', 65', 100'). Includes package contents, warranty information, and customer support contact details.</p>
	<p><a href="#">Pikulla Electric Pressure Washer User Manual - JMG-60514M</a></p> <p>User manual for the Pikulla Electric Pressure Washer, model JMG-60514M. Provides instructions on product description, safety, assembly, operation, technical specifications, maintenance, troubleshooting, and customer support.</p>
	<p><a href="#">Kobalt 50 ft Pro Retractable Hose Reel with Premium Rubber Air Hose - Model SGY-AIR266 User Manual</a></p> <p>This manual provides instructions for the Kobalt 50 ft Pro Retractable Hose Reel with Premium Rubber Air Hose (Model SGY-AIR266). It covers package contents, safety precautions, preparation, assembly steps, operating instructions, care and maintenance, troubleshooting, and warranty information.</p>
	<p><a href="#">Style Selections 150-Ft Capacity Cabinet Hose Reel Assembly and Operation Manual</a></p> <p>This manual provides comprehensive instructions for assembling, installing, operating, and maintaining the Style Selections 150-Ft Capacity Cabinet Hose Reel (Model #SGY-GAR2). It includes safety warnings, preparation steps, troubleshooting tips, and warranty information.</p>

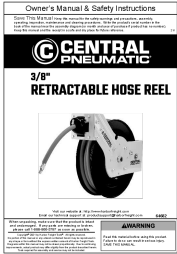

[Central Pneumatic 3/8" x 25 ft. Retractable Air Hose Reel Owner's Manual & Safety Instructions](#)

This owner's manual provides essential safety warnings, operating instructions, maintenance procedures, and warranty information for the Central Pneumatic 3/8" x 25 ft. Retractable Air Hose Reel (Model 64682).



[Strongway 65-Ft. Automatic Rewind Hose Reel Owner's Manual](#)

Owner's manual for the Strongway 65-Ft. Automatic Rewind Hose Reel (Item # 49459). Includes intended use, technical specifications, safety warnings, assembly instructions, operating procedures, maintenance, parts diagram, troubleshooting, and limited warranty information.