

uehba P115

uehba Replacement Remote Control for Twin Star Fireplace Models P115, 23II033FGL, 23II332FGL, 23IRM7491 - Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your uehba replacement remote control. This remote is specifically designed to be compatible with various Twin Star Fireplace models, offering a convenient and reliable solution for controlling your fireplace functions.

The remote control is pre-programmed and requires no additional setup. Simply install the batteries, and it will be ready for immediate use with your compatible Twin Star Fireplace.



**No need programming !
Work right out of the box !**

Figure 1.1: The uehba replacement remote control, highlighting its pre-programmed functionality.

2. PRODUCT OVERVIEW

The uehba replacement remote control is designed to function seamlessly with specific Twin Star Fireplace models. It provides direct access to essential fireplace controls, including power, flame effects, and temperature adjustments.

2.1. Compatibility

 
This remote control is compatible with the following Twin Star Fireplace remote control model P115 and fireplace models:

- Twin Star Fireplace Remote Control Model: **P115**
- Twin Star Fireplace Models: **23II033FGL, 23II332FGL, 23IRM7491**

You will get this one :



Compatible



Old model :



Figure 2.1: Visual representation of the replacement remote's compatibility with the original Twin Star remote design.

2.2. Remote Control Layout



Figure 2.2: Front view of the uehba replacement remote control.

The remote features clearly labeled buttons for intuitive operation:

- **Power Button** (Red Circle): Turns the fireplace on or off.
- **Flame Effect Button** (Flame Icon): Controls the flame effect settings.
- **Brightness/Intensity Buttons** (Two Circles): Typically adjust the brightness or intensity of the flame.
- **Temperature Up Button** (TEMP Up Arrow): Increases the desired temperature setting.
- **Temperature Down Button** (TEMP Down Arrow): Decreases the desired temperature setting.
- **Timer Button** (Infinity Symbol): May activate or adjust a timer function for the fireplace.

3. SETUP

The uehba replacement remote control is designed for immediate use without any programming. The only setup required is the installation of batteries.

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Batteries are not included with the remote control.



Figure 3.1: Battery compartment for two AAA batteries.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible Twin Star Fireplace. Ensure there is a clear line of sight between the remote and the fireplace's receiver.

4.1. Basic Operation

- **Power On/Off:** Press the **red circular button** to turn the fireplace on or off.
- **Adjusting Temperature:** Use the **TEMP Up (▲)** and **TEMP Down (▼)** buttons to increase or decrease the desired heat setting.
- **Controlling Flame Effects:** Press the **Flame Icon button** to cycle through different flame effect settings or to turn them on/off.
- **Adjusting Brightness/Intensity:** The **two circular buttons** below the flame icon typically adjust the brightness or intensity of the flame effects.
- **Timer Function:** Press the **Infinity Symbol button** to activate or adjust the fireplace's timer function, if available. Refer to your fireplace's manual for specific timer settings.

For detailed information on specific fireplace features and their operation, please consult the instruction manual provided with your Twin Star Fireplace unit.

5. MAINTENANCE

5.1. Battery Replacement

Replace batteries when the remote's range decreases or if it becomes unresponsive. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

5.2. Cleaning

To clean the remote control, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the remote's finish or internal components.

5.3. Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	• Batteries are dead or incorrectly installed. • No clear line of sight to the fireplace receiver. • Remote is too far from the fireplace.	• Replace with new AAA batteries, ensuring correct polarity. • Remove any obstructions between the remote and the fireplace. • Move closer to the fireplace.
Fireplace does not respond to specific buttons.	• Fireplace model may not support that specific function. • Temporary signal interference.	• Refer to your fireplace's original manual to confirm supported features. • Try pressing the button again or from a different angle.
Remote requires programming.	This remote is pre-programmed. If it's not working, it's likely a battery or compatibility issue, not a programming requirement.	Ensure your fireplace model is listed as compatible. Check batteries and line of sight. No programming steps are needed for this device.

7. SPECIFICATIONS

Brand	uehba
Model Number	P115 (CYCS-10B)
Compatible Fireplace Models	23II033FGL, 23II332FGL, 23IRM7491
Product Dimensions	4.73 x 1.97 x 0.56 inches
Item Weight	1.13 ounces
Batteries Required	2 x 1.5V AAA Alkaline Batteries (not included)
Color	White
Special Feature	No Programming Required

8. WARRANTY AND SUPPORT

For any questions regarding the uehba replacement remote control, including compatibility or operational issues not covered in this manual, please contact the seller or manufacturer directly. Please retain your proof of purchase for any warranty claims.

As this is a replacement product, specific warranty terms may vary. Refer to the original product listing or contact the seller for detailed warranty information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question