

EOIRDFRGTRGREFEF434

Generic Candy Colors Mini Clip-On Metal MP3 Player User Manual

Model: EOIRDFRGTRGREFEF434

INTRODUCTION

Thank you for purchasing the Generic Candy Colors Mini Clip-On Metal MP3 Player. This compact and portable device allows you to enjoy your favorite music on the go. This manual provides detailed instructions on how to set up, operate, and maintain your MP3 player to ensure optimal performance and longevity.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Mini Clip-On Metal MP3 Player Unit
- 1 x USB Charging Cable
- 1 x Accessory (e.g., headphones, as implied by product details)

Note: Specific accessories may vary. A TF (MicroSD) card is required for music storage and is sold separately.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your MP3 player.

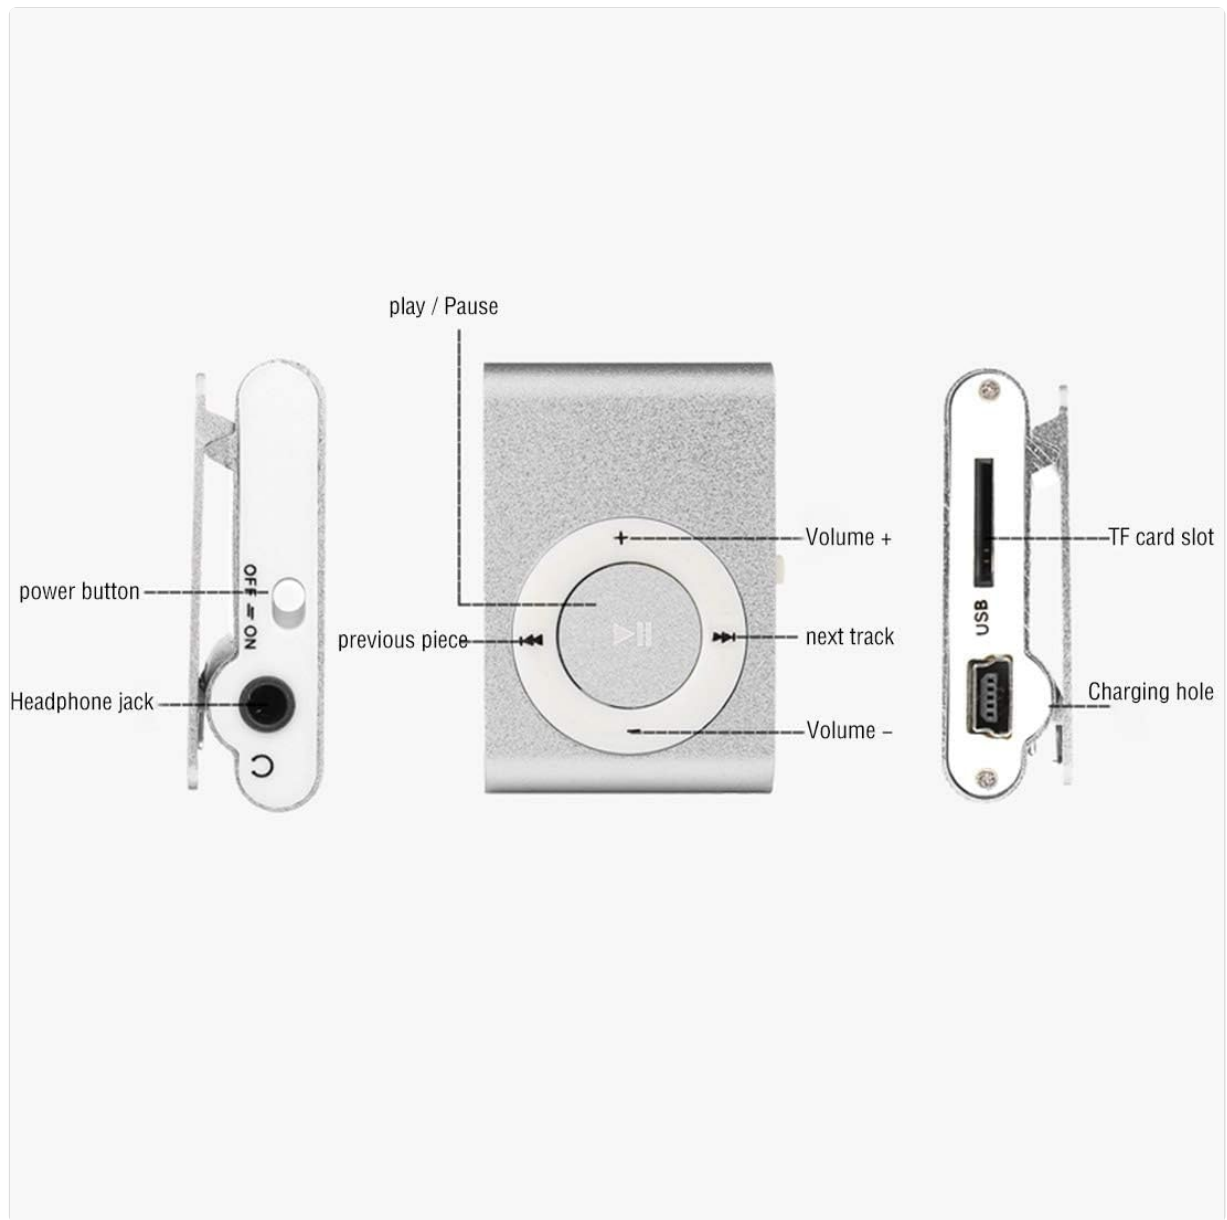


Figure 1: MP3 Player Controls and Ports

This diagram illustrates the location of the power button, headphone jack, play/pause button, volume controls, track navigation buttons, TF card slot, USB port, and charging hole.



Figure 2: Front View of MP3 Player

A close-up view of the MP3 player's front panel, showing the central control pad.

- **Power Button:** Slide switch to turn the device ON or OFF.
- **Headphone Jack:** Connect your headphones here.
- **Play/Pause Button:** Press to play or pause the current track.
- **Volume + / -:** Adjust the playback volume.
- **Previous / Next Track:** Navigate between songs.
- **TF Card Slot:** Insert your MicroSD card for music storage.
- **USB Port / Charging Hole:** Used for charging the device and connecting to a computer.

SETUP

1. Charge the MP3 Player:

Before first use, fully charge the device. Connect the provided USB charging cable to the USB port/charging hole on the MP3 player and the other end to a USB power adapter (not included) or a computer's USB port. The device can last up to 4 hours on a full charge.

2. Insert TF (MicroSD) Card:

Locate the TF card slot. Gently insert a MicroSD card (up to 32GB, not included) with your music files

into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.

3. **Load Music Files:**

Connect the MP3 player to your computer using the USB cable. The device should appear as a removable disk. Drag and drop your MP3, AAC, WAV, OGG, or FLAC audio files into the player's storage (on the TF card). Safely eject the device from your computer once files are transferred.

4. **Connect Headphones:**

Plug your 3.5mm headphones into the headphone jack on the side of the MP3 player.

OPERATING INSTRUCTIONS

1. **Power On/Off:**

Slide the power button (ON/OFF switch) to the "ON" position to turn on the MP3 player. Slide it to "OFF" to power down the device.

2. **Play/Pause Music:**

Once powered on, the player will automatically start playing music from your TF card. Press the central **Play/Pause** button to pause playback. Press it again to resume.

3. **Adjust Volume:**

Press the **Volume +** button to increase the volume. Press the **Volume -** button to decrease the volume.

4. **Navigate Tracks:**

Press the **Next Track** button to skip to the next song. Press the **Previous Track** button to go back to the beginning of the current song or to the previous song if pressed again quickly.

5. **Playback Modes:**

The player supports various playback modes including random broadcast (shuffle) and looping. You can also create playlists on your TF card for organized playback. The device supports sleep shutdown functionality.

MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the MP3 player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself, as this will void the warranty.

TROUBLESHOOTING

Problem	Possible Solution
Device does not turn on.	Ensure the power button is in the "ON" position. Charge the device fully.
No sound from headphones.	Check if headphones are properly plugged in. Increase the volume. Ensure music files are present on the TF card. Try different headphones to rule out a faulty pair.
Cannot transfer files to TF card.	Ensure the MP3 player is connected correctly to the computer. Check if the TF card is properly inserted and not full. Try formatting the TF card (this will erase all data).
Music playback is intermittent or distorted.	Check the quality of the music files. Ensure the TF card is not corrupted. Try reformatting the TF card and reloading music.

SPECIFICATIONS

Brand	Generic
Model Number	EOIRDFRGTRGREFEF434
Connectivity Technology	USB
Memory Storage	Supports TF (MicroSD) cards (up to 32GB, not included)
Color	Green (as per product listing, actual color may vary)
Screen Size	1 Inch
Compatible Devices	Headphones
Battery Average Life	4 Hours
Supported Audio Standards	MP3, AAC, WAV, OGG, FLAC

WARRANTY INFORMATION

This product comes with a **2-Year Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes such as drops or liquid damage. Please retain your proof of purchase for warranty claims.

SUPPORT

If you encounter any problems with your MP3 player or have questions not covered in this manual, please do not hesitate to contact our customer support. We aim to reply to all inquiries within 24 hours.

For support, please refer to the contact information provided by your retailer or on the product packaging.

