

[Manuals.plus](#) /

› [Monitech](#) /

› Monitech S210-2509 5K 64MP Digital Camera Instruction Manual

Monitech S210-2509

Monitech S210-2509 5K 64MP Digital Camera Instruction Manual

Model: S210-2509 | Brand: Monitech

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Monitech S210-2509 5K 64MP Digital Camera. Please read this manual thoroughly before using the camera to ensure optimal performance and longevity.

2.3 SD Card Installation

1. Locate the SD card slot, typically adjacent to the battery compartment.
2. Insert the 64GB SD card into the slot until it clicks into place. Ensure the card is formatted before first use via the camera's menu.

2.4 Attaching Lenses

1. The camera comes with a macro lens pre-attached. To switch to the wide-angle lens, gently twist the macro lens counter-clockwise to remove it.
2. Align the wide-angle lens with the camera mount and twist clockwise until it locks into place.
3. Attach the lens hood by aligning it with the front of the lens and twisting until secure.

2.5 Attaching the Microphone

1. Slide the microphone into the cold shoe mount located on top of the camera.
2. Connect the microphone's 3.5mm audio jack into the corresponding port on the camera.
3. Turn on the microphone using its power switch and select the desired audio level (Low/High).

Your browser does not support the video tag.

Video 2.1: This video demonstrates the unboxing, battery and SD card installation, and lens attachment for the S100F digital camera. It provides a visual guide for initial setup.

Your browser does not support the video tag.

Video 2.2: This video provides an overview of the 5K camera, including its physical features and how to attach accessories. It highlights the camera's design and expandability.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

Press and hold the power button located on the top of the camera to turn it on or off. The LCD screen will display the Monitech logo upon startup.

3.2 Using the 180° Flip Screen

The camera features a 3-inch LCD screen that can be flipped 180 degrees. This allows for easy self-recording (vlogging), low-angle shots, and standard shooting. Simply rotate the screen to your desired angle.

Adjustable flip screen

Shooting from multiple angles at will



Image 3.1: The camera's adjustable 180° flip screen, demonstrating its utility for selfies, low-angle shots, and standard shooting.

3.3 Shooting Modes

The mode dial on top of the camera allows quick switching between 9 different shooting modes:

- **Video Mode:** For recording 5K/30FPS or 4K/30FPS video.
- **Night Mode:** Optimized for excellent performance in low-light conditions.
- **Macro Mode:** For close-up shooting of intricate details.
- **Auto Mode:** Intelligent shooting for general photography.
- **Manual Mode:** Provides full control over camera settings.
- **Program Auto (P):** Semi-automatic exposure control.
- **High-Speed Capture (S):** For capturing fast-moving subjects.
- **Aperture Priority (A):** Allows manual aperture control with automatic shutter speed.
- **Sports Mode:** Optimized for capturing action shots.

Getting Started Quickly

9 shooting modes for quick switching

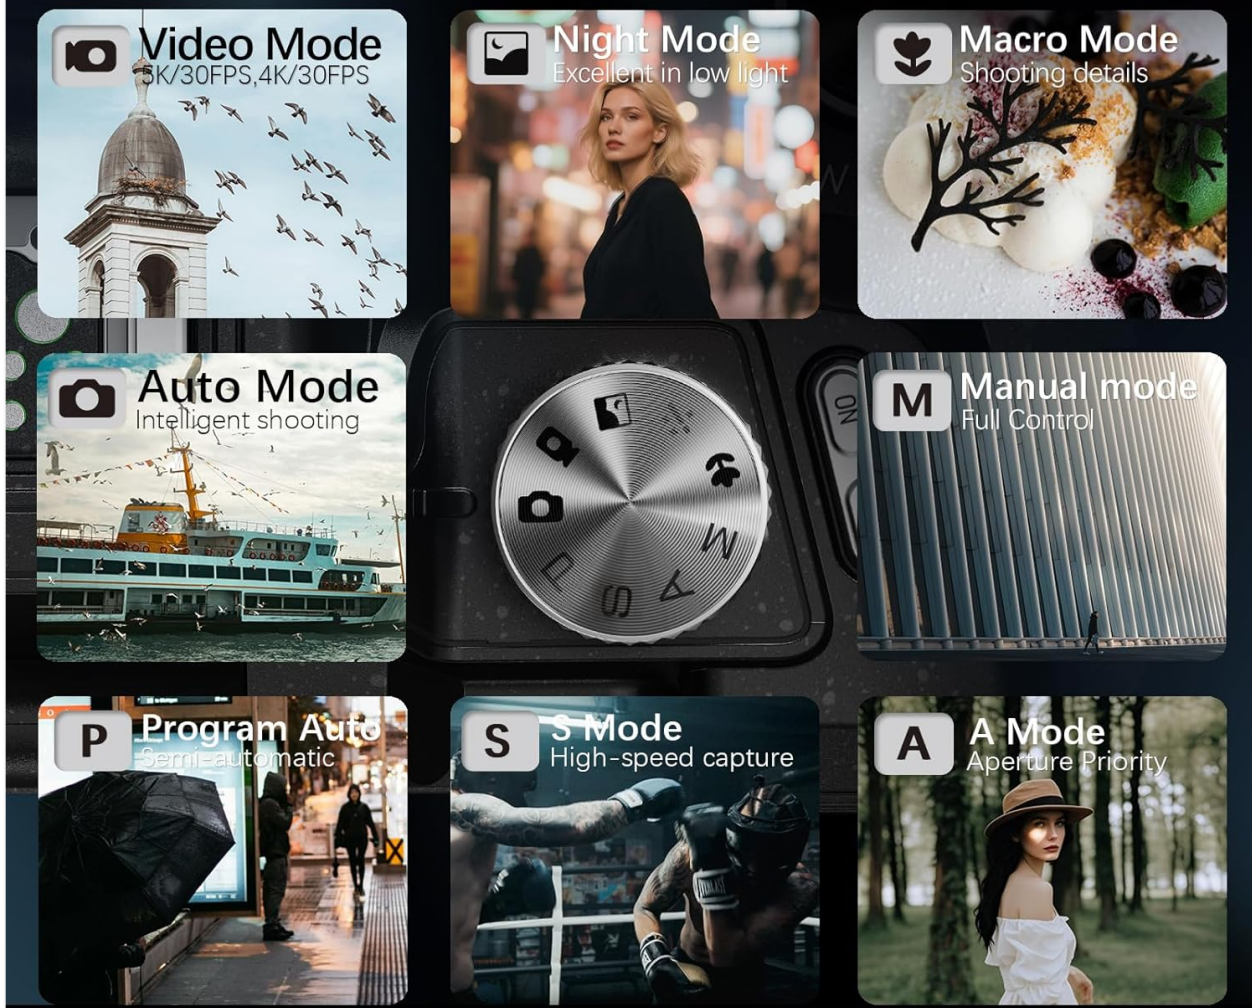


Image 3.2: The camera's mode dial, illustrating the 9 available shooting modes for quick selection.

3.4 Autofocus and Optical Zoom

The camera features hybrid autofocus technology with 49 autofocus points for quick and precise focusing. It also includes 16x optical zoom for detailed magnification without significant quality loss, unlike digital zoom.

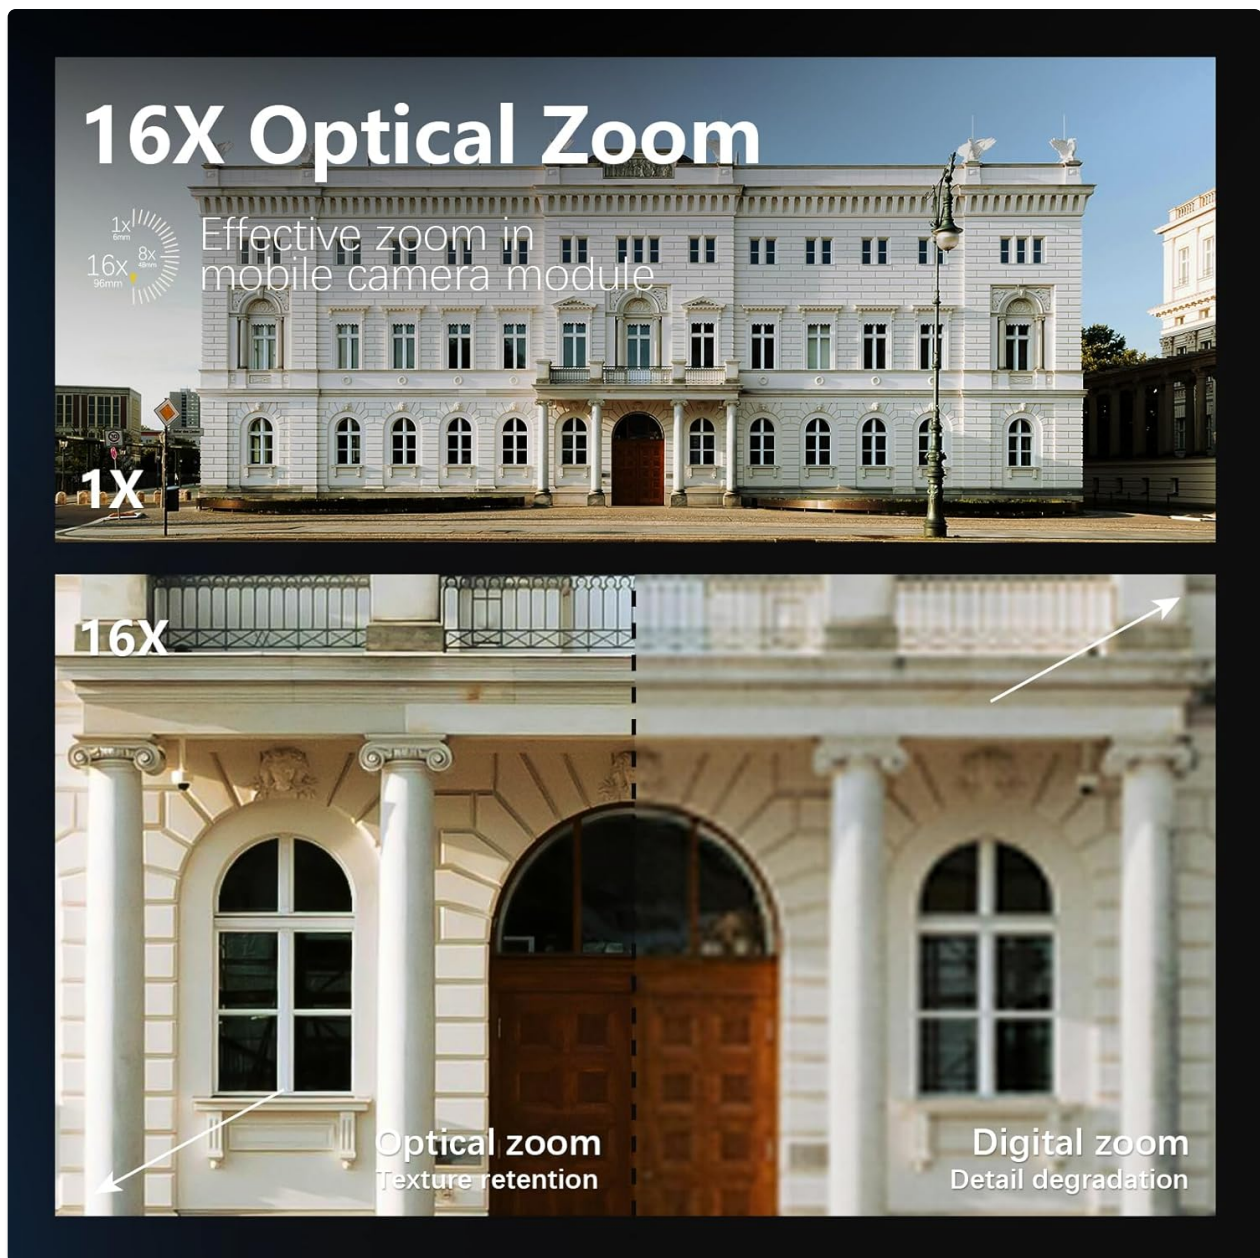


Image 3.3: A visual comparison demonstrating the clarity retained with 16X optical zoom versus the detail degradation of digital zoom.

3.5 Image Transfer

Transfer images and videos from your camera to compatible devices (smartphones, tablets, computers) using the provided card reader or USB-C cable. The camera also supports Wi-Fi image transmission for swift sharing to social media platforms.



Image 3.4: Illustration of the camera's Wi-Fi image transmission feature, allowing quick sharing of photos to a smartphone.

4. MAINTENANCE

4.1 Cleaning the Camera and Lenses

- Use a soft, lint-free cloth (such as the provided lens cloth) to gently wipe the camera body and LCD screen.
- For lenses, use a lens brush to remove dust, then a lens cleaning solution and a microfiber cloth for smudges. Avoid touching the lens surface directly with your fingers.

4.2 Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- Do not expose batteries to extreme temperatures.

5. TROUBLESHOOTING

5.1 Camera Not Turning On

- Ensure the battery is fully charged and correctly inserted into the camera.
- Try using the second provided battery to rule out a faulty battery.

5.2 SD Card Not Recognized

- Ensure the SD card is fully inserted into the slot.
- Check if the SD card is locked (small switch on the side of the card). Unlock it if necessary.
- Try formatting the SD card via the camera's menu (this will erase all data).
- If the issue persists, the SD card may be incompatible or faulty. Try a different compatible SD card.

5.3 Poor Image Quality in Low Light

- Switch to **Night Mode** for improved low-light performance.
- Ensure the pop-up flash is activated if additional light is needed.
- Adjust ISO settings in Manual Mode to a higher value (e.g., ISO 1600 or 3200), but be aware this may introduce noise.



Image 5.1: Visual examples of the camera’s low-light performance across different settings, including Night Mode and Flash.

6. SPECIFICATIONS

Feature	Detail
Brand	Monitech
Model Number	S210-2509
Maximum Webcam Image Resolution	64 MP
Video Capture Resolution	2160p (5K/30FPS, 4K/30FPS, 2K/30FPS, 1080P/60FPS)
Image Stabilization	Optical
Optical Zoom	16x
Screen Size	3 Inches (180° Flip Screen)
Supported File Format	MP4
Memory Storage Capacity	64 GB (SD Card included)
Battery Type	Lithium Ion (2 included)
Wireless Technology	Wi-Fi
Interfaces	HDMI, Type-C, 3.5mm microphone, Cold shoe, 1/4 tripod
Item Weight	1.69 Kilograms

Capture life's wonders with NBD 64MP digital camera



64 Million pixels



16x optical zoom



5K 30FPS / 4K 30FPS



180 ° LCD flip screen



S210 64MP/5K
Professional Digital Camera

Image 6.1: Key specifications of the Monitech S210-2509 camera, including its 64 million pixels, 16x optical zoom, 5K video capabilities, and 180° LCD flip screen.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Monitech offers a **365-day unconditional replacement** for any product problems encountered within one year of purchase. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, technical assistance, or support needs, Monitech provides **24/8 online service**. Please refer to the contact information provided on the product packaging or the official Monitech website for details.