

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SJCAM](#) /

› [SJCAM ZV200 5K 80MP Digital Camera User Manual](#)

SJCAM ZV200

SJCAM ZV200 5K 80MP Digital Camera User Manual

Model: ZV200

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your SJCAM ZV200 5K 80MP Digital Camera. Please read this manual thoroughly before using the camera to ensure proper function and to maximize your user experience. The ZV200 is designed for capturing high-resolution photos and videos, featuring a flip screen, advanced stabilization, and various shooting modes.

2. WHAT'S IN THE Box

Upon opening the package, verify that all items listed below are present:

- 1x SJCAM ZV200 Digital Camera
- 1x Battery (800 mAh Lithium Ion)
- 1x Type-C Cable
- 1x Lanyard
- 1x Carry Bag
- 1x User Manual (this document)
- 1x Wiping cloth

Image: Contents of the SJCAM ZV200 package. This includes the camera, an 800mAh battery, a USB Type-C charging cable, a lanyard, a carry bag, a wiping cloth, and the user manual.

3. CAMERA OVERVIEW AND FEATURES

Image: The SJCAM ZV200 camera shown from the front and back, with the 180-degree flip screen extended. The image also displays the included USB-C charging cable and a lanyard.

3.1 Key Features

- **5K UHD Video & 80MP Photos:** Capture video at 5K (4608x2650) 30fps and still images up to 80 megapixels.
- **6-Axis Gyro Stabilization:** Advanced image stabilization for smooth, shake-free video recording.

- **Sony IMX386 CMOS Sensor:** Ensures rich colors and sharp detail, even in low-light conditions, with an f/1.8 lens.
- **180° Flip Screen:** A 2.8-inch IPS rotatable screen that flips to power on, ideal for vlogging and selfies.
- **16X Digital Zoom:** Allows for magnification of subjects.
- **9 Preset Shooting Modes:** Includes modes such as portrait, landscape, nightscape, and starry skies.
- **Front-Facing Flash:** Provides additional lighting for low-light selfies or live streams.
- **Versatile Functionality:** Supports AFS (Auto Focus Single) for stills and AFC (Auto Focus Continuous) for moving subjects, timer, burst, time-lapse, loop recording, and webcam functionality via USB-C.

Image: An overview of the ZV200 Digital Camera highlighting its 5K video resolution, the Sony IMX386 sensor, and the availability of 9 distinct preset shooting modes.

Image: Key features of the ZV200 camera, including its 80-megapixel photo capability, built-in flashlight, autofocus, 16x digital zoom, 6-axis gyro stabilization, and webcam functionality.

Image: A visual comparison demonstrating the effectiveness of the 6-axis gyro stabilization. The left panel shows a blurry image (stabilization off), while the right panel shows a clear and steady image (stabilization on).

Image: A demonstration of the various filter options available on the ZV200 camera, showcasing different stylistic effects such as Black & White, Cold, Sepia, Red, Negative, Green, Warm, and Blue.

4. SETUP

4.1 Charging the Battery

1. Insert the provided Lithium Ion battery into the battery compartment located on the side of the camera.
2. Connect the camera to a power source using the supplied Type-C USB cable.
3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.

4.2 Inserting a Micro SD Card

1. Locate the Micro SD card slot, typically near the battery compartment.
2. Gently insert a compatible Micro SD card (not included) into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, press the card inward until it springs out.

4.3 Powering On/Off

- **Power On:** Flip the screen open 180 degrees to automatically power on the camera. Alternatively, press and hold the power button (if available) for a few seconds.
- **Power Off:** Close the flip screen to power off the camera. Alternatively, press and hold the power button until the camera shuts down.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- **Mode Button:** Press the Mode button to switch between video recording, photo capture, and playback modes.
- **Shutter/Record Button:** Press this button to start/stop video recording or to take a photo.

- **Navigation Buttons:** Use the up/down/left/right buttons to navigate menus and adjust settings.
- **OK/Confirm Button:** Press to confirm selections in menus.

5.2 Video Recording

1. Ensure the camera is in video recording mode.
2. Frame your shot using the flip screen.
3. Press the Shutter/Record button to begin recording. A red indicator light or on-screen icon will confirm recording is active.
4. Press the Shutter/Record button again to stop recording.

5.3 Photo Capture

1. Switch the camera to photo capture mode.
2. Frame your subject.
3. Press the Shutter/Record button to take a photo.

5.4 Using Digital Zoom

While in video or photo mode, use the zoom buttons (often marked with '+' and '-') to digitally zoom in or out up to 16x magnification.

5.5 Accessing Settings and Preset Modes

Press the Menu button to access camera settings. Navigate through options using the directional buttons and confirm with the OK button. Here you can select from the 9 preset modes (e.g., Portrait, Landscape, Nightscape) and adjust other parameters like resolution, exposure, and white balance.

5.6 Webcam Functionality

Connect the ZV200 camera to your computer using the Type-C USB cable. The camera may prompt you to select a connection mode. Choose "Webcam" or "PC Camera" to use it as an external webcam for video calls or streaming.

6. MAINTENANCE

6.1 Cleaning the Camera

- Use the provided wiping cloth or a soft, lint-free cloth to clean the camera body and screen.
- For the lens, use a specialized lens cleaning solution and cloth to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

6.2 Battery Care

- Store the battery in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing for extended periods, charge the battery to approximately 50% capacity.

6.3 Storage

When not in use, store the camera in the provided carry bag to protect it from dust, moisture, and physical damage. Avoid extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or not inserted correctly.	Charge the battery. Ensure the battery is correctly inserted.
Cannot record video or take photos.	Micro SD card is full, corrupted, or not inserted.	Insert a Micro SD card. Format the card (this will erase all data). Delete unnecessary files.
Images/videos are blurry.	Lens is dirty, stabilization is off, or focus issue.	Clean the lens. Ensure 6-axis gyro stabilization is enabled in settings. Allow camera to focus.
Camera freezes or becomes unresponsive.	Software glitch or low battery.	Remove and reinsert the battery to reset. Ensure battery is charged.

8. SPECIFICATIONS

Feature	Detail
Brand	SJCAM
Model Name	ZV200
Video Capture Resolution	5K (4608*2650) 30fps
Maximum Photo Resolution	80 MP
Image Sensor	Sony IMX386 CMOS
Image Stabilization	6-Axis Gyro (Digital)
Digital Zoom	16x
Display	2.8 Inches IPS Rotatable (180° Flip Screen)
Aperture	F1.8
Min Focal Length	3.95 Millimeters
Battery Type	Lithium Ion
Battery Capacity	800 mAh
Battery Average Life	80 Minutes (approx.)
Storage Media	Micro SD (Memory Slots Available: 1)
Connectivity	USB Type-C, HDMI
Special Features	Anti-Shake, Auto Focus, Night Vision, Timer, Front Flash
Product Dimensions	5 x 11 x 6 cm
Item Weight	700 g
Material	Plastic
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official SJCAM website or contact your local distributor. Keep your purchase receipt as proof of purchase for warranty claims.

© 2025 SJCAM. All rights reserved.

Related Documents - ZV200

 SJCAM SJ10 Pro Dual Screen Instrukcja obsługi	<p>SJCAM SJ10 Pro Dual Screen Action Camera User Manual</p> <p>User manual for the SJCAM SJ10 Pro Dual Screen action camera, covering features, safety precautions, product description, operation, specifications, and accessories.</p>
 SJCAM SJ4000 USER MANUAL	<p>SJCAM SJ4000 User Manual</p> <p>User manual for the SJCAM SJ4000 action camera, covering setup, features, and operation.</p>
 SJ8 Dual Screen Action Camera Manual de usuario de la cámara SJ8 con doble pantalla SJ8 Dual-camera c. posilivou reprezentací SJ8双屏运动相机	<p>SJCAM SJ8 Dual Screen Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM SJ8 Dual Screen Action Camera, covering setup, operation, specifications, and safety guidelines. Learn how to use its dual screens, waterproof housing, and connectivity features.</p>
 Action Camera C100 SERIES 运动相机说明书 使用前请仔细阅读本说明书并妥善保存 Please read this manual carefully before use and keep it in a safe place	<p>SJCAM C100 Series Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM C100 Series action camera, detailing operating instructions, features, accessories, and specifications. Learn how to use your SJCAM C100 for various activities.</p>

 <p>SJ11 Active Action Camcorder Manual SJ11 Active Action Camera User Manual SJ11 Action Camera de acción Manual del Usuario SJ11 Action Camcorder Benutzerhandbuch</p>	<p>SJCAM SJ11 Active Action Camera User Manual Comprehensive user manual for the SJCAM SJ11 Active action camera, covering specifications, setup, operation, safety guidelines, and accessories.</p>
 <p>SJ10 PRO Dual Screen Action Camera User Manual SJ10 PRO 双屏运动相机用户手册 SJ10 双屏运动相机用户手册</p>	<p>SJ10 PRO Dual Screen Action Camera User Manual User manual for the SJCAM SJ10 PRO Dual Screen Action Camera, detailing its features, operating instructions, safety guidelines, and specifications. Learn about video recording, photo taking, playback, remote control, and WiFi connection.</p>

Documents - SJCAM – ZV200



[\[pdf\] User Manual Safety Datasheet](#)

ZV200 V1 2 2025 1 15 Download sjcamstoresZV200 digital camera user manualcdn shopify s files 0674 2248 6694 manual v 1743588126 |||

ZV200 Camera User Manual **ZV200 ZV200** f1.8 6Ultra HD 4K V-LOG 010 123 4 5 9 7 8 6 10 11 14 12 13 15 16 17 19 20 22 23 18 21 24 25 1 2 3 4 5 6WWide/ TTele 7USB 8HD 9 10 / 11 12 13 14 15 16 17 // 18 / 19 / 20 / 21 // 22DISP 23 / 24 25 2 1 2 *1 3 4 5 *2 6 7 / 8 9 *3...

lang:i-klingon **score:36** filesize: 968.59 K page_count: 54 document date: 2025-04-02