

## Philips BG3017/01

# Philips BG3017/01 Body Groomer Instruction Manual

Model: BG3017/01

## 1. INTRODUCTION

---

Thank you for choosing the Philips BG3017/01 Body Groomer. This device is designed to provide a safe and comfortable grooming experience for your body. It features skin-friendly blades, a bi-directional trimmer with a 3mm comb, and is fully waterproof for convenient wet and dry use. Please read this instruction manual carefully before using the appliance and save it for future reference.



Image 1.1: Philips BG3017/01 Body Groomer

## 2. SAFETY INFORMATION

To ensure safe operation and prevent injury, always adhere to the following safety precautions:

- **Caution:** Be careful when handling the blades to avoid cuts. The blades are sharp.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance if it is damaged in any way.
- Always check the appliance before use. If the appliance is damaged, it may cause injury.
- Do not immerse the charging adapter in water.
- Only use the original charging cable provided with the appliance.
- Keep the appliance and charging cable away from heated surfaces.

### 3. PRODUCT OVERVIEW

The Philips BG3017/01 Body Groomer comes with the following components:

- Body Groomer Unit
- 3mm Comb Attachment
- Charging Cable (USB)



#### Wet & dry use

Fully waterproof, so it's easy to clean and use in or out of the shower.



#### للاستخدام الجاف والرطب

مقاومة للماء بالكامل، مما يجعلها سهلة التنظيف ويمكنك استخدامها داخل أو خارج الحمام.

Image 3.1: Body Groomer, 3mm comb, and charging cable

### 4. SETUP AND CHARGING

#### 4.1 First Use

Before using your body groomer for the first time, ensure it is fully charged. The device is designed for cordless use only.

#### 4.2 Charging the Appliance

1. Ensure the appliance is switched off.
2. Insert the small plug of the charging cable into the charging socket at the bottom of the body groomer.
3. Plug the USB end of the charging cable into a suitable USB power adapter (not included) or a USB port on a computer.
4. The charging indicator light on the groomer will illuminate to show that it is charging.
5. A full charge provides approximately 50 minutes of cordless use.

**Note:** Do not charge the appliance in a wet environment.

## 5. OPERATING INSTRUCTIONS

---

The Philips BG3017/01 Body Groomer offers versatile grooming options for various body areas.

### 5.1 Shaving without Comb

For a close and comfortable shave, use the groomer without any comb attachment. The skin-friendly shaver head features patented rounded tips to protect your skin from cuts and nicks.

1. Ensure your skin is clean and dry, or wet if using in the shower.
2. Press the power button to turn on the groomer.
3. Place the shaver head gently against your skin.
4. Move the shaver slowly against the direction of hair growth for optimal results.
5. The ergonomic grip provides enhanced control during shaving.




### Rechargeable battery

High-power rechargeable battery  
with 50 minutes of cordless use.

### بطارية قابلة لإعادة الشحن بقدرة 50 دقيقة

بطارية قوية قابلة لإعادة الشحن، مع 50 دقيقة من  
الاستخدام بدون سلك

Image 5.1: Skin-friendly shaver head with rounded tips

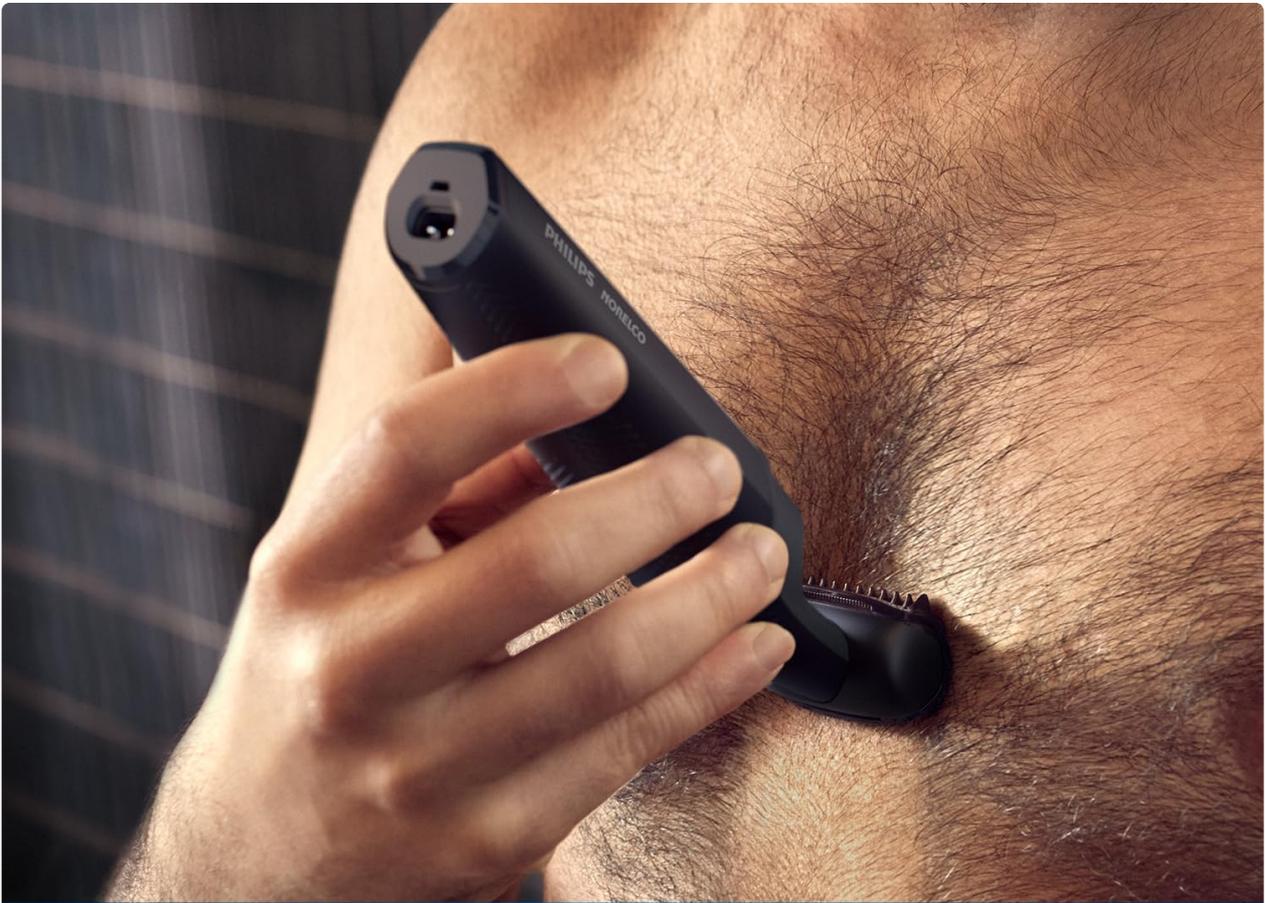

### Ergonomic grip

Easy to hold, for more controlled trimming.



### مقبض مريح

سهل الإمساك، لتشذيب أكثر تحكماً

*Image 5.2: Ergonomic grip for controlled trimming*

## 5.2 Trimming with 3mm Comb

To trim hair to a uniform length, attach the 3mm comb.

1. Ensure the groomer is switched off.
2. Align the 3mm comb attachment with the shaver head and press it firmly until it clicks into place.
3. Turn on the groomer.
4. Move the groomer with the comb attached against the direction of hair growth. The bi-directional trimmer allows for efficient trimming in any direction.



### Bi-directional trimmer & comb

Cut hair that grows in any direction using the bidirectional trimmer and 3mm comb.

### أداة تشذيب ثنائية الاتجاه وملحق مشط

قص الشعر الذي ينمو في أي اتجاه باستخدام أداة التشذيب ثنائية الاتجاه وملحق المشط بسمك 3 ملم

Image 5.3: Bi-directional trimmer and 3mm comb

## 5.3 Wet and Dry Use

The Philips BG3017/01 Body Groomer is 100% waterproof, making it suitable for both dry use and use in the shower. This also facilitates easy cleaning.



### Skin-friendly body shaver

The shaver head features patented rounded tips to protect the skin from cuts and nicks.

### أداة حلاقة مريحة للبشرة

تتميز رأس الأداة بأطراف مدورة مسجلة ببراءة  
اختراع لحماية البشرة من الجروح والخدوش

Image 5.4: Fully waterproof for wet and dry use

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your body groomer.

1. **After each use:** Turn off the appliance. Remove the comb attachment if used. Rinse the shaver head and the comb under running tap water.
2. Shake off excess water and allow the parts to air dry completely before reattaching the comb or storing the device.
3. Do not use abrasive cleaning agents or harsh chemicals to clean the appliance.
4. The blades do not require oiling.

## 7. TROUBLESHOOTING

If you encounter any issues with your Philips BG3017/01 Body Groomer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is empty.	Charge the appliance for at least 8 hours.
Reduced trimming performance.	Hair accumulation in the shaver head or comb.	Clean the shaver head and comb thoroughly under running water.
Skin irritation after use.	Incorrect usage or sensitive skin.	Ensure you are moving the shaver gently and against the direction of hair growth. If irritation persists, consult a dermatologist.

If the problem persists after trying these solutions, please contact Philips customer support.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	BG3017/01
Power Source	Battery Powered (Rechargeable)
Battery Life	50 minutes cordless use
Special Features	Rechargeable, Waterproof
Head Type	Foil
Number of Blades	1
Blade Material	Stainless Steel
Color	Black
Item Weight	345 grams
Included Components	3mm comb, 2D contour following attachment, charging cable

## 9. WARRANTY AND SUPPORT

Philips offers a 2-year worldwide guarantee for this product. For detailed warranty information, please refer to the warranty card included in the product packaging or visit the official Philips website.

For product support, troubleshooting assistance, or to purchase replacement parts, please contact Philips customer service in your region. You can find contact information on the Philips website or in the product documentation.

## 10. PRODUCT VIDEO OVERVIEW

Watch this short video for a quick overview of the Philips BG3017/01 Body Groomer and its key features.

Your browser does not support the video tag.

*Video 10.1: Philips BG3017/01 Body Groomer Features (Preview)*

*This video demonstrates the main features of the Philips BG3017/01 Body Groomer, including its skin-friendly design, 3mm comb attachment, cordless operation, and waterproof capabilities.*

© 2026 Philips. All rights reserved.