

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

ONIKUMA X33

ONIKUMA X33 Gaming Headset User Manual

Model: X33 | Brand: ONIKUMA

INTRODUCTION

Thank you for choosing the ONIKUMA X33 Gaming Headset. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new headset. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The ONIKUMA X33 is designed for an immersive gaming experience, featuring over-ear comfort, vibrant LED lights, and a noise-cancelling microphone. It is compatible with PC, PS5, PS4, and Xbox consoles.

PACKAGE CONTENTS

Please check the package for the following items:

- ONIKUMA X33 Gaming Headset
- User Manual (this document)
- Audio Splitter Cable (if applicable, for separate audio/mic jacks)

If any items are missing or damaged, please contact customer support.

PRODUCT OVERVIEW

Familiarize yourself with the various components of your ONIKUMA X33 Gaming Headset.

Image: Front view of the ONIKUMA X33 Gaming Headset, showcasing the over-ear design and illuminated LED lights on the earcups. The adjustable headband and microphone arm are visible.

Image: Close-up of the in-line control unit on the ONIKUMA X33 headset cable, showing the volume scroll wheel and the microphone mute switch.

SETUP GUIDE

Connecting to PC

- Connect the 3.5mm audio jack (green) to your PC's audio output port.

2. Connect the 3.5mm microphone jack (pink) to your PC's microphone input port.
3. Connect the USB-A cable to a free USB port on your PC for LED lighting power.
4. If your PC has a single combined audio/mic port, use the included audio splitter cable. Connect the headset's 3.5mm jack to the splitter, then connect the splitter's combined jack to your PC.
5. Adjust sound settings in your operating system:
 - Go to Sound Settings.
 - Set "ONIKUMA X33" or "Headset (Realtek Audio)" as the default playback device.
 - Set "ONIKUMA X33" or "Microphone (Realtek Audio)" as the default recording device.

Connecting to PS5/PS4

1. Connect the 3.5mm audio jack directly into the controller's headset port.
2. Connect the USB-A cable to a free USB port on the console for LED lighting power.
3. Adjust console audio settings:
 - Go to Settings > Sound > Audio Output.
 - Set "Output Device" to "Headset (Controller)".
 - Go to Settings > Sound > Microphone.
 - Set "Input Device" to "Headset (Controller)".

Connecting to Xbox

1. Connect the 3.5mm audio jack directly into the controller's headset port.
2. Connect the USB-A cable to a free USB port on the console for LED lighting power.
3. Adjust console audio settings:
 - Press the Xbox button to open the guide.
 - Go to Profile & system > Settings > General > Volume & audio output.
 - Under "Headset audio", ensure "Headset format" is set correctly.

OPERATING INSTRUCTIONS

Volume Control

The ONIKUMA X33 features an in-line volume scroll wheel located on the cable. Rotate the wheel upwards to increase volume and downwards to decrease volume.

Microphone Mute/Unmute

Next to the volume wheel, there is a switch to mute or unmute the microphone. Slide the switch to the position indicated by a microphone icon with a line through it to mute, and to the clear microphone icon to unmute.

LED Lighting

The LED lights on the earcups are powered via the USB connection. They will illuminate automatically when the USB cable is connected to a powered USB port.

Your browser does not support the video tag.

Video: Demonstration of adjusting the volume and muting/unmuting the microphone using the in-line controls on the ONIKUMA X33 Gaming Headset. This video shows the physical interaction with the control unit.

MAINTENANCE AND CARE

- Cleaning:** Use a soft, dry cloth to wipe down the headset. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- Storage:** Store the headset in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tangling the cable.
- Handling:** Do not pull on the cable to disconnect the headset. Always grasp the plug firmly. Avoid dropping or subjecting the headset to strong impacts.
- Microphone Care:** When not in use, gently position the microphone arm away from your mouth to prevent accidental damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from headset	Volume too low Incorrect audio output device selected Loose connection	Increase volume using in-line control and system settings. Verify "ONIKUMA X33" or "Headset" is set as default playback device. Ensure 3.5mm audio jack is fully inserted.
Microphone not working	Microphone muted Incorrect input device selected Loose connection	Unmute microphone using in-line switch. Verify "ONIKUMA X33" or "Microphone" is set as default recording device. Ensure 3.5mm microphone jack (if separate) is fully inserted.
LED lights not working	USB cable not connected USB port not powered	Ensure USB-A cable is securely connected to a powered USB port. Try a different USB port.

SPECIFICATIONS

Feature	Detail
Model	ONIKUMA X33
Driver Diameter	50mm
Impedance	32Ω ±15%
Sensitivity	105 ±3dB
Frequency Range	20Hz-20KHz
Microphone Sensitivity	-42 ±3dB
Microphone Impedance	≤2.2KΩ
Directivity	Omnidirectional
Cable Length	Approx. 2.2m (7.2ft)

Feature	Detail
Interface	3.5mm Audio + USB (for LED)
LED Lighting	Yes
Compatibility	PC, PS5, PS4, Xbox

WARRANTY AND SUPPORT

The ONIKUMA X33 Gaming Headset comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, warranty claims, or general inquiries, please contact ONIKUMA customer service through their official website or the retailer from whom you purchased the product. Please have your product model (X33) and purchase details ready when contacting support.

Official ONIKUMA Website: www.onikuma.net

© 2024 ONIKUMA. All rights reserved.
This manual is subject to change without notice.

Documents - ONIKUMA – X33

no relevant documents