

mijashy Y101

mijashy Electric Bidet Toilet Seat Model Y101 User Manual

Elongated, Warm Water with Air Dryer, Heated Seat, and Wireless Remote

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference. Failure to follow these instructions could result in electric shock, fire, or other injuries.

- **Electrical Safety:** This product must be connected to a properly grounded outlet. Do not use with extension cords. Ensure the power outlet is protected by a Ground Fault Circuit Interrupter (GFCI).
- **Water Safety:** Do not immerse the product in water. Ensure all water connections are secure to prevent leaks. Turn off the water supply before performing any maintenance.
- **Children and Individuals with Reduced Capabilities:** Supervise children to ensure they do not play with the appliance. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Cleaning:** Disconnect power before cleaning. Use only mild, non-abrasive cleaners.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1x mijashy Electric Bidet Toilet Seat
- 1x Wireless Remote Control
- 1x Instruction Manual
- 1x Mounting Plate
- 2x Screws
- 2x Steel Discs

- 2x Anchoring Rubber
- 1x Three-Way Valve (7/8" to 1/2" to 7/8")
- 1x PE Pipe (Water Hose)

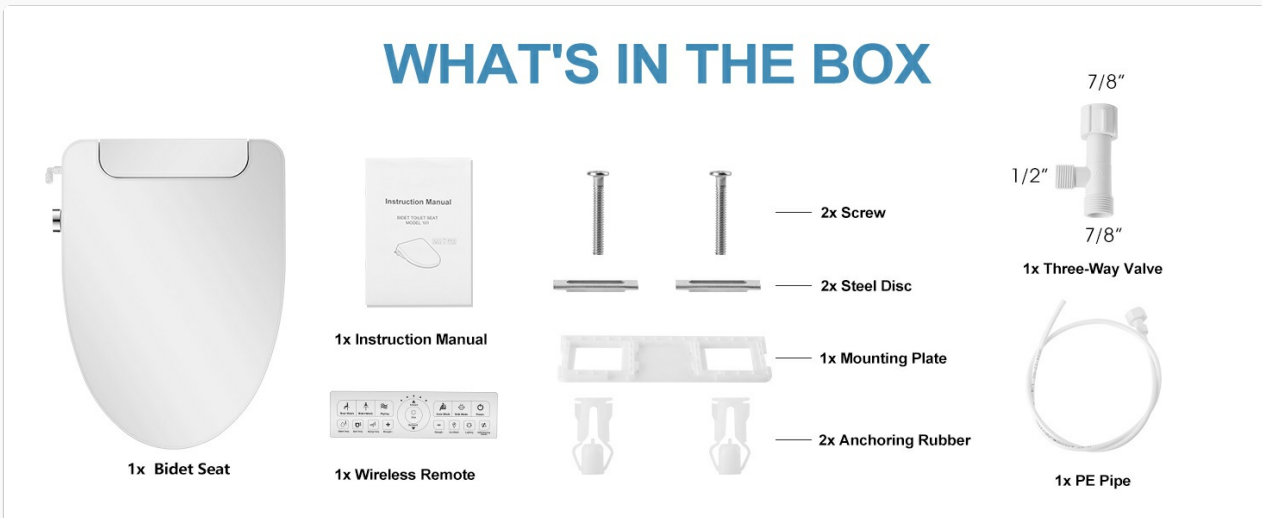


Figure 2.1: Included Components

3. SETUP AND INSTALLATION

This bidet toilet seat is designed for easy DIY installation. Ensure you have a standard electrical outlet (GFCI protected) and access to your toilet's water supply line.

3.1 Compatibility Check

This model is designed for **elongated** toilets. Please measure your toilet bowl to ensure compatibility. The distance from the toilet seat mounting holes to the front edge of the bowl should be approximately 18" - 19.5".



Figure 3.1: Elongated Toilet Compatibility

3.2 Installation Steps

1. **Remove Current Toilet Seat:** Lift the hinge covers and unscrew the bolts holding your existing toilet seat in place. Remove the seat and lid.
2. **Install Mounting Plate:** Place the mounting plate over the toilet bowl holes. Insert the screws through the

steel discs and anchoring rubber, then tighten them to secure the mounting plate.

3. **Slide Bidet Seat:** Carefully slide the bidet toilet seat onto the mounting plate until it clicks into place. A quick-release button allows for easy removal if needed.
4. **Connect T-Valve:** Turn off the water supply to your toilet. Flush the toilet to drain the tank. Disconnect the existing water supply hose from the toilet tank's fill valve. Install the provided T-valve onto the fill valve.
5. **Connect Hoses:** Connect the original water supply hose to the bottom of the T-valve. Connect one end of the provided PE pipe (bidet hose) to the side of the T-valve and the other end to the water inlet on the bidet seat.
6. **Restore Water and Power:** Slowly turn on the water supply. Check for leaks. Plug the bidet seat's power cord into a GFCI-protected electrical outlet.

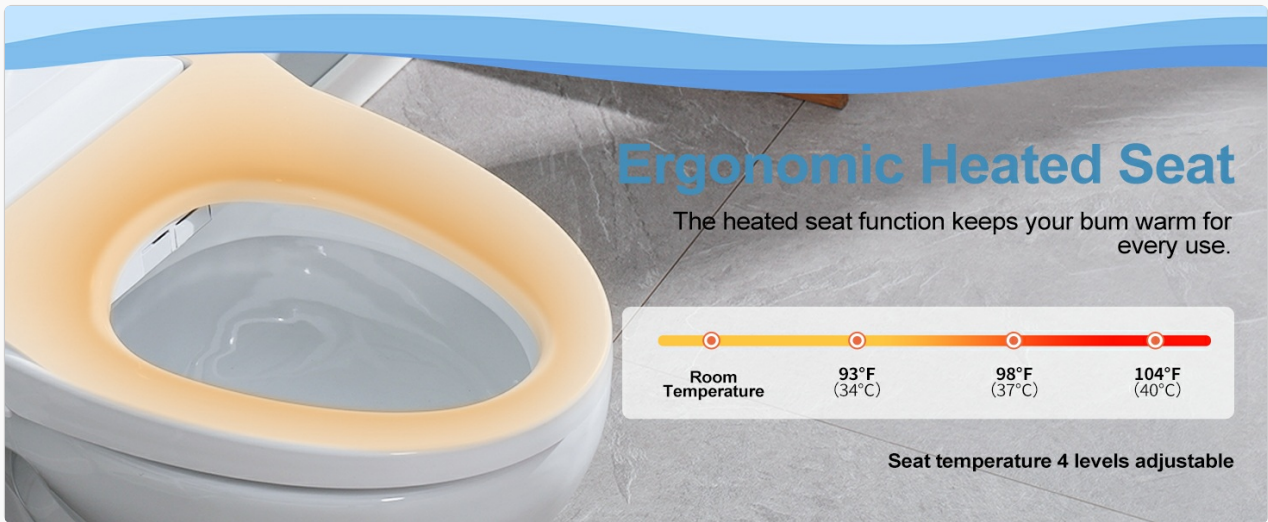


Figure 3.2: Fast and Easy Installation Steps

Your browser does not support the video tag.

Video 3.1: MIJASHY Electric Bidet Toilet Seat Installation Guide. This video demonstrates the process of installing the bidet toilet seat, including connecting water lines and securing the unit.

4. OPERATING INSTRUCTIONS

The mijashy Electric Bidet Toilet Seat offers various functions controlled by the wireless remote. Ensure the remote has fresh batteries and is within range of the bidet seat.

4.1 Remote Control Overview



Figure 4.1: Wireless Remote Control Functions

4.2 Basic Functions

- **Rear Wash:** Activates the posterior wash function.
- **Bidet Wash (Front Wash):** Activates the feminine wash function.
- **Stop:** Stops any active wash or drying cycle.
- **Drying:** Activates the warm air dryer.
- **Power:** Turns the unit on or off.

4.3 Adjustable Settings

- **Water Temperature:** Use the 'Water Temp' button to cycle through adjustable warm water temperature settings (e.g., Room Temperature, 93°F, 98°F, 104°F).
- **Seat Temperature:** Use the 'Seat Temp' button to adjust the heated seat temperature through multiple levels.
- **Drying Temperature:** Use the 'Drying Temp' button to adjust the warm air dryer temperature through multiple levels.
- **Water Pressure (Strength+/-):** Use 'Strength+' and 'Strength-' buttons to increase or decrease water pressure during a wash cycle.
- **Nozzle Position (Forward/Backward):** Adjust the nozzle position for optimal cleaning using the 'Forward' and 'Backward' buttons during a wash cycle.

4.4 Advanced Features

- **Multiple Wash Modes:** In addition to standard front and rear wash, the bidet offers Strong Wash, Pulsating Wash, Soft Wash, and Oscillating Wash for a comprehensive cleaning experience.
- **Auto Mode:** Initiates a pre-programmed wash and dry cycle.
- **Kids Mode:** Provides a gentler wash and lower pressure suitable for children.
- **LED Nightlight:** The built-in nightlight provides illumination for nighttime use. Activate or deactivate using the 'Lighting' button.
- **Eco Mode:** Reduces energy consumption by lowering water and seat temperatures when not in use.

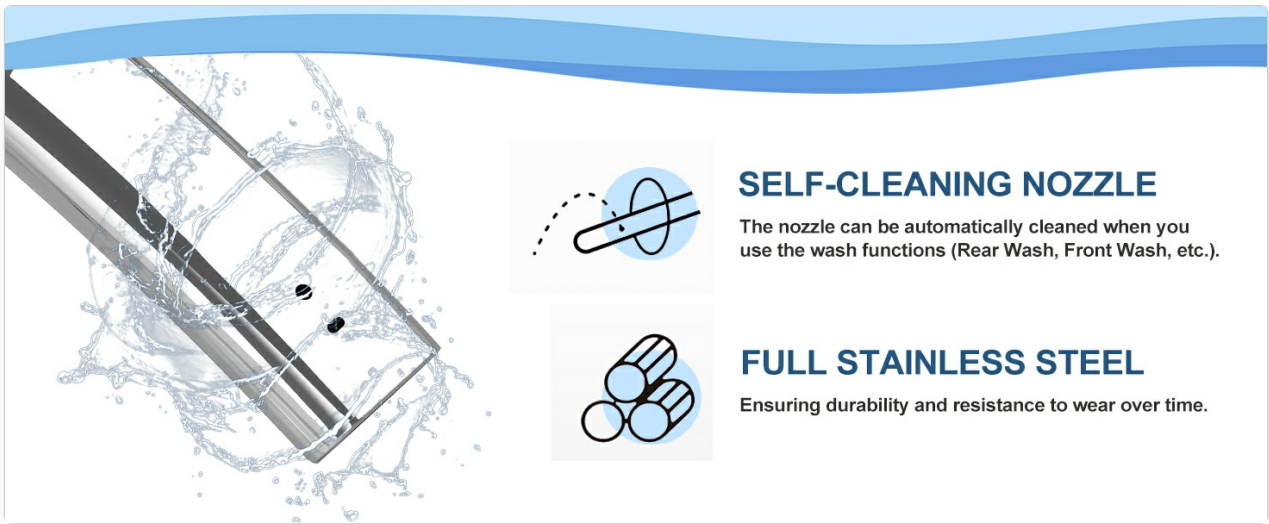


Figure 4.2: Multiple Wash Modes and Water Temperature Settings



Figure 4.3: Heated Seat and Warm Air Dryer Controls

Your browser does not support the video tag.

Video 4.1: MJASHY Electric Bidet Toilet Seat Features Overview. This video highlights the various operational features of the bidet seat, including different wash modes and temperature settings.

5. MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and hygiene of your bidet toilet seat.

5.1 Nozzle Cleaning

The bidet features a self-cleaning nozzle function. Before and after each use, the nozzle automatically rinses itself with water. For a more thorough cleaning, activate the 'Self-Cleaning Nozzle' function on the remote control.

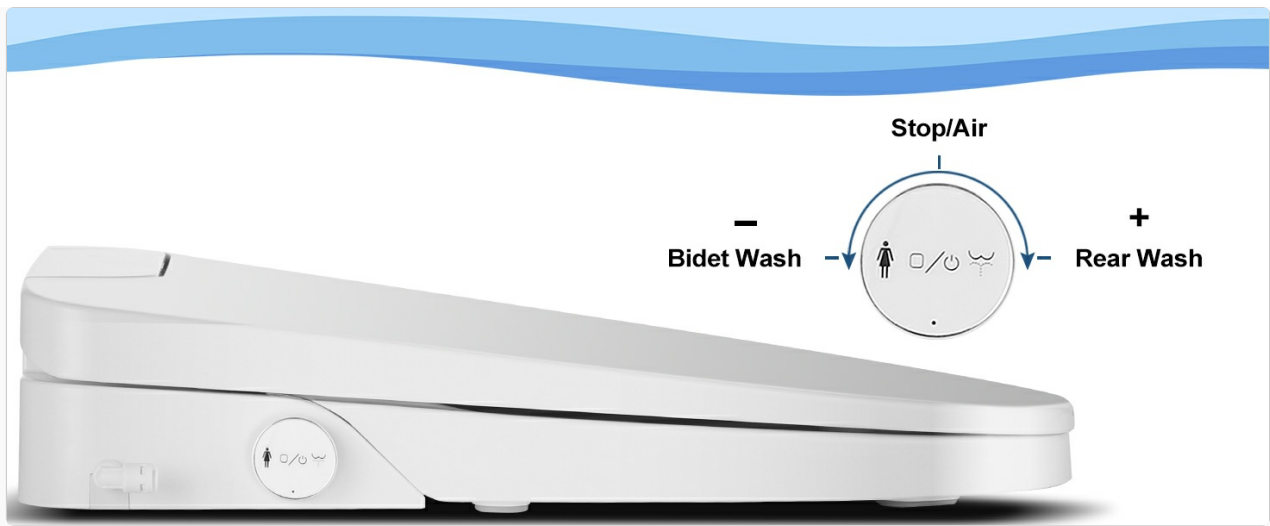


Figure 5.1: Self-Cleaning Nozzle Feature

5.2 General Cleaning

- **Disconnect Power:** Always unplug the bidet seat from the electrical outlet before cleaning.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals, abrasive pads, or solvents, as these can damage the finish.
- **Seat and Lid:** Clean the seat and lid with a soft cloth and mild soap. The soft-close lid can be gently lifted for cleaning underneath.
- **Nozzle Tip:** If necessary, gently clean the nozzle tip with a soft brush (like a toothbrush) and mild soap. Do not force or bend the nozzle.
- **Filter:** Periodically check the water inlet filter for debris. If clogged, turn off the water supply, disconnect the hose, clean the filter, and reassemble.

6. TROUBLESHOOTING

If you encounter issues with your mijashy Electric Bidet Toilet Seat, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Unit not turning on	Power cord unplugged, GFCI tripped, no power to outlet.	Ensure power cord is securely plugged in. Check and reset GFCI outlet. Verify power to the outlet.
No water spray/Weak spray	Water supply valve closed, water inlet filter clogged, low water pressure.	Ensure toilet water supply valve is fully open. Clean the water inlet filter. Check household water pressure.
Water not warm	Water heater off, temperature setting too low.	Ensure the bidet is powered on. Adjust water temperature setting on the remote control. Allow time for water to heat up.
Seat not heated	Heated seat function off, temperature setting too low.	Ensure the bidet is powered on. Adjust seat temperature setting on the remote control.

Problem	Possible Cause	Solution
Air dryer not working/weak	Air dryer function off, temperature setting too low.	Ensure the bidet is powered on. Adjust drying temperature setting on the remote control.
Remote control not responding	Dead batteries, remote out of range, obstruction.	Replace remote control batteries. Ensure remote is pointed towards the bidet seat and within operating range. Remove any obstructions.
Leaks from connections	Loose connections, damaged washers.	Turn off water supply. Tighten all connections. Check and replace any damaged washers.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	Y101
Brand	mijashy
Color	White
Shape	Elongated
Material	Plastic
Product Dimensions (L x W)	20" x 15"
Item Weight	10 Pounds
Operation Mode	Automatic
Included Components	Bidet toilet seat, Water pipes, Screws, Valves, Remote control

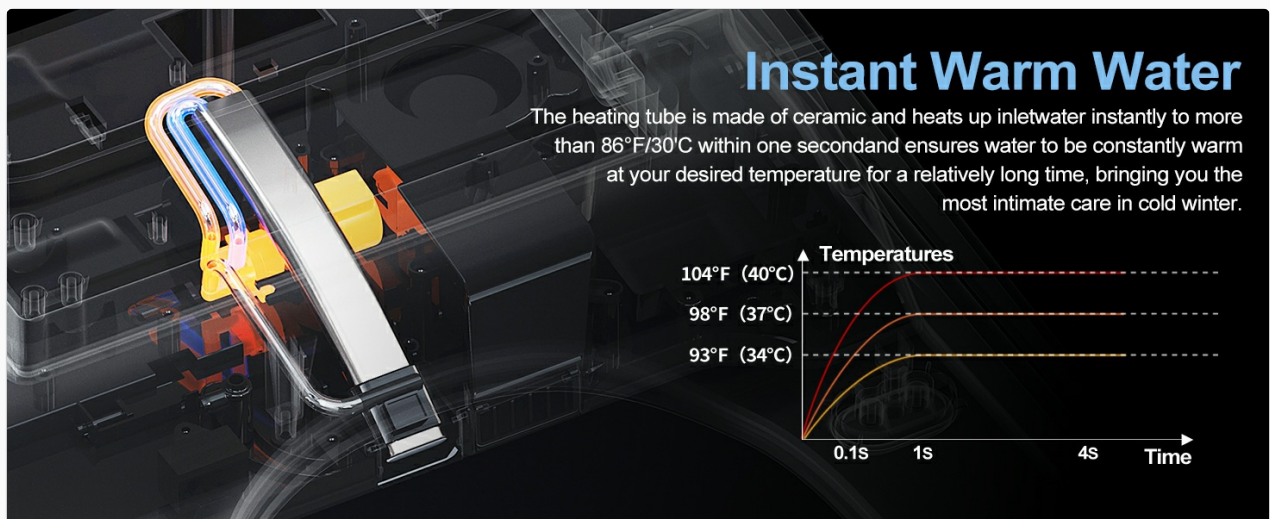


Figure 7.1: Product Dimensions

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official mijashy website. Keep your purchase receipt as proof of purchase for any warranty claims.