

## Skullcandy S2IWW-S031

# Skullcandy Uproar Wireless Earbuds Instruction Manual

Model: S2IWW-S031

## 1. INTRODUCTION

Welcome to the Skullcandy Uproar Wireless Earbuds user manual. This guide provides detailed instructions on how to set up, operate, and maintain your new earbuds. The Skullcandy Uproar earbuds offer a powerful audio experience with features designed for convenience and durability.

- **Massive 46-Hour Battery + Rapid Charge:** Enjoy extended listening with up to 46 hours of total battery life. A quick 10-minute charge provides 2 hours of playback.
- **Crystal-Clear Calls:** Quad microphones with Environmental Noise Cancellation (ENC) ensure clear communication in various environments.
- **Immersive Skullcandy Sound:** Equipped with 10mm drivers for rich bass and clear highs, enhancing your music, movie, and podcast experience.
- **Seamless Multipoint Connectivity:** Easily switch between two paired devices, such as your smartphone and laptop, without needing to disconnect and reconnect.
- **Built for Everyday Life:** Designed to be sweat and water resistant, featuring low-latency Bluetooth v5.4, convenient Type-C charging, and intuitive touch controls.

## 2. WHAT'S IN THE BOX

Your Skullcandy Uproar Wireless Earbuds package includes the following items:

- Skullcandy Uproar Wireless Earbuds
- Charging Case
- USB-C Charging Cable
- Ear Gels (Small, Medium, Large)
- User Manual (Quick Start Guide)



Image: Skullcandy Uproar Wireless Earbuds and Charging Case. The earbuds are black, with the Skullcandy skull logo visible. The charging case is also black, with the Skullcandy logo on the front.

### 3. SETUP

---

#### 3.1 Powering On/Off

Your earbuds come with a partial charge, allowing you to start using them immediately.

- **Power On:** Remove the earbuds from the charging case. They will automatically power on. Alternatively, press and hold the multifunction button on either earbud for 2 seconds. You will hear a voice prompt say "Power On, Ready to Pair."
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off.

#### 3.2 Bluetooth Pairing

The earbuds will automatically enter pairing mode when powered on for the first time or when manually put into pairing mode.

1. **Manual Pairing:** To manually enter Bluetooth pairing mode, press and hold the multifunction button on either the left or right earbud for 3 seconds.

2. **Connect to Device:** Open the Bluetooth settings on your smartphone or other Bluetooth-enabled device. Look for "Uproar" in the list of available devices and select it.
3. **Confirm Pairing:** Confirm the pairing request on your device. Once successfully paired, you will hear a voice prompt say "Connected."



Image: A person wearing a Skullcandy Uproar Wireless Earbud in their right ear, demonstrating the fit and design.

## 4. CHARGING

---

To charge your Skullcandy Uproar earbuds and their case:

- Place the earbuds into the charging case.
- Connect the included USB-C charging cable to the USB-C port on the charging case.
- Connect the other end of the cable to a compatible USB power source.
- The LED indicator on the case will show charging status.



Image: Skullcandy Uproar Wireless Earbuds placed inside their open charging case, showing the charging contacts.

## 5. OPERATING CONTROLS

---

The Skullcandy Uproar earbuds feature intuitive touch controls on both the left and right earbuds for various functions.

### 5.1 Basic Controls

- **Volume Up:** Press the multifunction button on the **right** earbud for 1 second.
- **Volume Down:** Press the multifunction button on the **left** earbud for 1 second.
- **Play/Pause:** Single tap the multifunction button on **either** earbud.
- **Track Forward:** Triple tap the multifunction button on the **right** earbud.
- **Track Backward:** Triple tap the multifunction button on the **left** earbud.
- **Answer Call:** Single tap the multifunction button on **either** earbud.
- **Reject Call:** Press the multifunction button on **either** earbud for 1 second.
- **End Call:** Double tap the multifunction button on **either** earbud.

### 5.2 EQ Presets

The earbuds offer different Equalizer (EQ) modes to optimize your audio experience.

- **Switch EQ Mode:** Double tap the multifunction button on **either** the left or right earbud. Continue double tapping to cycle through the modes.
- **Available Modes:** Music Mode, Movie Mode, Podcast Mode.

### 5.3 Multipoint Pairing

Multipoint pairing allows your earbuds to connect to two devices simultaneously.

- **Activate/Deactivate:** Press the multifunction button on **both** earbuds simultaneously for 1 second.

### 5.4 Low Latency Mode

This mode reduces audio delay, ideal for gaming or watching videos.

- **Activate/Deactivate:** Tap the multifunction button on the **left** earbud four times.

### 5.5 Activate Native Assistant

Access your device's voice assistant (e.g., Siri, Google Assistant).

- **Activate:** Tap the multifunction button on the **right** earbud four times.

## 6. MAINTENANCE

---

To ensure the longevity and optimal performance of your Skullcandy Uproar earbuds:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Ear Gels:** Remove and clean the ear gels periodically with mild soap and water. Ensure they are completely dry before reattaching.
- **Storage:** Store the earbuds in their charging case when not in use to protect them from dust and damage.
- **Water Resistance:** While sweat and water resistant, avoid submerging the earbuds in water. Dry them thoroughly if they get wet.

## 7. TROUBLESHOOTING

---

If you encounter issues with your earbuds, try the following steps:

### 7.1 Resetting Earbuds

If you experience connectivity issues or other malfunctions, performing a factory reset may resolve the problem.

- **Factory Reset:** Press and hold the multifunction button on **either** the left or right earbud for 8 seconds. This will restore the earbuds to their original factory settings.

### 7.2 General Troubleshooting

- **No Power:** Ensure the earbuds and charging case are fully charged.
- **Pairing Issues:** Make sure Bluetooth is enabled on your device and the earbuds are in pairing mode. Try forgetting the device from your phone's Bluetooth list and re-pairing.
- **No Sound:** Check the volume levels on both your device and the earbuds. Ensure the earbuds are properly connected.

## 8. SPECIFICATIONS

---

Connectivity Technology	Wireless
Item Weight	82 Grams
Water Resistance Level	Water Resistant
Bluetooth Version	5.4
Audio Driver Size	10 Millimetres
UPC	810145323649
Model Number	S2IWW-S031
Product Dimensions	1.2 x 1 x 0.34 cm
Country of Origin	Vietnam

### 9. OFFICIAL USER GUIDE VIDEO

For a visual guide on setting up and using your Skullcandy Uproar Wireless Earbuds, please refer to the official user guide video below. This video covers unboxing, powering on/off, Bluetooth pairing, basic controls, EQ presets, multipoint pairing, low latency mode, native assistant activation, and resetting.

Video: Official Skullcandy Uproar Wireless Earbuds User Guide. This video demonstrates various functions and features of the earbuds, including setup, controls, and troubleshooting steps.


### 10. WARRANTY AND SUPPORT

 
For warranty information, product support, or to address any issues not covered in this manual, please visit the official Skullcandy support website.

**Support Website:** <https://support.skullcandy.com>

It is recommended to contact customer support before filing a warranty claim, as many issues can be resolved quickly with direct assistance.

### Related Documents - S2IWW-S031

	<p><a href="#">Skullcandy INDY™ EVO User Guide: Troubleshooting, Features, and FAQs</a></p> <p>A comprehensive user guide for Skullcandy INDY™ EVO wireless earbuds, detailing troubleshooting steps for pairing issues, solo mode usage, charging problems, Tile activation and location, battery information, new features, connection details, and general questions.</p>
---	--

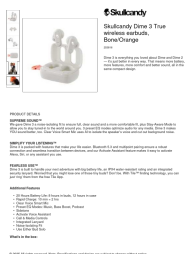

### Skullcandy Dime 3 True Wireless Earbuds - Bone/Orange

Discover the Skullcandy Dime 3 True Wireless Earbuds in Bone/Orange. Featuring Supreme Sound, a noise-isolating fit, Stay-Aware Mode, and Clear Voice Smart Mic. Enjoy Bluetooth 5.3, multipoint pairing, and up to 20 hours of battery life. IPX4 water-resistant and includes Tile™ finding technology.



 
## Skullcandy Dime 3 True Wireless Earbuds User Guide

Comprehensive user guide for Skullcandy Dime 3 true wireless earbuds, covering initial setup, pairing, multipoint connection, user controls, auto power management, charging, troubleshooting, and features like Stay-Aware Mode and Clear Voice Smart Mic.




## Skullcandy Method 360 ANC True Wireless Earbuds: Setup, Controls, and Features Guide

Get the most out of your Skullcandy Method 360 ANC earbuds with this comprehensive guide. Learn about initial setup, controls, Skull-iQ app features, multipoint pairing, troubleshooting, charging, and warranty information.

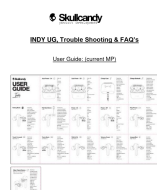

[Skullcandy Indy UG User Guide: Troubleshooting & FAQs for Truly Wireless Earbuds](#)

 Comprehensive user guide and troubleshooting FAQ for Skullcandy Indy UG truly wireless earbuds. Find solutions for pairing, charging, connectivity, and answers to common questions. Learn about features and warranty.

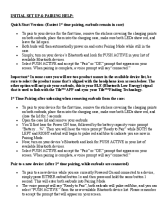

## Skullcandy PUSH ACTIVE Earbuds: Setup, Pairing, Controls, and Features Guide

Comprehensive guide for Skullcandy PUSH ACTIVE earbuds, covering initial setup, pairing, default controls, Skull-iQ features, voice commands, custom button actions, EQ modes, charging, troubleshooting, and Tile™ finding technology.