

[Manuals.plus](#) /

› [Skullcandy](#) /

› Skullcandy Uproar ANC Wireless Earbuds Instruction Manual

Skullcandy Uproar ANC

Skullcandy Uproar ANC Wireless Earbuds Instruction Manual

Model: Uproar ANC (S2IWW-S031-New)

INTRODUCTION

Welcome to your Skullcandy Uproar ANC Wireless Earbuds. These earbuds are designed to provide an immersive audio experience with Active Noise Cancelling, extended battery life, and advanced call clarity. This manual provides essential information for setting up, operating, and maintaining your earbuds.

WHAT'S IN THE BOX

Upon opening your Skullcandy Uproar ANC package, you should find the following items:

- Uproar® ANC True Wireless Earbuds
- Charging Case
- Ear Gels (Sizes S, M, L)
- USB-C Charging Cable
- Quick Start & User Guides



Image: The Skullcandy Uproar ANC Wireless Earbuds, including both earbuds and their charging case.

SETUP

1. Initial Charging

Before first use, fully charge your earbuds and charging case. The earbuds offer up to 42 hours of total playtime with the charging case. A rapid charge feature provides 2 hours of playback from just 10 minutes of charging.



Image: The Skullcandy Uproar ANC earbuds and charging case, highlighting the 42-hour battery life and rapid charge capability.

2. Pairing with a Device

Your Uproar ANC earbuds support Multipoint Pairing, allowing seamless switching between two connected devices.

1. Ensure the earbuds are charged and in the charging case.
2. Open the charging case. The earbuds will enter pairing mode.
3. On your device (smartphone, tablet, computer), go to Bluetooth settings and select 'Skullcandy Uproar ANC' from the list of available devices.
4. For multipoint pairing, connect to the first device, then put the earbuds back in the case. Open the case again and connect to the second device. The earbuds will remember both connections.

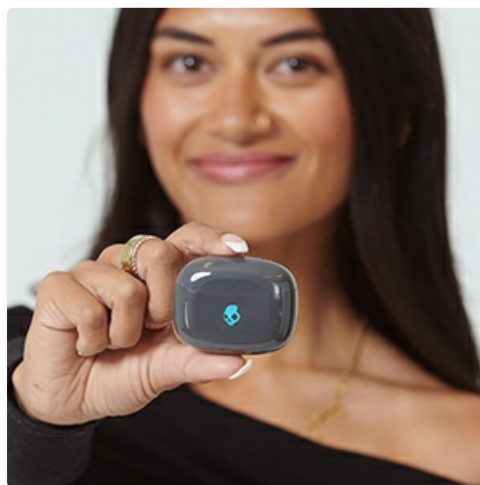


Image: An icon illustrating the Multipoint Pairing feature, showing two arrows diverging from a central point.

OPERATING INSTRUCTIONS

Active Noise Cancelling (ANC)

The Uproar ANC earbuds feature 4-mic hybrid Active Noise Cancelling technology to block out external distractions, providing a focused listening experience.



Image: A person wearing Skullcandy Uproar ANC earbuds in an outdoor environment, demonstrating the Active Noise Cancelling feature.

Call Features

Equipped with Quad Mic ENC (Environmental Noise Cancellation) technology, these earbuds ensure crystal-clear voice pickup during calls, with two microphones per earbud to reduce background noise.



Image: An icon representing the Quad Mic with ENC feature, indicating enhanced call clarity.

Audio Performance

Experience deep bass and immersive sound quality thanks to the powerful 10mm drivers. The low latency feature ensures smoother video and audio synchronization, ideal for media consumption.

Touch Controls

The earbuds feature intuitive touch controls for managing playback, calls, and ANC settings. Refer to the Quick Start Guide for specific touch commands.

MAINTENANCE

The Skullcandy Uproar ANC earbuds are sweat and water resistant, making them suitable for workouts, travel, and daily use. To maintain their performance and longevity:

- Wipe the earbuds with a dry, soft cloth after each use, especially after exposure to sweat or water.
- Ensure the earbuds are completely dry before placing them back into the charging case.
- Store the earbuds and case in a cool, dry place away from extreme temperatures.
- Clean the ear gels regularly with a damp cloth and mild soap, then dry thoroughly.



Image: An icon representing the sweat and water resistant feature of the earbuds.

TROUBLESHOOTING

If you encounter any issues with your Skullcandy Uproar ANC earbuds, try the following steps:

- **No Sound:** Ensure earbuds are charged, connected to your device, and volume is up.
- **Pairing Issues:** Turn off Bluetooth on your device, then turn it back on. Remove 'Skullcandy Uproar ANC' from your device's paired list and attempt to re-pair.
- **Earbud Not Charging:** Check that the charging cable is securely connected and the charging case has power. Ensure earbuds are correctly seated in the case.
- **ANC Not Working:** Ensure ANC is activated via touch controls.
- **General Reset:** Place both earbuds in the charging case, close the lid, wait a few seconds, then open it again. This can resolve minor software glitches.

For further assistance, please refer to the detailed user guide included in your package or visit the Skullcandy support website.

SPECIFICATIONS

Model Name	Uproar ANC
Item Model Number	S2IWW-S031-New
Connectivity Technology	Wireless (Bluetooth 5.4)
Audio Driver Size	10 Millimetres
Noise Control Features	Active Noise Cancelling

Battery Life	Up to 42 Hours (with charging case)
Charging Time	10 Minutes for 2 Hours Playback (Rapid Charge)
Special Features	Sweat & Water Resistant, Multipoint Pairing
Control Method	Touch
Item Weight	82 Grams
UPC	810145323625

OFFICIAL PRODUCT VIDEOS

Skullcandy Uproar ANC Product Overview

Your browser does not support the video tag.

Video: A brief overview of the Skullcandy Uproar ANC Wireless Earbuds, showcasing their design and key features.

Skullcandy Uproar ANC Features Showcase

Your browser does not support the video tag.

Video: This video highlights various features of the Skullcandy Uproar ANC, including multipoint pairing, active noise canceling, and sweat resistance.

WARRANTY AND SUPPORT

Your Skullcandy Uproar ANC Wireless Earbuds come with a standard brand warranty. For detailed warranty information, product registration, and customer support, please visit the official Skullcandy website or refer to the warranty card included in your product packaging.

You can also visit the [Skullcandy Store on Amazon](#) for more product information and support resources.

© 2025 Skullcandy Inc. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question