

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Inalsa](#) /
- › [INALSA Air Fryer Oven Crisp Pro 18 User Manual](#)

Inalsa Crisp Pro 18

INALSA Air Fryer Oven Crisp Pro 18 User Manual

Model: Crisp Pro 18

1. INTRODUCTION

Thank you for purchasing the INALSA Air Fryer Oven Crisp Pro 18. This appliance combines the functions of an air fryer and an oven, offering versatile cooking options with less oil. Please read this manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.

Why INALSA Air Fryer Oven ?

- No Need to Separately Buy an Air Fryer or OTG
- Large Capacity in Air Fryer 18L
- 10 Accessories Including Frying Basket Handle & Rotisserie Handle
- 8-in-1 Function Including Dehydrate & Reheat
- Non Toxic Stainless Steel Interior
PFOA or PFAS Free

10 Accessories

UPTO 90mins Timer

Air System Technology

2100 Watt

Quick Heat Circulation



The image shows the INALSA Air Fryer Oven Crisp Pro 18 in operation. The appliance is a dark grey and silver color. The digital display on the top panel shows '180' and has several icons for different cooking functions. The oven door is open, revealing the interior with a stainless steel finish. Inside, there are two racks: the top one has a rotisserie spit with a whole chicken, and the bottom one has a wire basket filled with golden-brown fries. The text 'Crisp Pro 18' is visible at the bottom of the oven door.

Image: The INALSA Air Fryer Oven Crisp Pro 18 in operation, demonstrating its 2100W power and visual window for monitoring food.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Adequate space (at least 10 cm) should be left around the appliance for proper ventilation.

3. PRODUCT OVERVIEW AND COMPONENTS

The INALSA Air Fryer Oven Crisp Pro 18 is designed for versatile cooking. Familiarize yourself with its parts and accessories.

Visual Window

See the food at any time



Image: Front view of the INALSA Air Fryer Oven Crisp Pro 18.

Included Components:

Your INALSA Air Fryer Oven Crisp Pro 18 comes with the following accessories:


- 1 N Main Unit
- 1 N Bake/Crumb Tray
- 2 N Deep Crisper Trays
- 1 N Frying Basket With Handle
- 1 N Rotating Basket
- Rotisserie Fork Set
- Rotisserie Handle
- Skewer & Rack Assembly
- 2 N Pot Mitts



Included Accessories



2N Pot Mitts

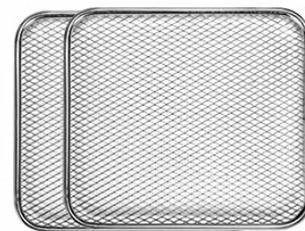


2N Deep Crisper Tray



Baking Tray



Skewer & Rack Assembly

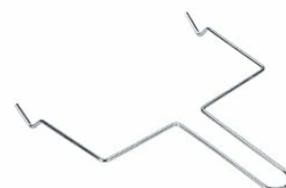

Rotisserie Handle



Rotisserie Fork Set



Rotisserie Basket



Frying Basket with Handle

Image: Overview of the accessories included with the Air Fryer Oven.

4. SETUP

- Unpacking:** Carefully remove all packaging materials and accessories from the box.
- Initial Cleaning:** Before first use, wipe the main unit with a damp cloth. Wash all removable accessories (bake/crumb tray, crisper trays, frying basket, rotating basket, rotisserie parts) with warm, soapy water. Rinse thoroughly and dry completely.
- Placement:** Place the appliance on a stable, level, heat-resistant surface. Ensure there is at least 10 cm of clear space on all sides and above the appliance for proper air circulation. Do not place it near flammable materials or under cabinets.
- Power Connection:** Ensure the power cord is securely plugged into a grounded electrical outlet.
- First Use Burn-Off:** It is recommended to run the air fryer oven empty for about 10-15 minutes at 180°C (350°F) before cooking food. This helps to burn off any manufacturing residues and odors. A slight odor or smoke may be present during this process; this is normal. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The INALSA Crisp Pro 18 features an intuitive LED touch display for easy operation.



Image: Smart Touch Control panel with digital display.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Adjusts cooking temperature (up to 200°C).
- **Time Control:** Sets cooking time (up to 90 minutes).
- **Preset Menu Icons:** Select from 8 pre-programmed cooking functions.
- **Rotisserie Button:** Activates the rotisserie function.
- **Light Button:** Turns the interior light on/off to view food.

5.2 Using Preset Functions

The appliance comes with 8 smart preset modes for common dishes.



Image: 8 Smart Preset Modes with default settings.

1. Place food inside the oven using appropriate accessories (e.g., crisper tray for fries).
2. Press the Power button to turn on the display.
3. Select the desired preset icon (e.g., Fries, Pizza, Fish). The display will show the default temperature and time for that preset.
4. You can adjust the temperature and time manually using the respective control buttons if needed.
5. Press the Start/Pause button (usually the Power button again or a dedicated start button) to begin cooking.

Preset Default Settings:

- French Fries: 200°C / 25 min
- Pizza: 170°C / 10 min
- Steak: 180°C / 17 min
- Fish: 180°C / 23 min
- Cake: 160°C / 30 min
- Drum Stick: 200°C / 25 min
- Shrimp: 170°C / 15 min
- Dehydrate: 60°C / 6 hr

5.3 Manual Operation

1. Place food inside the oven.
2. Press the Power button.
3. Use the Temperature control buttons to set the desired temperature (90°C to 200°C).
4. Use the Time control buttons to set the desired cooking time (up to 90 minutes).
5. Press the Start/Pause button to begin cooking.

5.4 Rotisserie Function

The rotisserie function is ideal for roasting whole chickens or other large cuts of meat evenly.

1. Assemble the rotisserie fork set or rotating basket with your food. Ensure the food is securely fastened and balanced.
2. Insert the rotisserie shaft into the appliance's rotisserie drive socket on the right side and rest the left end on the support.
3. Close the oven door.
4. Set the desired temperature and time using manual controls or a relevant preset.
5. Press the Rotisserie button to activate the rotation.
6. Press the Start/Pause button to begin cooking.
7. Once cooking is complete, use the rotisserie handle to safely remove the hot rotisserie assembly from the oven.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Before Cleaning:** Always unplug the air fryer oven from the power outlet and allow it to cool completely before cleaning.
2. **Main Unit:** Wipe the exterior and interior of the main unit with a damp cloth and mild detergent. Do not immerse the main unit in water or any other liquid.
3. **Accessories:** All removable accessories (bake/crumb tray, crisper trays, frying basket, rotating basket, rotisserie parts) are dishwasher safe. Alternatively, wash them with warm, soapy water using a non-abrasive sponge. For stubborn food residues, soak them in warm water for a period before cleaning.
4. **Heating Element:** Gently clean the heating element with a soft brush to remove any food particles. Do not use abrasive cleaners or metal scouring pads.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your INALSA Air Fryer Oven Crisp Pro 18, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; main unit damaged.	Check power cord connection; test outlet with another appliance; contact customer support if damaged.
Food is not cooked evenly.	Overcrowding; incorrect temperature/time; food not rotated.	Cook in smaller batches; adjust temperature/time; shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the appliance and accessories thoroughly; remove excess oil from food before cooking.
Rotisserie function not working.	Rotisserie shaft not properly installed; food too heavy/unbalanced.	Ensure shaft is correctly seated in drive socket and support; balance food; reduce load if necessary.
Food not crispy.	Too much moisture; overcrowding; insufficient cooking time/temperature.	Pat food dry; avoid overcrowding; increase cooking time or temperature slightly.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Model Name	INALSA Crisp Pro 18
Capacity	18 Litres
Wattage	2100 Watts
Product Dimensions (D x W x H)	36D x 36.5W x 34.5H Centimeters
Item Weight	7.2 kg (7200 Grams)
Control Method	Touch
Temperature Range	90°C - 200°C
Max Timer Setting	90 Minutes
Special Features	Automatic Shut-Off, Rotisserie & Convection Function
Material	Glass, Plastic, Non-stick (Teflon/Ceramic)
Dishwasher Safe Parts	Yes (Removable accessories)

9. WARRANTY AND SUPPORT

The INALSA Air Fryer Oven Crisp Pro 18 comes with a **2-year warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical assistance, or any product-related inquiries, please contact INALSA customer support:

- **Manufacturer:** Tuareg Marketing Pvt. Ltd.
- **Address:** Khasra No- 1189, Bhalswa, New Delhi-110033, India.
- **Contact Number:** 9773982065

Please retain your purchase receipt as proof of purchase for warranty validation.

