

CaDA C66015W

CaDA Japanese Style Cat Grocery Store House Building Set C66015W Instruction Manual

Model: C66015W

Brand: CaDA

INTRODUCTION

This manual provides detailed instructions for assembling and operating your CaDA Japanese Style Cat Grocery Store House Building Set, model C66015W. This set features a two-story Japanese building with a grocery store on the first floor and a loft rest area on the second, complete with a fish pond. It includes 921 high-quality building block pieces and lighting elements.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not suitable for children under 3 years.

Always supervise children during assembly. Keep small parts away from infants and young children to prevent accidental ingestion.

PACKAGE CONTENTS

- 921 CaDA high-quality building block pieces
- Instruction Manual
- Lighting elements (USB light group)

ASSEMBLY INSTRUCTIONS

Follow the step-by-step instructions provided in the included instruction manual. Ensure all pieces are securely connected.

General Assembly Tips

- Sort pieces by color and size before starting to simplify the building process.
- Press each brick firmly to ensure a stable connection and prevent gaps.

- Pay close attention to color differences in the instruction diagrams to avoid using incorrect pieces.

Key Assembly Steps

The assembly process involves constructing the two-story structure, including the grocery store interior and the second-floor loft. The set features an opening side wall, retractable sunshade, retractable sitting area, and an opening window for enhanced playability and display.



Image: The fully assembled CaDA Japanese Style Cat Grocery Store Building Set, model C66015W, showcasing its detailed exterior and cherry blossom tree.

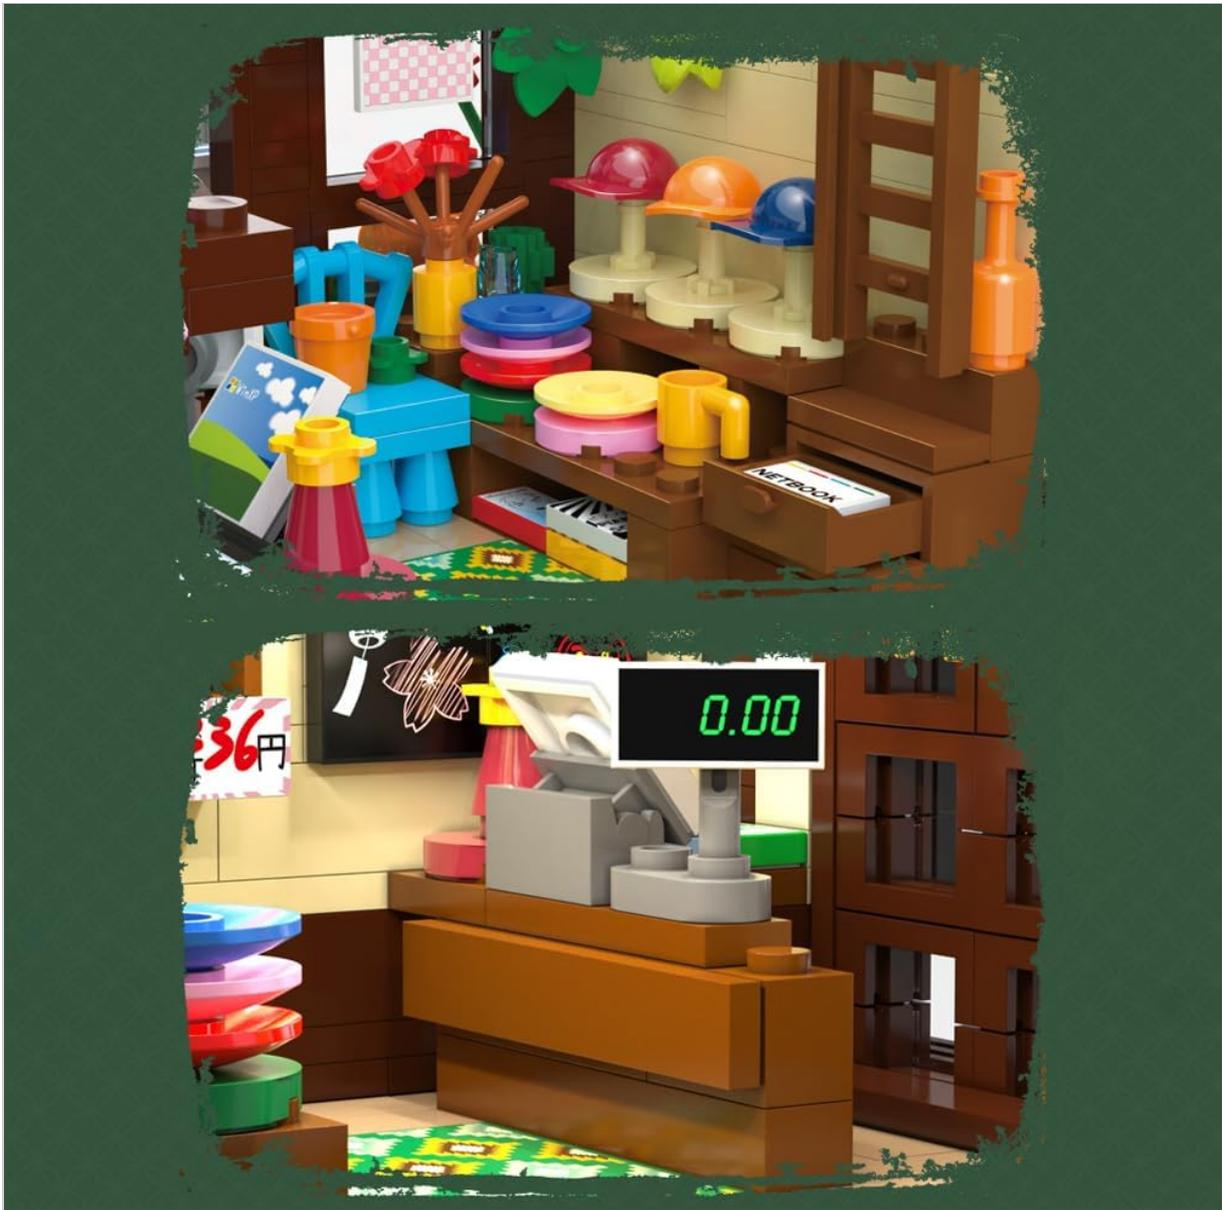


Image: A detailed interior view of the first-floor grocery store, displaying various miniature items and a cash register.



Image: Close-up showing the retractable sunshade, sitting area, and opening window features of the building set.

Video Guide

For a visual assembly guide, please refer to the official manufacturer's video resources if available.

FEATURES

- **Exquisite Japanese Style:** A two-story building with a detailed grocery store on the first floor, benches for resting, and a loft rest area on the second floor with a fish pond.
- **High-Quality Building Blocks:** Contains 921 pieces made from Acrylonitrile Butadiene Styrene (ABS), ensuring stable connections and a comfortable feel.
- **Unique Decorative Elements:** Features cherry blossom trees and other details that enhance the Japanese cultural theme.
- **Integrated Lighting:** Equipped with a USB light group for illumination.
- **Interactive Design:** Includes features like an opening side wall, retractable sunshade, retractable sitting area, and opening window.

SETUP

Once assembled, place the model on a stable, flat surface.

Lighting Setup

The set includes a USB light group. Connect the USB cable to a compatible power source (e.g., USB wall adapter, power bank) to illuminate the model.



Image: The building set highlighting the USB light group for illumination.

OPERATING FEATURES

This model includes several interactive elements:

- **Opening Side Wall:** The side wall can be opened to reveal the interior details of the grocery store.
- **Retractable Sunshade:** The sunshade on the second floor can be retracted.
- **Retractable Sitting Area:** A sitting area on the second floor can be extended or retracted.
- **Opening Window:** The window above the grocery store can be opened.

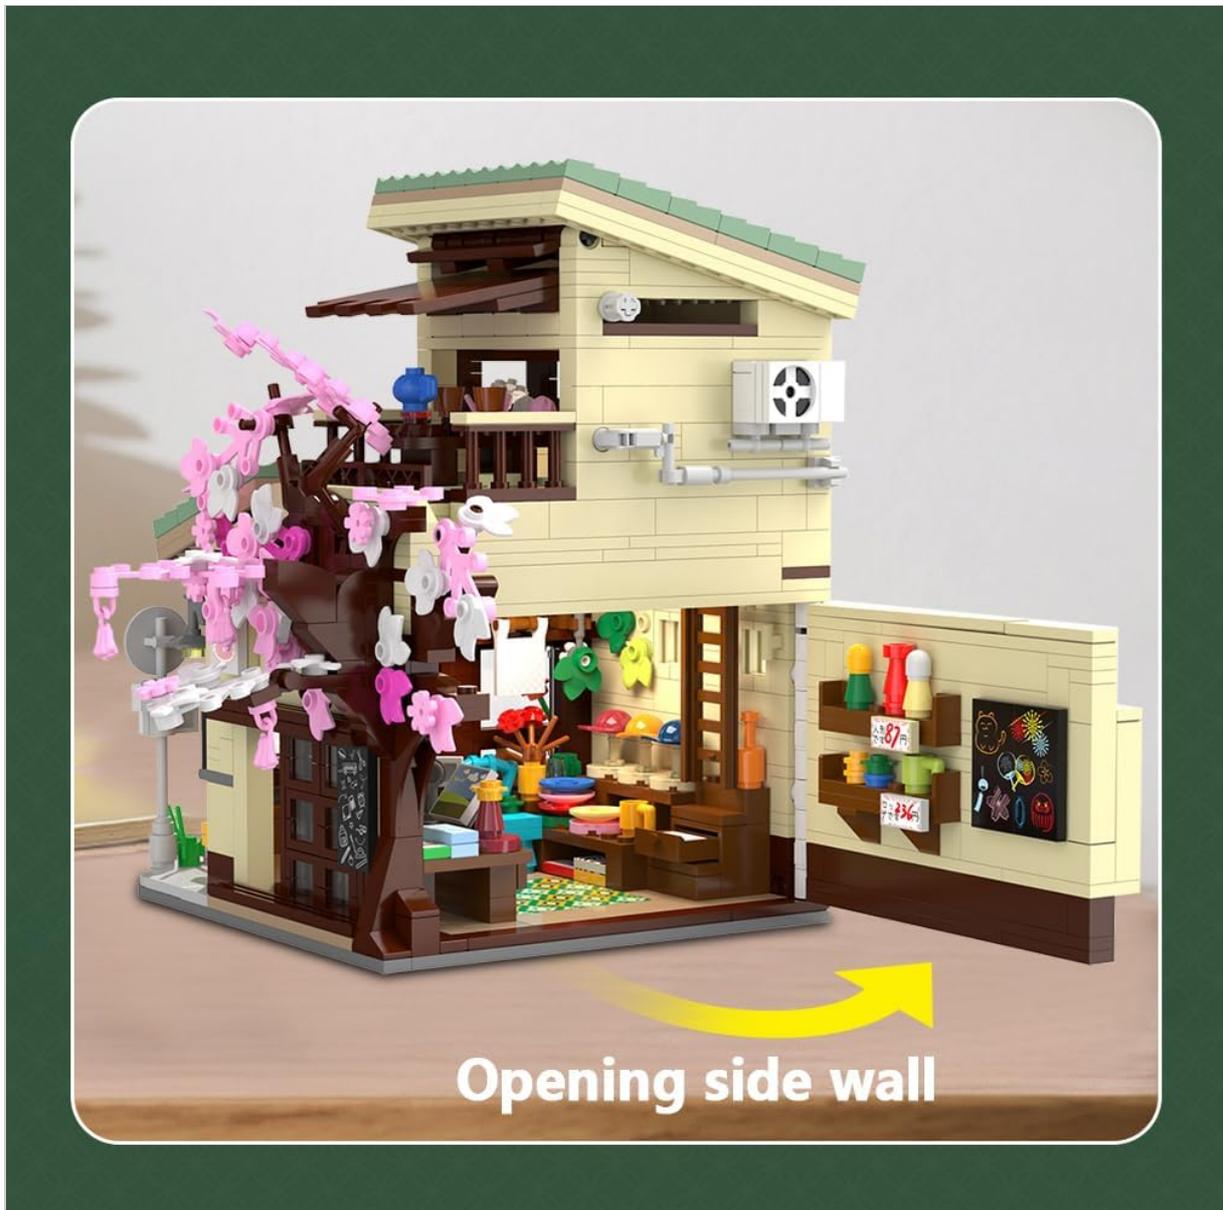


Image: The building set with its side wall opened to display the interior.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe dust from the model. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the model in a cool, dry place away from direct sunlight to prevent discoloration or material degradation.
- **Handling:** Handle the model with care, especially when moving it, to avoid dislodging small pieces.

TROUBLESHOOTING

Loose or Unstable Parts

If parts feel loose or the structure is unstable, re-examine the connections. Ensure each brick is fully pressed into place. Refer to the instruction manual for specific steps.

Missing Pieces

In the rare event of missing pieces, please contact CaDA customer support with details of the missing parts (as identified in the instruction manual).

Lighting Issues

If the USB light group is not working, ensure the USB cable is securely connected to both the model and a functional power source. Check the power source for proper operation.

SPECIFICATIONS

| Property | Value |
|-----------------------------|------------------------------------|
| Brand Name | CaDA |
| Model Name | SO CaDA Japanese House 10BT 250425 |
| Model Number | SO CaDA Japanese House 10BT 250425 |
| Number of Pieces | 921 |
| Material Type | Acrylonitrile Butadiene Styrene |
| Item Dimensions (L x W x H) | 5.1 x 6 x 9.5 inches |
| Manufacturer Minimum Age | 168 months (14 years) |
| Manufacturer Maximum Age | 720 months (60 years) |
| Educational Objective | Creative Thinking |
| Operation Mode | Manual |
| Assembly Required | Yes |

Note: Dimensions are approximate and may vary slightly.

WARRANTY AND SUPPORT

For warranty information, product support, or to report missing parts, please contact CaDA customer service directly. Refer to the product packaging or the official CaDA website for contact details.