

[Manuals.plus](#) /

› [webeauty](#) /

› webeauty Hair Dryer Brush 8-in-1 Dual Voltage Hot Air Styler Instruction Manual (Model F9E)

webeauty F9E

webeauty Hair Dryer Brush 8-in-1 Dual Voltage Hot Air Styler Instruction Manual

Model: F9E

INTRODUCTION

Thank you for choosing the webeauty Hair Dryer Brush 8-in-1 Dual Voltage Hot Air Styler. This versatile styling tool is designed to simplify your hair care routine by combining multiple functions into one device. With its high-speed motor, ionic and ceramic technology, and various attachments, you can achieve salon-quality results at home or while traveling. Please read this manual thoroughly before use to ensure safe and optimal performance.

IMPORTANT SAFETY INFORMATION

- Keep out of reach of children.
- Do not use near water.
- Be cautious of overheating.
- Do not use while bathing.
- The ALCI plug automatically shuts off power in case of leakage or abnormal current. With built-in Test and Reset buttons, it prevents electric shock and ensures safe use—even in bathrooms—protecting you and your family.

PACKAGE CONTENTS

Your webeauty Hair Dryer Brush 8-in-1 Dual Voltage Hot Air Styler includes the following components:

- Main Styler Unit (Wind-Combed Body)
- Left Auto-Wrap Curler
- Right Auto-Wrap Curler
- Hair Straightener Attachment
- Smoothing Brush
- Volumizing Brush
- Hair Diffuser
- Fast Dryer Nozzle

- Protective Hard Case
- Heat-Resistant Glove (if included)



Figure 1: Complete set of the webeauty Hair Dryer Brush 8-in-1 Styler and its attachments.



Figure 2: Detailed view of all attachments and the main unit within the presentation case.

SETUP AND ATTACHMENT INSTALLATION

1. **Connecting an Attachment:** Align the desired styling attachment with the main styler unit. Gently push the attachment onto the unit until you hear a click, indicating it is securely locked in place.
2. **Removing an Attachment:** To remove an attachment, press the release button located on the main styler unit (often near the attachment point). While holding the button, gently twist and pull the attachment off. Ensure the unit is cool before changing attachments to prevent burns.



Figure 3: Attaching the volumizing brush to the main styler unit.

OPERATING INSTRUCTIONS

General Operation

- **Power On/Off:** Plug the device into a suitable electrical outlet. Press the power button to turn the styler on or off.
- **Heat and Speed Settings:** The styler features 3 heat and speed settings. Use the control buttons on the main unit to select the desired temperature and airflow level.
 - Low Heat/Speed: For fine or damaged hair.
 - Medium Heat/Speed: For normal hair.
 - High Heat/Speed: For thick or curly hair.
- **Cool Air Option:** Activate the cool air setting to set your style and lock in curls for long-lasting results.

3 Heat Settings • For Every Hair Type

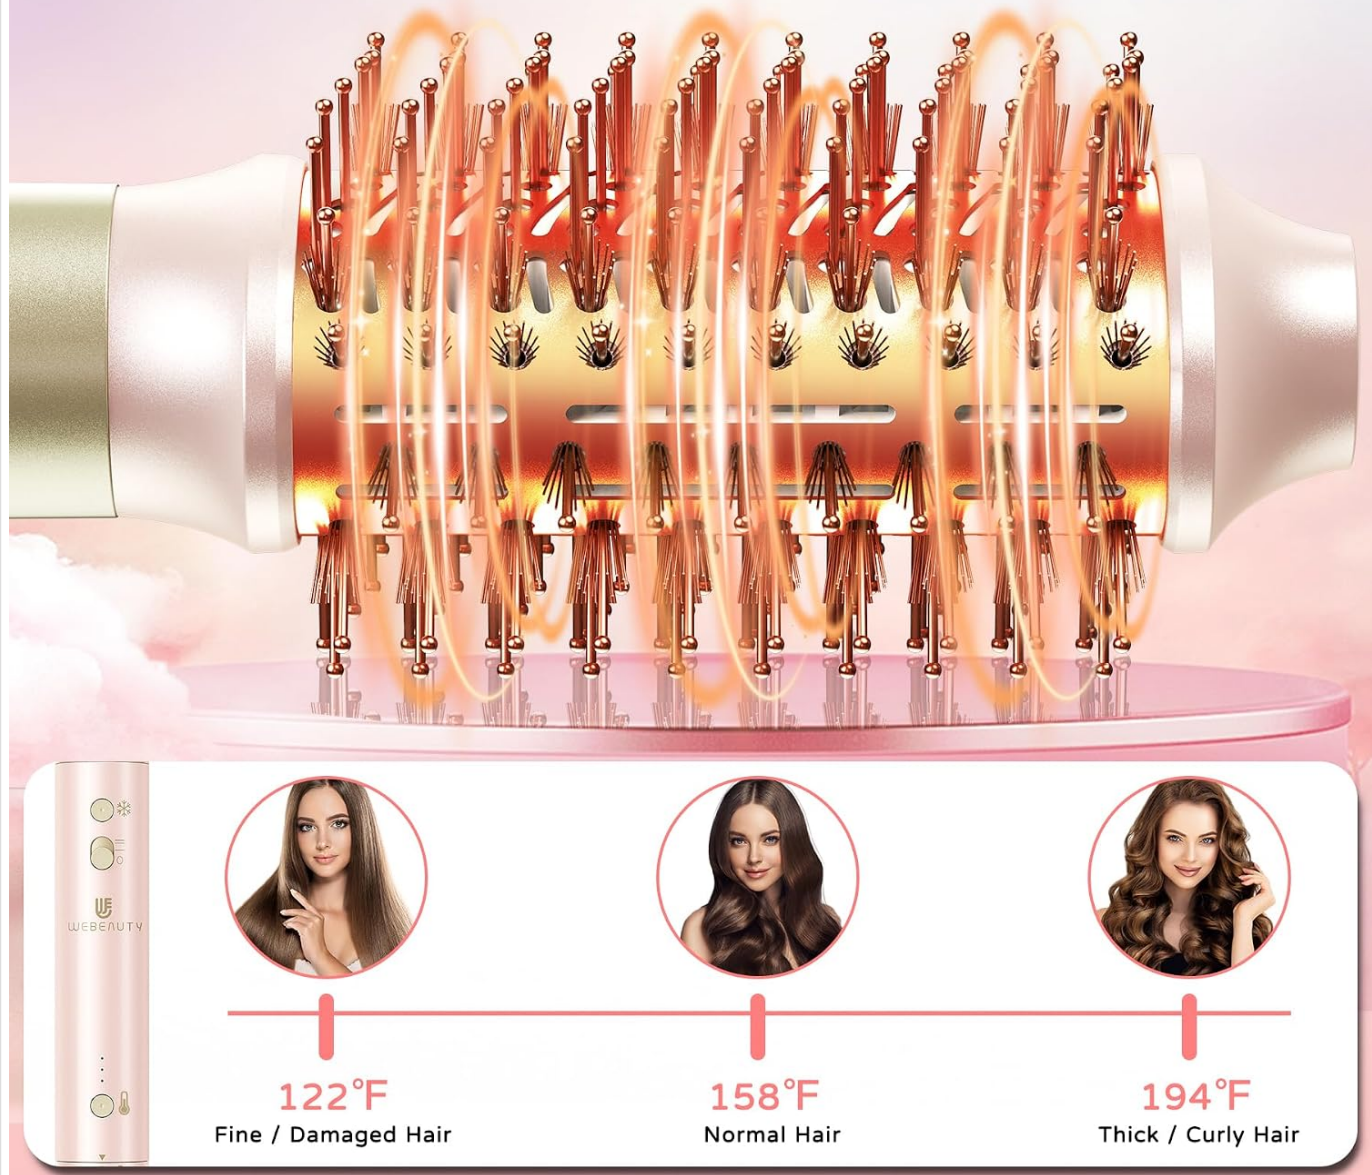


Figure 4: Heat and speed settings for various hair types.

Cool Air Shot – Lock in Your Style All Day



Figure 5: Using the cool air shot to lock in your hairstyle.

Using Specific Attachments

1. Fast Dryer Nozzle

Use this attachment for quick drying of wet hair before styling with other tools. It provides powerful airflow for efficient drying without excessive heat damage.

Fast Drying & Styling in One Step



Smoothing Brush



Volumizing Brush



Hair Diffuser



Hair Straightener



Auto-Wrap Curlers



Figure 6: Fast drying with the dedicated nozzle.

Your browser does not support the video tag.

Video 1: Demonstration of the Hair Dryer Brush in action, showcasing its fast-drying capabilities with the fast dryer nozzle.

2. Smoothing Brush

This brush is designed to smooth hair and reduce frizz, leaving it sleek and shiny. Use on damp, towel-dried hair for best results. Brush downwards from roots to ends.

Auto-Wrap Curlers • Effortless Curls



Figure 7: Achieving smooth, frizz-free hair with the smoothing brush.

3. Volumizing Brush

The volumizing brush adds body and lift to your hair. Use it by lifting sections of hair at the roots and brushing outwards, or by rolling sections around the brush for soft waves.

4. Hair Straightener Attachment

For sleek, straight hair, attach the hair straightener. Ensure hair is dry before use. Pass sections of hair between the plates from roots to ends. The powerful airflow straightens as it dries, while negative ions lock in moisture and reduce static.

Your browser does not support the video tag.

Video 2: Demonstration of the hair straightener attachment in use, showing how it straightens hair effectively.

5. Auto-Wrap Curlers (Left & Right)

These innovative curlers use airflow to automatically wrap hair around the barrel, creating effortless curls. Use the "Left" curler for curls on the left side of your head and the "Right" curler for curls on the right side, ensuring the airflow directs

hair away from your face. Hold the curler near the ends of a hair section, and the air will draw the hair around the barrel. Hold until dry, then use the cool shot to set.



Figure 8: Creating curls with the auto-wrap curler.

6. Hair Diffuser

The diffuser attachment is ideal for defining curls and adding volume to wavy or curly hair while reducing frizz. It spreads high-speed airflow evenly, protecting natural curl patterns.

FEATURES AND TECHNOLOGY

- **110,000 RPM Motor:** Provides powerful, fast-drying airflow, significantly reducing drying time.
- **Ionic + Ceramic Technology:** Releases millions of negative ions to reduce frizz and static, while the ceramic-coated barrel ensures even heat distribution, minimizing heat damage and promoting shiny, smooth results.
- **360° Rotating Cord:** Prevents tangling and allows for flexible styling from any angle.
- **Dual Voltage (100-240V):** Compatible for worldwide use without a converter, making it travel-friendly.

Salon Style • Easy at Home

Beginner-Friendly No Skill Needed



Figure 9: The 360° rotating cord for tangle-free use.

MAINTENANCE AND CARE

- **Cleaning:** Ensure the styler is unplugged and completely cool before cleaning. Wipe the main unit and attachments with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the styler and its attachments in the provided protective hard case in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Not properly plugged in; ALCI plug tripped.	Ensure the plug is fully inserted into the outlet. Press the "Reset" button on the ALCI plug.

Problem	Possible Cause	Solution
Attachments are difficult to connect/remove.	Incorrect alignment; release button not pressed.	Align the attachment correctly and ensure the release button is pressed when removing.
Hair is not styling effectively.	Incorrect heat/speed setting; hair too wet/dry.	Adjust heat/speed settings according to hair type. Ensure hair is damp (not soaking wet) for most styling, or dry for straightening/curling.

SPECIFICATIONS

Feature	Detail
Model Number	F9E
Output Power	AC 100–240V, 50/60Hz
Rated Power	1400W (±10% tolerance)
Temperature Range	104°F–212°F
Motor Speed	110,000 RPM
Product Dimensions	11.81 x 2.36 x 2.36 inches
Item Weight	3.3 Pounds
Material	Glass (likely referring to ceramic coating or internal components)

WARRANTY AND SUPPORT

webeauty offers a **100-Day Quality Guaranteed** policy, which includes a 100-Day Free Replacement. This commitment ensures customer satisfaction and provides peace of mind regarding the product’s quality and performance. For further assistance or inquiries, please refer to the contact information provided in your product packaging or visit the official webeauty website.

LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question