

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PZL](#) /

› [PZL Universal Replacement Remote Control for Treadmills User Manual](#)

PZL Universal Replacement Remote Control

PZL Universal Replacement Remote Control for Treadmills User Manual

Model: Universal Replacement Remote Control

Brand: PZL

1. PRODUCT OVERVIEW

This PZL replacement remote control is designed to operate various walking pad and under-desk treadmill models. It serves as a direct replacement or backup for your original remote, ensuring continued functionality of your fitness equipment.

Compatible Treadmill Models:

- GOYOUTH Under Desk Treadmill JK31-9
- Redliro SL-Q20, Y-08, JK1608P, JK04W, JK04W-T, JK30H-9
- CIIHI C Folding Treadmill JK02F



Image 1: PZL Replacement Remote Control. This image shows the front view of the black remote control with its buttons.

2. PACKAGE CONTENTS

The package includes:

- 1 x IR Remote Control

Note: Batteries and additional instructions are not included in the package. Please refer to this manual for usage details.

3. SETUP: BATTERY INSTALLATION

The remote control requires two 1.5V AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image 2: Rear view of the remote control showing the battery compartment open and two AAA batteries being inserted.

4. OPERATING INSTRUCTIONS

4.1 Pairing the Remote Control

To establish a connection between the remote control and your treadmill, follow these pairing instructions:

- Press and hold the "Mute" and "Reset" keys simultaneously for 3 seconds.
- Alternatively, press and hold the "M" and "-" keys simultaneously for 3 seconds.
- The indicator light on the remote control will stay on for 10 seconds, signaling that it is sending the pairing signal. During this time, ensure your treadmill is powered on and within range for successful pairing.

4.2 Canceling Pairing

If you need to unpair the remote control from your treadmill, follow these steps:

- Press and hold the "M" key and the "+" key simultaneously for 3 seconds.
- The indicator light on the remote control will remain on for 10 seconds, indicating that the pairing cancellation signal is being sent.



Image 3: The PZL remote control being held in hand, with a treadmill visible in the background, illustrating its operational use.

Your browser does not support the video tag.

Video 1: Demonstration of the Treadmill Remote Control Replacement. This video shows the remote control being used to operate a walking pad, including starting and adjusting speed.

Your browser does not support the video tag.

Video 2: Walking Pad Remote Replacement Compatible with Model AD-4000. This video demonstrates the remote control's functionality and compatibility with a specific treadmill model.

5. SPECIFICATIONS

Feature	Detail
Brand	PZL
Color	Black
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (paired device)
Compatible Devices	Walking Pads / Treadmills (specific models listed in Product Overview)
Package Dimensions	1.5 x 1 x 0.6 inches
Item Weight	1.92 ounces

6. TROUBLESHOOTING

If your remote control is not functioning as expected, consider the following:

- **Check Batteries:** Ensure that fresh AAA batteries are correctly installed with the proper polarity.
- **Re-pair the Remote:** Follow the pairing instructions in Section 4.1 to re-establish the connection with your treadmill.
- **Clear Obstructions:** Ensure there are no physical obstructions between the remote control and the treadmill's receiver.
- **Treadmill Power:** Verify that your treadmill is powered on and in an operational state.

7. SUPPORT

For any questions regarding your order or specific treadmill model compatibility, PZL provides timely customer service. Please contact us for assistance within 24 hours of your inquiry.