

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE DC106 Digital Camera Instruction Manual

WONNIE DC106

WONNIE DC106 Digital Camera Instruction Manual

Model: DC106

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your WONNIE DC106 Digital Camera. Designed for ease of use, this compact camera captures FHD 1080P videos and vivid 56MP photos, making it ideal for beginners and young users. Please read this manual thoroughly before operating the camera to ensure optimal performance and longevity.



 
The WONNIE DC106 Digital Camera, a compact device for capturing photos and videos.

2. WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- WONNIE DC106 Digital Camera
- 32GB SD Card
- 2 Rechargeable 1000mAh Batteries
- Type-C USB Cable
- Lanyard
- Camera Bag
- Quick Start Guide

More Function

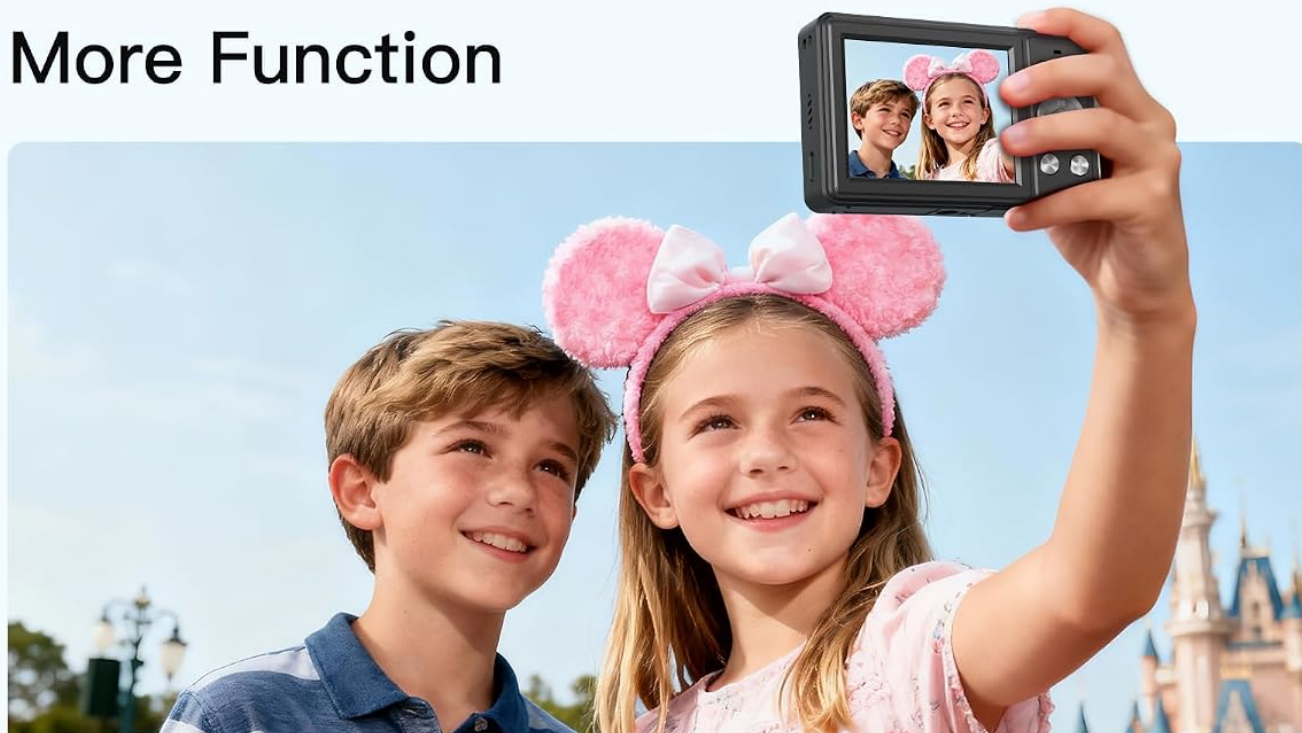

Self-Timer 2s 5s 10s



Face Detect



Auto Power Off Off, 1 min, 3 min, 5 min



Scene Mode 7 scenes to choose

All components included with your WONNIE DC106 Digital Camera.

Familiarize yourself with the camera's physical features and controls.

Detailed diagram of the camera's buttons and ports.

4. SETUP

4.1. Battery Installation and Charging

The camera comes with two rechargeable 1000mAh batteries. Ensure at least one battery is charged before use.

1. Open the battery cover located on the side of the camera.
2. Insert a charged battery into the compartment, ensuring the metal contacts align. The battery is designed with a notch to prevent incorrect insertion.
3. Close the battery cover securely.
4. To charge, connect the camera to a power source using the provided Type-C USB cable. The indicator light will show charging status. A steady bright red light indicates charging, while a dim, flickering light indicates an issue.

Easy Battery Installation & Charging Tips



Step 1: Open battery cover.



Step 2: Insert battery (metal side)

INSTALLING THE BATTERY



Correct: Bright red, steady



Wrong: Dim red, flickering

CHARGING LIGHT STATUS

Steps for battery installation and charging status indicators.

4.2. SD Card Insertion

A 32GB SD card is included for storage. Insert it into the designated slot next to the battery compartment until it clicks into place.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **Power On:** Press and hold the power button for 1 second.
- **Power Off:** Press and hold the power button for 1 second. The camera will also automatically shut down after a preset period of inactivity to conserve battery.

5.2. Taking Photos

The camera captures 56MP photos with natural color and clear details.


- **Shutter Button:** Press the shutter button to take a photo.
- **16X Digital Zoom:** Use the W/T buttons to zoom in or out on your subject.
- **Anti-Shake:** This feature helps stabilize your shots, reducing blur from camera movement.
- **Face Detection:** The camera can automatically detect and focus on faces.
- **Self-Timer:** Set a delay (2s, 5s, or 10s) before taking a photo, useful for group shots or selfies.
- **Filters:** Explore 20 fun filters to add artistic effects to your photos.
- **Scene Modes:** Choose from 7 scene modes (e.g., Auto, Scenery, Portrait, Night Portrait, High Sensitivity, Beach) to optimize settings for different environments.
- **Built-in Flash:** Use the flash for bright and clear photos in low-light conditions.



Self Timer



Utilize 16X digital zoom to capture distant subjects.

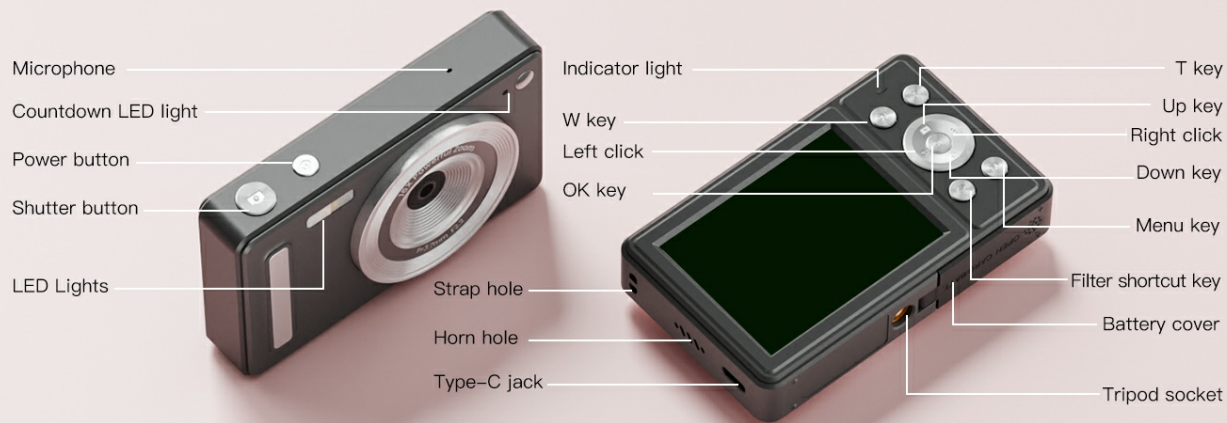

Get to Know Your Camera

The anti-shake function helps keep your photos clear and sharp.



Set the self-timer for convenient photo capture.



Select from various scene modes to enhance your photos.

5.3. Recording Videos

Capture smooth FHD 1080P videos.

- Switch to video mode using the mode button.
- Press the shutter button to start and stop recording.



Record full HD 1080P videos to capture life in motion.

5.4. Viewing and Deleting Content

Use the navigation buttons to browse through your photos and videos. The menu button allows you to delete individual items or all content.

6. CONNECTING TO A COMPUTER

The camera can be connected to a computer for file transfer or used as a webcam.

- **File Transfer:** Connect the camera to your computer using the Type-C USB cable. The camera will appear as a removable disk, allowing you to easily transfer photos and videos.

- **Webcam Function:** When connected to a computer, the camera can be selected as a webcam for live streaming or video calls.




Built-in Flash Light

Capture bright and clear photos, even in low light.

Easily transfer files to your computer using the included USB-C cable.

Anti-Shake Function

Keeps your shots clear and sharp, even when you're on the move.

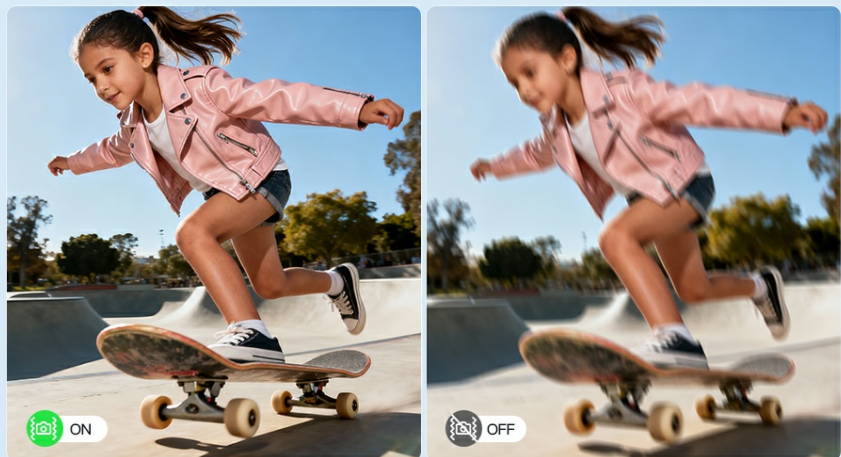

Use the camera for webcam live streaming or video calls.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution.
- **Battery Care:** To prolong battery life, fully charge the batteries before first use and store them in a cool, dry place when not in use. The auto power-off function helps conserve battery during idle periods.
- **Storage:** Store the camera in its protective bag when not in use to prevent scratches and damage.

8. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

Problem	Solution
Camera does not power on	Ensure the battery is correctly inserted and fully charged.
Cannot take photos/videos	Check if the SD card is inserted correctly and has sufficient free space. Ensure the battery has enough charge.
Images are blurry	Ensure the anti-shake function is enabled. Hold the camera steady while shooting. Check lighting conditions.
Camera freezes	Remove and reinsert the battery to reset the camera.
Files not transferring to computer	Ensure the Type-C USB cable is securely connected to both the camera and the computer. Try a different USB port or cable.

9. SPECIFICATIONS

Detailed technical specifications for the WONNIE DC106 Digital Camera:

Feature	Specification
Model Name	DC106
Photo Sensor Resolution	56 MP
Video Resolution	1080p FHD
Digital Zoom	16x
Screen Size	2.8 Inches LCD
Image Stabilization	Digital
Storage Media	Micro SD Card (up to 128GB, 32GB included)
Battery Type	Rechargeable 1000mAh (2 included)
Connectivity	USB Type-C
Special Features	Self-Timer, Face Detection, Anti-Shake, Multiple Filters, Scene Modes
Item Weight	0.23 Kilograms
Supported File Format	JPEG (Image), AVI (Video)

10. WARRANTY AND SUPPORT

Your WONNIE DC106 Digital Camera comes with a 1-year warranty. For any product-related inquiries, technical assistance, or warranty claims, please contact our professional after-sales support team. Refer to the contact information provided in your Quick Start Guide or visit the official WONNIE website for support details.

11. OFFICIAL PRODUCT VIDEO

Watch this video for an overview of the WONNIE DC106 Digital Camera's features and capabilities.

Video: Digital Camera FHD1080P. This video provides a visual demonstration of the camera's key functions and design.

© 2026 WONNIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question